

OxiClean 5703795051

OxiClean Washing Machine Cleaner with Odor Blasters User Manual

Model: 5703795051

PRODUCT OVERVIEW

OxiClean Washing Machine Cleaner with Odor Blasters is designed to help remove odor-causing residues from your washing machine. Over time, residues can build up in washing machines, leading to unpleasant odors that may transfer to your laundry. This product combines the cleaning power of OxiClean with Odor Blasters to clean the machine, eliminate odors, and maintain freshness.

**HELPS REMOVE
ODOR-CAUSING RESIDUES
IN ANY WASHER**

**FOR ALL MACHINES
INCLUDING**



**OXI
CLEAN**

WASHING MACHINE CLEANER

4 POUCHES

WITH ODOR BLASTERS™

**WARNING: INJURIOUS TO EYES.
HARMFUL IF SWALLOWED.
READ WARNINGS ON SIDE PANEL.**

**4 POUCHES -
NET WT. 2.82 OZ
(79.9 g) EACH,
TOTAL 11.28 OZ (319 g)**



Image: OxiClean Washing Machine Cleaner with Odor Blasters product packaging.

The cleaner comes in pre-measured, easy-to-use pouches, suitable for both High-Efficiency (HE) and standard washing machines. Regular use helps prevent residue buildup and keeps your washing machine clean and fresh-smelling.

SAFE FOR SEPTIC TANKS

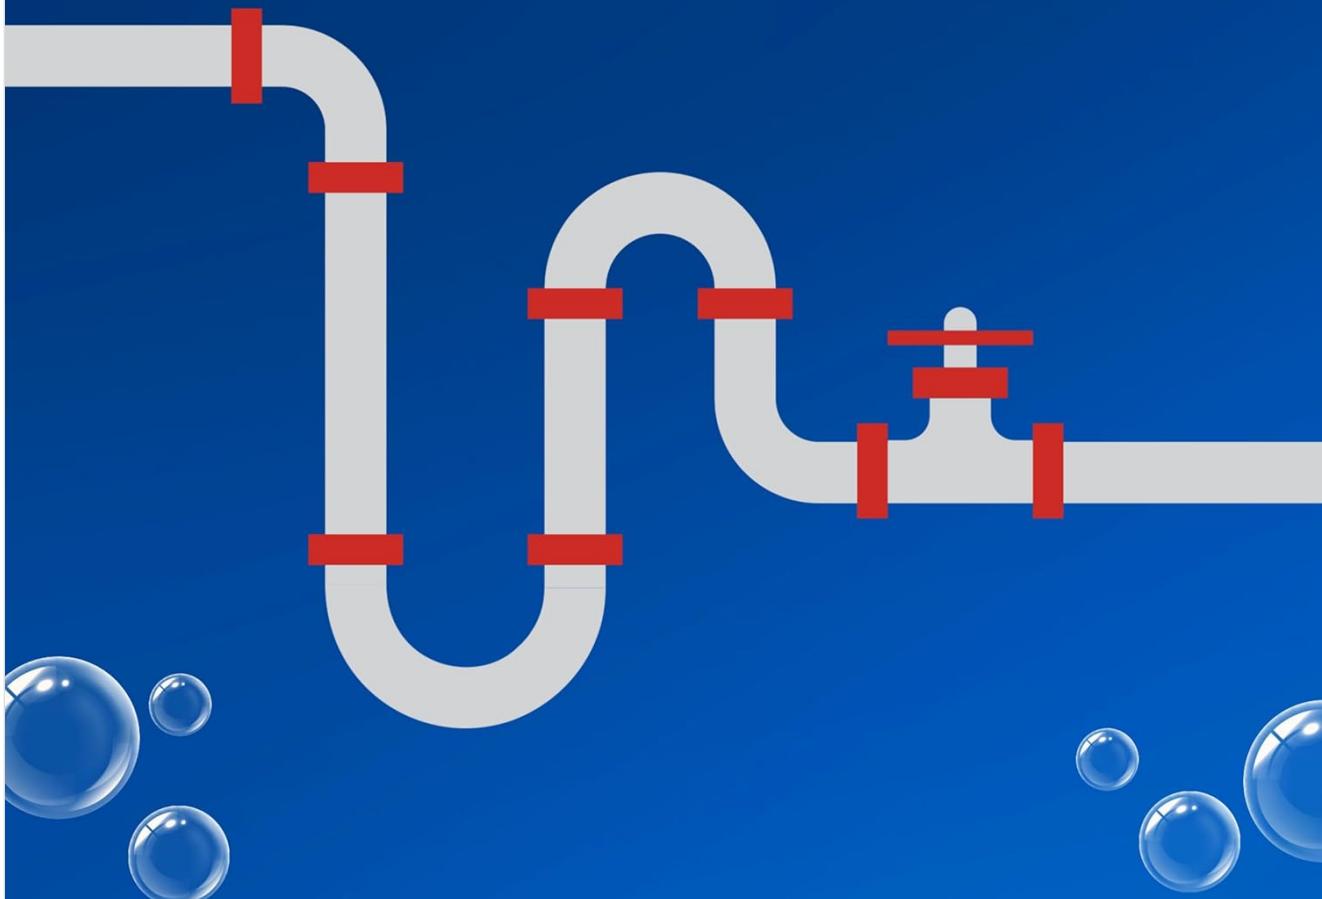


Image: Interior of a washing machine drum, demonstrating the product's action in removing odor-causing residues.



WORKS IN REGULAR & HE WASHERS

Image: Close-up view of the easy-tear pouches of OxiClean Washing Machine Cleaner.

SAFETY INFORMATION

WARNING: Keep out of reach of children. Injurious to eyes. Harmful if swallowed. Avoid powder or solution contact with eyes and prolonged skin contact (wear gloves).

First Aid Measures:

- **EYE CONTACT:** Flush with water for 15 minutes; seek medical attention immediately.
- **IF SWALLOWED:** Drink a glass of water; do not induce vomiting; seek medical attention immediately.
- **SKIN CONTACT:** Rinse skin thoroughly with water. Do not mix with products containing ammonia, chlorine bleach, or with other household chemicals.

This product is safe for septic tanks and contains no phosphates.

**USE MONTHLY TO
HELP KEEP MACHINE CLEAN!**

OxiClean™ Washing Machine Cleaner
helps remove odor causing
residues in any washer.

IF ODOR PROBLEM OR VISIBLE RESIDUE ALREADY EXISTS:

Use 1 pouch per week for 3 consecutive weeks following the instructions below. Then continue to use 1 pouch per month for maintenance.

DIRECTIONS FOR USE

- 1 For all machines, remove clothing or other items from the washer.
- 2 Tear one pouch of OxiClean™ Washing Machine Cleaner, and pour into the washer drum. Note: Do not add any detergent to this cycle.



- 3 Select the Clean Washer Cycle. Note: If washer does not have Clean Washer Cycle, add OxiClean™ Washing Machine Cleaner to drum and run a normal cycle using hot water.

- 4 Start the machine.
- 5 After cycle is complete, wipe any residue that may be left behind with a towel, including on drum, door, rubber gaskets, and seals. Leave the door open to allow better ventilation.

FOR MAINTENANCE:



Use 1 pouch once a month to help keep your washing machine clean.

TIPS TO KEEP MACHINE FRESH:

- Always remove items from washer as soon as the cycle ends.
- After washer cycle is complete, leave door open to allow better ventilation.
- Use only HE compatible detergents

- in HE washers.
- Leave the dispenser drawer open at the end of washer use.

Image: Detailed safety warnings and contact information as printed on the product packaging.

CLEAN YOUR WASHER in 4 Simple Steps



1

REMOVE
items from washer



2

TEAR POUCH
& ADD
to empty drum



3

RUN
Clean Washer Cycle
or regular hot cycle



4

WIPE
away any
residue

Image: Visual confirmation that the product is safe for septic tanks.

INGREDIENTS

The primary ingredients in OxiClean Washing Machine Cleaner with Odor Blasters are:

- Disodium carbonate
- Sodium percarbonate

Other ingredients may include sodium carbonate peroxide, C12-16 pareth, fragrances, sodium chloride, colorants, and acrylic acid homopolymer. Contains fragrance allergens.



WORKS IN REGULAR & HE WASHERS

Image: Side panel of the product box detailing ingredients and usage instructions.

DIRECTIONS FOR USE

Follow these steps for effective cleaning of your washing machine:

- 1. Remove Items:** Ensure your washing machine is empty. Remove all clothing or other items from the washer drum.
- 2. Add Cleaner:** Tear one pouch of OxiClean Washing Machine Cleaner and pour its contents directly into the empty washer drum. *Do not add any laundry detergent to this cycle.*
- 3. Select Cycle:**
 - If your washer has a "Clean Washer Cycle," select and run this cycle.
 - If your washer does not have a dedicated "Clean Washer Cycle," run a normal hot water cycle.
- 4. Start Machine:** Begin the selected wash cycle.
- 5. Wipe Residue:** After the cycle is complete, wipe away any remaining residue that may be left behind with a towel. Pay attention to the drum, door, rubber gaskets, and seals. Leave the washing machine door open to

allow for better ventilation and drying.



HELPS REMOVE ODOR-CAUSING RESIDUES

In Any Washer

Image: Visual guide illustrating the 4 simple steps to clean your washer.

SAFE FOR SEPTIC TANKS • CONTAINS NO PHOSPHATES

WARNING: KEEP OUT OF REACH OF CHILDREN. Injurious to eyes. Harmful if swallowed. Avoid powder or solution contact with eyes and prolonged skin contact (wear gloves). **EYE CONTACT:** Flush with water for 15 minutes; seek medical attention immediately. **IF SWALLOWED:** Drink a glass of water; do not induce vomiting; seek medical attention immediately. **SKIN CONTACT:** Rinse skin thoroughly with water. Do not mix with products containing ammonia, chlorine bleach, or with other household chemicals.

Questions? Call toll-free 1-800-781-7529
Monday-Friday 9AM-5PM ET or visit our website OxiClean.com.
Manufactured for Church & Dwight Co., Inc., Ewing, NJ 08628

Image: Confirmation that the product is compatible with both regular and HE washing machines.

MAINTENANCE

To maintain a clean and fresh-smelling washing machine, follow these guidelines:

- **Regular Maintenance:** Use one pouch of OxiClean Washing Machine Cleaner once a month to help keep your washing machine clean and prevent odor-causing residues from building up.
- **For Existing Odors/Residue:** If you are dealing with existing odors or visible residue, use one pouch per week for three consecutive weeks. After this initial treatment period, revert to monthly use for maintenance.

EASY-TEAR POUCHES



Image: Calendar graphic illustrating the recommended monthly usage for maintenance.

Tips to Keep Machine Fresh:

- Always remove items from the washer as soon as the cycle ends.
- After the wash cycle is complete, leave the washer door open to allow for better ventilation and drying.
- Use only HE compatible detergents in HE washers.
- Leave the detergent dispenser drawer open at the end of washer use to allow it to dry.

TROUBLESHOOTING

If you encounter issues or have questions regarding the use of OxiClean Washing Machine Cleaner, consider the following:

- **Product Clumping in Dispenser:** This product is a powder cleaner designed to be poured directly into the washer drum, not into the liquid detergent dispenser. If placed in the dispenser, it may clump and not dissolve properly. Always add the pouch contents directly to the empty drum.
- **Lingering Odors After First Use:** For machines with significant existing odor or residue buildup, a single

treatment may not be sufficient. It is recommended to use one pouch per week for three consecutive weeks, then switch to monthly maintenance.

- **White Marks/Residue After Cleaning:** After the cleaning cycle, it is important to wipe away any remaining residue from the drum, door, gaskets, and seals with a towel. This ensures all loosened buildup is removed.
- **General Effectiveness:** If your washing machine continues to have a musty smell or your clothes are not smelling fresh, ensure you are following the directions precisely, especially regarding the cycle type (hot water cycle or Clean Washer Cycle) and regular maintenance schedule.

SPECIFICATIONS

Feature	Detail
Product Name	OxiClean Washing Machine Cleaner with Odor Blasters
Item Model Number	5703795051
Brand	OxiClean
Item Form	Powder (in pre-measured pouches)
Scent	Odor Blaster
Count	4 Count (pouches)
Net Weight	11.28 oz (319 g) total (2.82 oz / 79.9 g per pouch)
Product Dimensions	1.88 x 3.63 x 6.63 inches (packaging)
Compatibility	Standard and HE (High-Efficiency) washing machines
Septic Safe	Yes
Manufacturer	Church & Dwight

SUPPORT

For questions or further assistance with your OxiClean Washing Machine Cleaner, please contact customer support:

- **Toll-Free Number:** 1-800-781-7529
- **Operating Hours:** Monday - Friday, 9:00 AM - 5:00 PM ET
- **Website:** OxiClean.com

Manufactured for Church & Dwight Co., Inc., Ewing, NJ 08628.