

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WALI](#) /

› [WALI CS202B Floating 2-Shelf Entertainment Center Instruction Manual](#)

WALI CS202B

WALI CS202B Floating 2-Shelf Entertainment Center Instruction Manual

Brand: WALI | Model: CS202B

INTRODUCTION

Thank you for choosing the WALI CS202B Floating 2-Shelf Entertainment Center. This wall-mounted shelf system is designed to provide a sleek and space-saving solution for organizing your media devices and accessories. Featuring strengthened tempered glass shelves, it offers a secure and elegant platform for items such as DVD players, cable boxes, game consoles, and more. This manual provides detailed instructions for safe installation, operation, and maintenance of your new entertainment center.

IMPORTANT SAFETY INFORMATION

WARNING: Ensure proper installation and do not exceed the maximum weight limit to prevent potential hazards.

Read all instructions carefully before assembly and use. If you have any questions, please contact customer support.

- Do not exceed the maximum weight capacity of 17.6 lbs (8 kg) per shelf.
- Ensure the mounting surface can safely support the combined weight of the shelf and all attached equipment.
- Use appropriate mounting hardware for your wall type (wood stud or concrete).
- Keep children and pets away from the installation area during assembly.
- Periodically check all screws and connections to ensure they remain tight and secure.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or defective, please contact WALI customer support.



Image: All components included in the WALI CS202B package. This includes the wall plate, two glass shelves, two glass holders, two connect pieces, two plastic covers, two plastic bushes, six bolts, four ST5.5x50 screws, a 3mm allen key, and four concrete anchors.

- 1 x Wall Plate
- 2 x Strengthened Tempered Glass Shelves (15 inch x 11 inch x 4mm thick)
- 2 x Glass Holders
- 2 x Connect Pieces
- 2 x Plastic Covers
- 2 x Plastic Bushes
- 6 x Bolts
- 4 x ST5.5x50 Screws
- 1 x 3mm Allen Key
- 4 x Concrete Anchors
- User Manual

SPECIFICATIONS

Brand	WALI
Model Name	WALI Double Wall Mounted Floating Shelves (CS202B)
Number of Shelves	2
Shelf Material	Strengthened Tempered Glass
Shelf Dimensions (Each)	15 inches (W) x 11 inches (D) x 0.16 inches (4mm) thick
Maximum Weight Capacity (Per Shelf)	17.6 lbs (8 kg)
Mounting Type	Wall Mount
Wall Plate Width	3 inches
Color	Glass Black
Special Feature	Space Saving, Adjustable Height, Cable Management
Product Dimensions	11"D x 15"W x 15.7"H



Adjustable Height:

Each shelf can be adjusted up and down on the back plate.



Image: Detailed product dimensions for the WALI CS202B floating shelf, indicating a width of 15 inches, depth of 11 inches, and a total height of 15.7 inches for the two-shelf model. Each glass shelf is 0.16 inches thick.

SETUP & INSTALLATION

Follow these steps carefully to install your WALI CS202B Floating 2-Shelf Entertainment Center.

Step 1: Prepare the Wall Plate

Position the wall plate on your desired location on the wall. Use a level to ensure it is perfectly straight. Mark the drilling points through the holes on the wall plate.

Your browser does not support the video tag.

Video: This video demonstrates the installation process for the WALI Floating Entertainment Center Shelves (CS202B), showing how to mount the wall plate and attach the glass shelves. It highlights the adjustable height feature and cable management system.

Step 2: Drill Holes and Mount Wall Plate

Depending on your wall type, use the appropriate drilling method:

- **For Wood Stud:** Drill pilot holes at the marked locations. Secure the wall plate using the provided ST5.5x50 screws.
- **For Concrete Wall:** Drill holes using a masonry drill bit. Insert the concrete anchors into the drilled holes. Secure the wall plate using the provided ST5.5x50 screws into the anchors.

Step 3: Attach Glass Holders

Slide the glass holders onto the wall plate. The height of each holder can be adjusted by loosening the bolts with the 3mm Allen key, moving the holder to the desired position, and then tightening the bolts securely. Ensure both holders are at the same height for a level shelf.



Image: This diagram illustrates how each shelf's height can be adjusted up and down along the wall plate. The anti-skid pads on the glass holders are also visible, ensuring stability for your devices.

Step 4: Install Glass Shelves

Carefully place each tempered glass shelf onto its respective glass holders. Ensure the shelves are seated firmly and evenly. The plastic bushes can be placed between the glass and the metal holders to prevent scratching and provide additional stability.

Step 5: Cable Management

Utilize the built-in cable management system on the wall plate to route and conceal your device cables. This helps maintain a clean and organized appearance.

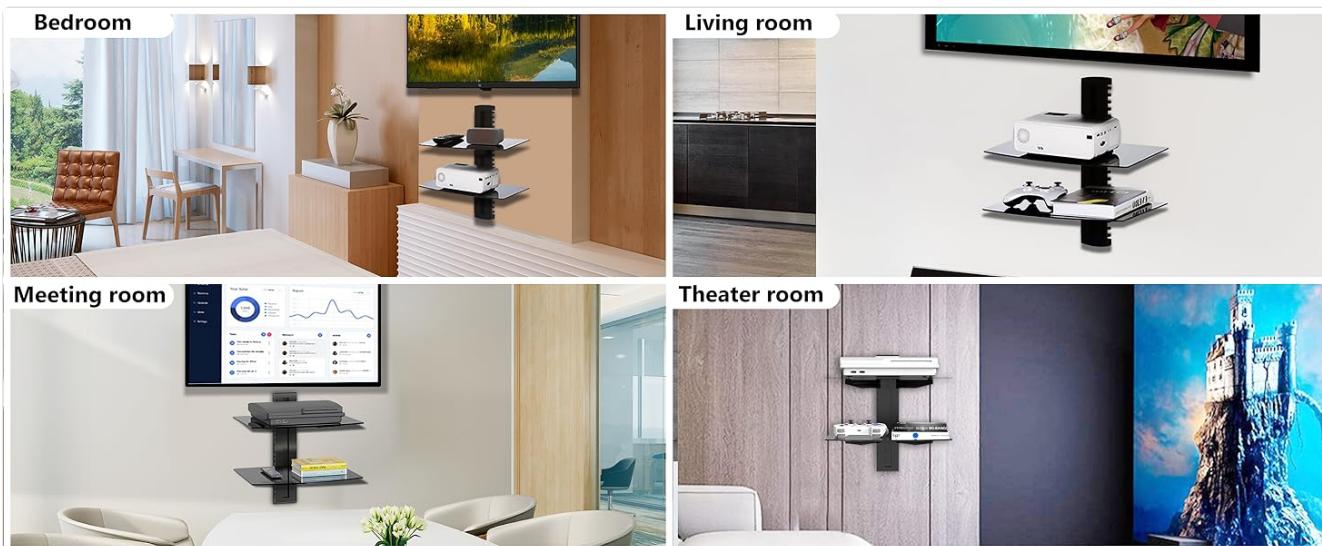


Image: This diagram highlights the cable management system integrated into the wall plate, showing how cables can be neatly routed through the central channel to hide them from view.

OPERATING INSTRUCTIONS

Once installed, your WALI CS202B Floating 2-Shelf Entertainment Center is ready for use. Place your DVD players, cable boxes, game consoles, or other media accessories on the tempered glass shelves. Ensure that the weight of each item does not exceed the 17.6 lbs (8 kg) per shelf limit. Distribute weight evenly on the shelves for optimal stability.

MAINTENANCE

To keep your WALI CS202B shelf in excellent condition:

- Cleaning:** Wipe the glass shelves and metal components with a dry, soft cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- Inspection:** Periodically check all mounting screws and shelf connections to ensure they are secure. Tighten any loose fasteners as needed.
- Weight Limit:** Always adhere to the maximum weight capacity to prevent damage or injury.

TROUBLESHOOTING

If you encounter any issues with your WALI CS202B shelf, refer to the following common solutions:

- **Shelf feels unstable:**

- Ensure all mounting screws are securely tightened to the wall.
- Verify that the glass holders are firmly attached to the wall plate and their bolts are tightened.
- Check that the weight on the shelf does not exceed 17.6 lbs (8 kg) and is evenly distributed.

- **Cables are visible and messy:**

- Utilize the integrated cable management channel on the wall plate to route cables.
- Consider using cable ties or clips to further organize cables behind the wall plate.

- **Scratches on glass shelves:**

- Ensure the plastic bushes are correctly placed between the glass and metal holders during assembly.
- Avoid dragging items across the glass surface.

CUSTOMER SUPPORT

WALI offers experienced and friendly US-based customer support available to assist 7 days a week. For any questions, concerns, or assistance, please refer to the contact information provided in your product packaging or visit the official WALI website.