



[Manuals.plus](#) /

> [IKEA](#) /

> [IKEA Lack TV Stand Instruction Manual](#)

IKEA 902.432.97

IKEA Lack TV Stand Instruction Manual

Model: 902.432.97 | Brand: IKEA

INTRODUCTION

Welcome to the instruction manual for your new IKEA Lack TV Stand. This manual provides essential information for the assembly, proper use, care, and maintenance of your furniture. Please read through these instructions carefully before beginning assembly or use to ensure safe and optimal performance.

PRODUCT OVERVIEW

The IKEA Lack TV Stand is a versatile and minimalist furniture piece designed to complement various living spaces. It features a sturdy top surface and an additional shelf for storage or display. Its compact design makes it suitable for smaller areas while providing ample support for your television and media devices.

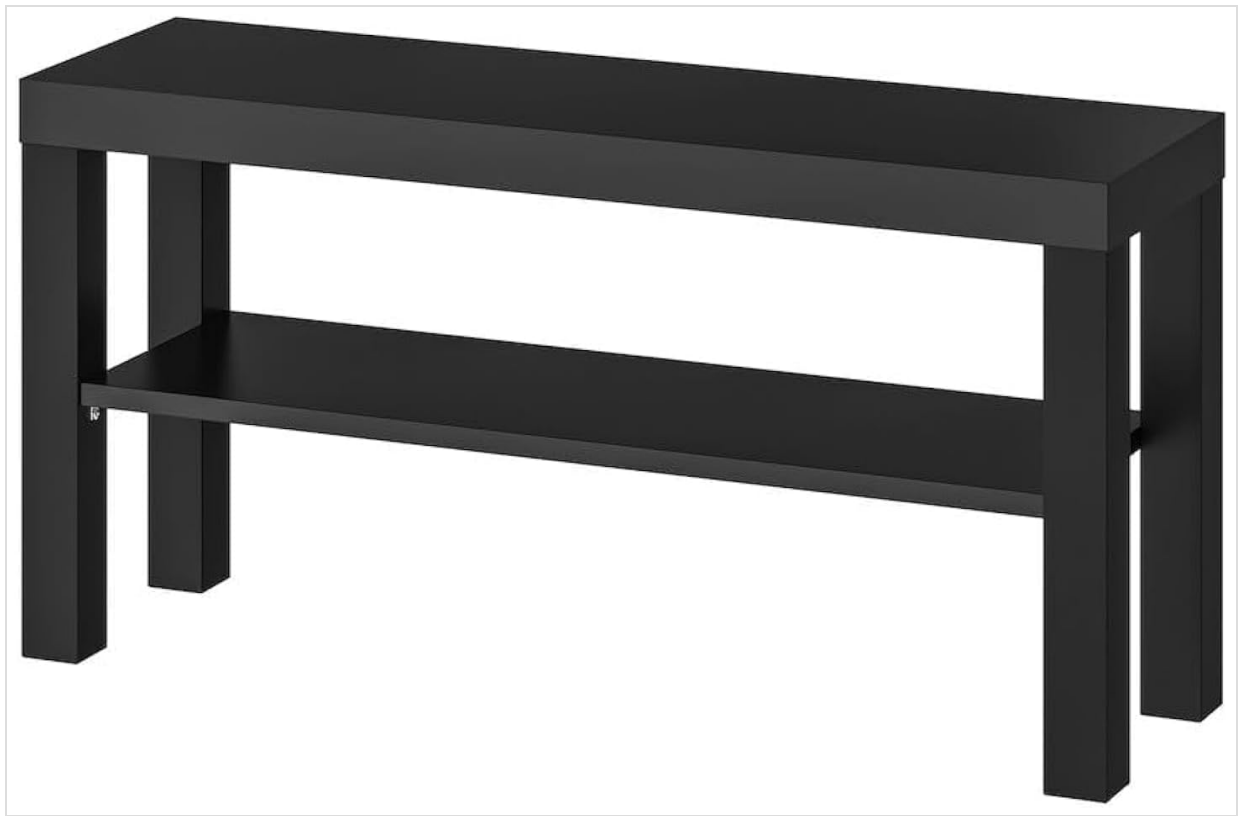


Image: The IKEA Lack TV Stand, showcasing its two-tier design and black finish.

Materials: The stand is constructed from particleboard, fiberboard, paper, and ABS plastic. The surfaces are finished with acrylic paint and melamine foil for durability and ease of cleaning.

ASSEMBLY INSTRUCTIONS

This product requires assembly. Please follow the steps below carefully. It is recommended to have a second person assist with assembly for stability and ease.

- 1. Unpack Components:** Carefully unpack all parts and hardware from the packaging. Verify that all components listed in the included assembly guide are present.
- 2. Prepare Workspace:** Choose a clean, flat, and spacious area for assembly to prevent damage to the furniture or flooring.
- 3. Attach Legs:** Securely attach the four legs to the main top panel using the provided hardware. Ensure all connections are tight and stable.
- 4. Install Shelf:** Position and secure the lower shelf between the legs according to the assembly diagram.
- 5. Final Check:** Once assembled, gently lift and move the stand to its desired location. Ensure it is level and stable before placing any items on it.

For detailed visual instructions, please refer to the assembly diagrams provided in your product packaging.

USAGE GUIDELINES

- **Weight Capacity:** The maximum load for the shelf is 22 lb 1 oz (10 kg). The maximum load for the TV is 66 lb 2 oz (30 kg). Do not exceed these weight limits to prevent damage or injury.
- **TV Compatibility:** Ensure the depth and width of your TV-set are less than those of the TV furniture to ensure proper fit and stability.
- **Wire Management:** An opening at the back of the stand allows for easy gathering and organization of all wires, helping to maintain a tidy appearance and prevent tangles.
- **Stability:** For added safety, especially in households with children, consider anchoring the TV stand to the wall using appropriate wall fasteners (sold separately if not included).

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your Lack TV Stand:

- **Cleaning:** Wipe clean using a damp cloth and a mild cleaner. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Drying:** Always wipe dry with a clean cloth immediately after cleaning to prevent moisture damage.
- **Spills:** Promptly clean up any spills to prevent staining or damage to the particleboard and fiberboard materials.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the finish over time.

PRODUCT SPECIFICATIONS

Brand	IKEA
Model Number	902.432.97
Color	Black
Dimensions (L x W x H)	35.5 x 10.25 x 17.75 inches (90 x 26 x 45 cm)
Item Weight	8.8 ounces (0.25 kg)
Max Load / Shelf	22 lb 1 oz (10 kg)
Max Load / TV	66 lb 2 oz (30 kg)
Material	Particleboard, Fiberboard, Paper, ABS plastic, Acrylic paint, Melamine foil
Assembly Required	Yes

TROUBLESHOOTING

- **Wobbly Stand:** Ensure all screws and fasteners are tightened securely. If the floor is uneven, use furniture pads or shims under the legs to stabilize the stand.
- **Missing Parts:** If any parts are missing upon unpacking, please contact IKEA customer service with your product model number and a description of the missing components.
- **Surface Scratches/Dents:** Minor scratches can sometimes be touched up with a matching furniture marker. For deeper damage, consider contacting a furniture repair specialist.

WARRANTY AND SUPPORT

For information regarding warranty coverage, product returns, or additional support, please refer to the official IKEA website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Online Support: www.ikea.com