

SUMMIT TEM210BRWY

SUMMIT TEM210BRWY 30-inch Slide-in Electric Range User Manual

Model: TEM210BRWY | Brand: SUMMIT

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your SUMMIT TEM210BRWY 30-inch Slide-in Electric Range. Please read this manual thoroughly before using the appliance and retain it for future reference.



Front view of the SUMMIT TEM210BRWY 30-inch slide-in electric range, showcasing its stainless steel oven door, lower storage compartment, and black porcelain cooktop with four coil elements and control knobs.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this appliance to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before using the appliance.
- Ensure proper installation and grounding by a qualified technician.
- Do not touch hot surfaces. Use oven mitts or pot holders.
- Never use the appliance for warming or heating the room.
- Do not store flammable materials in or near the oven.
- Keep children away from the appliance during operation.
- Clean the range regularly to prevent grease fires.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the range for any shipping damage. Report any damage immediately to the retailer.

3.2 Location Requirements

The SUMMIT TEM210BRWY is a 30-inch wide slide-in electric range designed to fit common kitchen spaces. Ensure adequate clearance around the appliance as specified in the installation guide (not included in this manual, refer to separate installation instructions for detailed diagrams and measurements).

3.3 Electrical Connection

This appliance requires a 220V electrical supply. All electrical connections must be performed by a qualified electrician in accordance with local codes and ordinances. Ensure the appliance is properly grounded.

3.4 Anti-Tip Bracket Installation

For safety, an anti-tip bracket must be installed. This device prevents the range from tipping forward. Refer to the separate installation instructions for details on how to properly install the anti-tip bracket.

4. OPERATING INSTRUCTIONS

4.1 Cooktop Operation

The range features four coil elements on a black porcelain cooktop. Each element is controlled by a dedicated knob located on the front panel.

1. Place cookware flat on the desired coil element.
2. Turn the corresponding control knob clockwise to the desired heat setting (e.g., LOW, MEDIUM, HIGH).
3. The element will heat up. Adjust the knob as needed for cooking.
4. After cooking, turn the knob counter-clockwise to the OFF position. The element will cool down gradually.

Caution: Cooktop elements remain hot for a period after being turned off. Avoid touching them until they have cooled completely.

4.2 Oven Operation

The oven features a clear window and light for monitoring cooking progress. Oven controls are located on the front panel.

1. Ensure oven racks are in the desired position before preheating.
2. Turn the oven control knob to the desired temperature setting.

3. Allow the oven to preheat to the set temperature. An indicator light may signal when the oven is preheated.
4. Place food inside the oven.
5. To activate the oven light, use the dedicated light switch/button (if available, refer to control panel markings).
6. After cooking, turn the oven control knob to the OFF position.

Warning: The oven door and interior surfaces become very hot during operation. Use caution when opening the door and removing food.

4.3 Storage Compartment

A lower storage compartment is provided for pots and pans. Do not store flammable items or plastics in this compartment.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your range. Always ensure the appliance is cool and disconnected from power before cleaning.

5.1 Cooktop Cleaning

- Allow coil elements to cool completely.
- The black porcelain construction is easy to clean. Wipe spills immediately with a damp cloth and mild detergent.
- For stubborn stains, use a non-abrasive cleaner specifically designed for porcelain surfaces.
- Removable drip pans under the coil elements should be cleaned regularly.

5.2 Oven Cleaning

- Remove oven racks before cleaning.
- Wipe the interior with a damp cloth and mild soap. For baked-on spills, use an oven cleaner according to the product instructions.
- Clean the oven door glass with a glass cleaner or a mixture of vinegar and water.

5.3 Exterior Cleaning

- The stainless steel oven door and kickplate should be cleaned with a stainless steel cleaner or a soft cloth dampened with warm, soapy water.
- Wipe in the direction of the grain to avoid streaks.
- Avoid abrasive cleaners or scouring pads that can scratch the stainless steel finish.

6. TROUBLESHOOTING

Before contacting service, review the following common issues and their potential solutions.

Problem	Possible Cause	Solution
Range does not operate.	No power supply.	Check circuit breaker or fuse box. Ensure the range is properly plugged in.
Cooktop element not heating.	Element not properly seated or faulty.	Ensure the element is fully seated. If issue persists, contact service.
Oven not heating.	Incorrect temperature setting or faulty element.	Verify temperature setting. Allow sufficient preheat time. If issue persists, contact service.

Problem	Possible Cause	Solution
Uneven cooking in oven.	Improper rack placement or pan size.	Ensure proper air circulation. Use recommended bakeware. Rotate food if necessary.

If troubleshooting steps do not resolve the issue, please contact SUMMIT customer service or a qualified service technician.

7. SPECIFICATIONS

Feature	Detail
Model Number	TEM210BRWY
Brand	SUMMIT
Form Factor	Slide-In
Width	30 inches
Power Supply	220V Electric
Cooktop Type	Coil Elements (4)
Cooktop Material	Black Porcelain
Oven Door Material	Stainless Steel
Control Type	Knob
Drawer Type	Storage
Manufacturer	SUMMIT

8. WARRANTY AND CUSTOMER SUPPORT

For specific warranty information, please refer to the warranty card included with your appliance or visit the official SUMMIT website. Keep your proof of purchase for warranty claims.

For technical assistance, parts, or service inquiries, please contact SUMMIT customer support. Contact details can typically be found on the manufacturer's website or in the product packaging.

Note: This manual provides general guidance. For detailed installation instructions and specific warranty terms, consult the documents provided with your product.

Related Documents - TEM210BRWY



[\[pdf\]](#) Specifications Guide Borchure

Product Brochure TEM210BRWY Summit Appliance Division Felix Storch Inc Specification Guide 333 46 Kb 30 Inch Slide In Electric Range 881338 plessers manuals 00088 |||

TEM210BRWY 36 x 30 x 24 H x W x D Slide-in electric range in 30 width with stainless steel doors and black porcelain top; replaces TEM230R Highlights: Slide-in look with flat backguard Stainless steel oven door and kickplate with professional handles for a true modern look 30 inch wide 220V r...

lang:en score:50 filesize: 333.46 K page_count: 2 document date: 2021-01-04



[\[pdf\]](#) Specifications Borchure

Product Brochure TEM210BRWY Summit Appliance Division Felix Storch Inc with coil elements oven window interior light and lower storage SUMMIT APPLIANCE DIVISION FELIX STORCH INC ISO 9001 2015 Certified 770 summit tem210brwy specification sheet s1 img b build mediabase specifications 1303193 |||

TEM210BRWY 36 x 30 x 24 H x W x D 30 wide slide-in style 220V electric range in stainless steel with coil elements, oven window, interior light, and lower storage compartment; made in the USA Highlights: Made in the U.S.A. Slide-in look with flat backguard 30 inch wide 220V range with four co...

lang:en score:31 filesize: 381.14 K page_count: 2 document date: 2021-08-09



[\[pdf\]](#) Borchure

Product Brochure TEM210BRWY Summit Appliance Division Felix Storch Inc 30 Wide Electric Coil Range summitappliance brochure 3288 |||

TEM210BRWY 36 x 30 x 24 H x W x D 30 wide slide-in style 220V electric range in stainless steel with coil elements, oven window, interior light, and lower storage compartment; made in the USA Highlights: Made in the U.S.A. Slide-in look with flat backguard 30 inch wide 220V range with four co...

lang:en score:30 filesize: 334.04 K page_count: 2 document date: 2023-01-22



[\[pdf\]](#) Borchure

Product Brochure TEM210BRWY Summit Appliance Division Felix Storch Inc 30 Wide Electric Coil Range summitappliance brochure 3288 u003e u003cspan |||

TEM210BRWY 36 x 30 x 24 H x W x D 30 wide slide-in style 220V electric range in stainless steel with coil elements, oven window, interior light, and lower storage compartment; made in the USA Highlights: Made in the U.S.A. Slide-in look with flat backguard 30 inch wide 220V range with four co...

lang:en **score:30** filesize: 334.04 K page_count: 2 document date: 2023-01-22




[\[pdf\]](#) Borchure

Product Brochure TEM210BRWY Summit Appliance Division Felix Storch Inc in by Watertown NY 30 Wide Electric Coil Range meocwlpqxigd images webfronts cache |||

TEM210BRWY 36 x 30 x 24 H x W x D Slide-in electric range in 30 width with stainless steel doors and black porcelain top; replaces TEM230R Highlights: Slide-in look with flat backguard Stainless steel oven door and kickplate with professional handles for a true modern look 30 inch wide 220V r...

lang:en **score:29** filesize: 394.55 K page_count: 2 document date: 2018-10-31

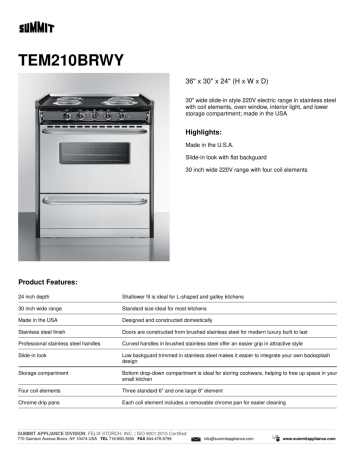

[\[pdf\]](#) Borchure

Product Brochure TEM210BRWY Summit Appliance Division Felix Storch Inc

BROCHURETEM210BRWY in by Marietta GA 30 Wide Electric Coil Range frjdranqdulimages webfronts cache frjdranqdul |||

TEM210BRWY 36 x 30 x 24 H x W x D 30 wide slide-in style 220V electric range in stainless steel with coil elements, oven window, interior light, and lower storage compartment; made in the USA Highlights: Made in the U.S.A. Slide-in look with flat backguard 30 inch wide 220V range with four co...

lang:en **score:29** filesize: 335.27 K page_count: 2 document date: 2018-10-31



[\[pdf\]](#) Borchure

Product Brochure TEM210BRWY Summit Appliance Division Felix Storch Inc BROCHUREFLASH SALE! 30 Wide Electric Coil Range Bar Source USAcdn shopify s files 1 0332 5431 0021 v 1585548382 |||

TEM210BRWY 36 x 30 x 24 H x W x D Slide-in electric range in 30 width with stainless steel doors and black porcelain top; replaces TEM230R Highlights: Slide-in look with flat backguard Stainless steel oven door and kickplate with professional handles for a true modern look 30 inch wide 220V r...

lang:en **score:28** filesize: 393.33 K page_count: 2 document date: 2020-03-30

lang:en score:21 filesize: 392.5 K page_count: 2 document date: 0000-00-00

lang:en score:18 filesize: 4.4 M page_count: 48 document date: 2020-05-08

lang:en score:12 filesize: 237.84 K page count: 59 document date: 2025-04-22