

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bam](#) /

› [Bam Trekking Double Clarinet Case 3028SM Instruction Manual](#)

## Bam 3028SM

# Bam Trekking Double Clarinet Case 3028SM Instruction Manual

Model: 3028SM

## 1. PRODUCT OVERVIEW

The Bam Trekking Double Clarinet Case 3028SM is designed for the secure and convenient transport of two clarinets (Bb and A). It features a robust construction with high-density foam interior for thermal protection and a durable water-resistant exterior. This manual provides essential information for the proper use and care of your case.

### Key Features:

- Inside cradle made of injected high-density polyurethane foam, protecting instruments against thermal shocks.
- Dedicated space for 4 barrels.
- External 2000 denier water-resistant Cordura fabric.
- 2 retractable padded backpack straps for comfortable carrying.
- Adjustable, removable shoulder strap with pad.
- Subway handle for easy vertical transport.
- Large expandable back pocket and front external pocket for sheet music and accessories.



Figure 1: Front view of the Bam Trekking Double Clarinet Case 3028SM, showcasing its compact and durable design.

## 2. SETUP AND INSTRUMENT PLACEMENT

Proper placement of your clarinets and accessories is crucial for their protection during transport.

1. **Opening the Case:** Place the case on a flat, stable surface. Unzip the main compartment zipper completely.
2. **Clarinet Placement:** Carefully place your Bb and A clarinets into their respective molded cradles. Ensure each section (upper joint, lower joint, bell) fits snugly without force. The interior is molded on Buffet Crampon RC Clarinets, providing a precise fit for compatible instruments.

3. **Barrel Storage:** Utilize the dedicated space for up to 4 barrels. Place them securely to prevent movement.
4. **Accessory Storage:** Use the internal compartments or the external pockets for smaller accessories like reeds, cork grease, and cleaning cloths. Avoid placing heavy or sharp objects directly on the instruments.
5. **Closing the Case:** Ensure all instruments and accessories are properly seated. Gently close the case and zip it securely. Do not force the zipper if there is resistance.



Figure 2: Interior view of the case, showing the molded high-density foam cradles for two clarinets and dedicated barrel storage.

### 3. OPERATING INSTRUCTIONS

The Bam Trekking case offers multiple carrying options for convenience and comfort.

#### Carrying Options:

- **Backpack Mode:** Unzip the rear pocket to reveal the two retractable padded backpack straps. Adjust the straps to a comfortable length and wear the case like a backpack. Ensure the straps are securely fastened.
- **Shoulder Strap Mode:** Attach the adjustable and removable shoulder strap to the D-rings on the sides of the case. Adjust the length for comfortable over-the-shoulder or cross-body carrying.
- **Handle Carry:** Use the main padded handle for hand carrying. The additional subway handle allows for vertical transport in crowded spaces.

#### Using External Pockets:

- **Front Pocket:** The front external pocket is designed for sheet music and flat documents.
- **Expandable Back Pocket:** The large expandable back pocket can store additional accessories or personal items. Ensure items are not overly bulky to avoid straining the zipper or fabric.



Figure 3: Side view illustrating the retractable backpack straps, shoulder strap attachment points, and subway handle.



Figure 4: Side view highlighting the external pocket for sheet music and other flat items.

## 4. MAINTENANCE

Regular maintenance will prolong the life and appearance of your Bam Trekking case.

- **Exterior Cleaning:** The 2000 denier Cordura fabric can be cleaned with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners. Allow to air dry completely.
- **Interior Cleaning:** The high-density foam interior can be gently wiped with a slightly damp cloth. Ensure it is completely dry before placing instruments back inside.
- **Zipper Care:** Periodically check zippers for smooth operation. If a zipper becomes stiff, apply a small amount of zipper lubricant or wax.
- **Strap and Buckle Inspection:** Regularly inspect straps, buckles, and D-rings for any signs of wear or damage. Replace components if necessary to ensure secure transport.
- **Storage:** When not in use, store the case in a cool, dry place away from direct sunlight and extreme temperatures.

## 5. TROUBLESHOOTING

This section addresses common issues you might encounter with your case.

- **Difficulty Closing Case:** Ensure all clarinet sections and accessories are correctly seated in their designated compartments. Nothing should protrude or obstruct the closing mechanism.
- **Stiff Zipper:** Apply a small amount of zipper lubricant or a graphite pencil to the zipper teeth to improve smoothness. Avoid forcing a stiff zipper.
- **Strap Discomfort:** Adjust the length of the backpack or shoulder straps to distribute weight evenly and find a comfortable fit. Ensure padding is correctly positioned.
- **Water Exposure:** While the exterior fabric is water-resistant, it is not fully waterproof. In case of significant water exposure, open the case and allow both the interior and exterior to air dry thoroughly to prevent mold or damage to instruments.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	3028SM
Weight	2.6 kg (5.7 lbs) <i>(Note: Product description states 2.6 kg, Amazon specifications list 2.2 pounds)</i>
Exterior Dimensions	47 x 37 x 15 cm (18.5 x 14.6 x 5.9 inches)
Bb Clarinet Interior Dimensions	Upper Joint: 22 cm, Lower Joint: 25.5 cm, Bell: 10 cm
A Clarinet Interior Dimensions	Upper Joint: 24 cm, Lower Joint: 28 cm, Bell: 10.5 cm
Material (Exterior)	2000 denier water-resistant Cordura fabric
Material (Interior)	Injected high-density polyurethane foam

Feature	Detail
Color	Blue (Product variant, case images show black/grey)
What's in the Box	1 x Bam Trekking Double Clarinet Case

## 7. WARRANTY INFORMATION

Bam products are manufactured to high standards. For specific warranty terms and conditions, please refer to the official Bam website or contact your authorized dealer. Keep your proof of purchase for any warranty claims.

## 8. CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue with your Bam Trekking Double Clarinet Case, please contact Bam customer support or your retailer. Provide your model number (3028SM) and purchase details for efficient service.

For more information, visit the official [Bam Cases website](#).