

[Manuals.plus](#) /

› [Citizen](#) /

› Citizen Men's Classic Corso Eco-Drive Watch, Chronograph, 12/24 Hour Time, Date, Sapphire Crystal Stainless/ Blue Dial

Citizen AT2141-52L

Citizen Men's Classic Corso Eco-Drive Watch Instruction Manual

Model: AT2141-52L

Brand: Citizen

1. INTRODUCTION AND OVERVIEW

Welcome to the instruction manual for your Citizen Men's Classic Corso Eco-Drive Watch. This timepiece combines timeless style with advanced Eco-Drive technology, ensuring reliable and environmentally friendly operation. Featuring a chronograph, 12/24 hour time display, and date function, this watch is designed for precision and convenience. The durable stainless steel construction and sapphire crystal provide lasting quality.



Figure 1: Front view of the Citizen Men's Classic Corso Eco-Drive Watch.

2. KEY FEATURES

- Timeless styling that effortlessly takes you from work to play.
- 1 Second Chronograph Measures up to 60 Minutes, 12/24 Hour Time, Date
- Silver-Tone Stainless Steel construction.
- Sapphire Crystal for enhanced durability and scratch resistance.
- 100 Meter Water Resistant and 5 year Limited Warranty.
- Eco-Drive Technology: Powered by any light, never needs a battery replacement.

3. SETUP

3.1 Initial Charging (Eco-Drive)

Your Citizen Eco-Drive watch is powered by light and does not require battery replacement. For optimal performance, ensure the watch is adequately charged before its first use and regularly exposed to light. There is no risk of

overcharging. It is recommended to charge the watch every day by exposing it to light sources such as sunlight or indoor lighting.

Your browser does not support the video tag.

Video: Citizen Eco-Drive Technology Explained. This video demonstrates how Citizen's Eco-Drive technology converts light into energy to power the watch, eliminating the need for battery replacements.

3.2 Setting Time and Date

Refer to the detailed user guide (link provided in Section 7) for specific instructions on setting the time, date, and adjusting the 12/24 hour display. Generally, the crown is pulled out to specific positions to adjust these settings.



Figure 2: Key features of the watch, including chronograph, 12/24 hour time, and date display.

3.3 Band Adjustment

The stainless steel band can be adjusted to fit your wrist size. It is recommended to have this done by a professional jeweler to avoid damage to the watch or band.



Figure 3: The watch as worn on a wrist, highlighting the stainless steel band.

4. OPERATING INSTRUCTIONS

4.1 Chronograph Function

The chronograph allows for precise timing up to 60 minutes in 1-second increments. Use the pushers on the side of the watch case to start, stop, and reset the chronograph. Consult the user guide for detailed instructions on operating the chronograph sub-dials.

Your browser does not support the video tag.

Video: How It Works - Citizen Watch. This video provides a general overview of the watch's functions and how to operate them.

4.2 12/24 Hour Time and Date Display

The watch features a 12/24 hour time sub-dial and a date display window. These functions are typically set in conjunction with the main time setting. Refer to your user guide for specific adjustment procedures.

4.3 Water Resistance

This watch is water resistant up to 100 meters (330 feet). It is suitable for swimming and snorkeling, but not for diving. Ensure the crown is pushed in completely before exposing the watch to water.

5. MAINTENANCE

5.1 Cleaning

Regularly wipe your watch with a soft, dry cloth to remove dirt and moisture. For the stainless steel band, a slightly damp cloth can be used, followed by drying. Avoid using harsh chemicals or abrasive materials.

5.2 Eco-Drive Charging

To maintain optimal charge, expose your watch to light regularly. If stored in darkness for extended periods, the watch may stop. A brief exposure to bright light will typically restart it. For prolonged storage, ensure it receives sufficient light to maintain a full charge.

6. TROUBLESHOOTING

- **Watch Not Running:** Ensure the watch has been exposed to sufficient light for charging. Even a few minutes of bright light can restart a stopped watch.
- **Incorrect Time/Date:** Refer to the user guide for detailed instructions on how to correctly set the time and date.
- **Condensation Under Crystal:** If condensation appears under the crystal, it may indicate a seal issue. Contact Citizen customer support or an authorized service center immediately.

For more comprehensive troubleshooting, please refer to the official User Guide (PDF) available via the link in Section 7.

7. SPECIFICATIONS

Feature	Detail
Model Number	AT2141-52L
Product Dimensions	1.65 x 0.39 x 1.65 inches; 4.97 ounces
Material	Stainless-steel
Crystal Type	Sapphire Crystal
Water Resistance	100 Meters (330 Feet)
Power Source	Eco-Drive (Light-powered, 1 Lithium Metal battery included)
Country of Origin	Japan

8. WARRANTY AND SUPPORT

This Citizen watch comes with a 5-year Limited Warranty. For detailed warranty information, service, or support, please refer to the official Citizen website or the comprehensive User Guide.

Official User Guide (PDF): [Download User Guide](#)

Manufacturer: Citizen Watch Company

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question