

[Manuals.plus](#) /

› [innovative Technology](#) /

› it.innovative technology Vintage 3-Speed Portable Suitcase Record Player with Built-in Speakers | Upgraded Turntable Audio Sound| Includes Extra Stylus | Black Black Non-Bluetooth

innovative Technology ITVS-550-BK

it.innovative technology Vintage 3-Speed Portable Suitcase Record Player with Built-in Speakers | Upgraded Turntable Audio Sound| Includes Extra Stylus | Black Black Non-Bluetooth

Model: ITVS-550-BK | Brand: innovative Technology

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your it.innovative technology Vintage 3-Speed Portable Suitcase Record Player. Please read this manual thoroughly before using the product and retain it for future reference.

PRODUCT FEATURES

- Three-speed belt-driven turntable (33 1/3, 45, 78 rpm)
- Upgraded premium sound quality
- Sound isolating feet to prevent vibration
- Built-in speakers
- Portable suitcase design with carrying handle
- Line-in, Bluetooth, and Phono input options
- Headphone jack for private listening
- Includes extra stylus

WHAT'S IN THE BOX

- Victrola Vintage 3-Speed Portable Suitcase Record Player
- Power Adapter
- Extra Stylus
- 45 RPM Adapter

- Instruction Manual (this document)

SETUP GUIDE

1. Unpacking and Placement

Carefully remove the record player from its packaging. Place the unit on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.



Figure 1: The record player in its open position, ready for use.



Figure 2: The record player in its closed, portable suitcase form.

2. Power Connection

Locate the power cord at the back of the unit. Connect the power adapter to the DC IN jack on the back of the record player, then plug the other end into a standard wall outlet. Ensure the power switch is in the "OFF" position before connecting.

Your browser does not support the video tag.

Video 1: Overview of the Victrola Vintage Suitcase Turntable, demonstrating its portability and features.

OPERATING INSTRUCTIONS

1. Playing a Record

1. Open the lid of the record player.
2. Place a record on the turntable platter. For 45 RPM records, use the included 45 RPM adapter.
3. Select the appropriate speed (33 1/3, 45, or 78 RPM) using the speed selector switch.
4. Ensure the auto-stop switch is set to your preference (ON for automatic stop at end of record, OFF for continuous play).
5. Gently lift the tone arm using the cueing lever and position it over the desired track on the record.
6. Lower the tone arm slowly onto the record using the cueing lever. The record will begin to play.
7. Adjust the volume using the Power/Volume knob.

When the record finishes playing, lift the tone arm and return it to the tone arm rest. If auto-stop is ON, the platter will stop spinning automatically.

2. Connecting External Devices

Your record player offers several connectivity options:

- **Headphones:** Plug your headphones into the headphone jack for private listening.
- **External Speakers (Line Out):** Connect external powered speakers or an amplifier to the LINE OUT RCA ports on the back of the unit for enhanced sound.

- **Auxiliary Input (Line In):** Use the LINE IN port to connect external audio devices such as smartphones, MP3 players, or CD players. Select "LINE IN" mode using the input selector knob.

MAINTENANCE

1. Cleaning the Unit

Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents. For the stylus, use a soft brush to gently clean any dust or debris.

2. Stylus Replacement

The stylus (needle) is a delicate component and will wear out over time. A spare stylus is included with your unit. Refer to the detailed instructions in the separate stylus replacement guide (if provided) or consult the manufacturer's website for proper replacement procedures. A worn stylus can damage your records.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected or outlet not active.	Ensure power cord is securely plugged into the unit and a working wall outlet. Check if the power switch is ON.
No sound or low sound	Volume too low, incorrect input selected, or external speakers not connected properly.	Increase volume. Verify input selector is set to PHONO for records or LINE IN/BT for external sources. Check connections to external speakers if used.
Record skipping	Record is dirty or scratched, unit is not on a stable surface, or stylus is worn.	Clean the record. Place the unit on a stable, level surface. Consider replacing the stylus.
Record plays too fast/slow	Incorrect speed selected.	Adjust the speed selector to match the record's RPM (33 1/3, 45, or 78).

SPECIFICATIONS

Product Dimensions: 16.65 x 7.28 x 12.8 inches
Item Weight: 5.1 pounds
Brand: innovative Technology
Model Number: ITVS-550-BK
Connectivity Technology: Wired
Material: Plastic
Motor Type: AC Motor
Speeds: 33 1/3, 45, 78 RPM
Built-in Speakers: Yes
Headphone Jack: Yes
Auxiliary Input: Yes
Line Out: Yes (RCA)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official innovative Technology website. Keep your purchase receipt as proof of purchase for warranty claims. For additional assistance, you may contact customer support via the contact information provided on the manufacturer's website.

© 2024 innovative Technology. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question