

Logitech 915-000159X

Logitech Harmony 650 Remote Control User Manual

Model: 915-000159X

INTRODUCTION

The Logitech Harmony 650 Remote Control is designed to simplify your home entertainment experience by consolidating control of up to 8 devices into a single, easy-to-use remote. This manual provides essential information for setting up, operating, and maintaining your Harmony 650 remote.

Key features include a bright color screen for easy navigation, one-touch activity buttons, and compatibility with over 225,000 devices from 5,000+ brands.

PRODUCT OVERVIEW





Image: Front view of the Logitech Harmony 650 Remote Control. The remote is silver with black buttons and features a color screen in the upper middle section. Key buttons include power, activity buttons (Watch TV, Watch a Movie, Listen to Music, More Activities), navigation pad with OK button, volume and channel controls, playback controls (play, pause, stop, skip, replay), and a numeric keypad.

The Harmony 650 remote features a user-friendly layout with dedicated buttons for common functions and a color screen that displays device commands and activity icons. The remote is ergonomically designed for comfortable handling.

SETUP

Setting up your Harmony 650 remote involves connecting it to a computer and using the Logitech Harmony software to configure your devices and activities.

1. Software Installation

1. Visit the official Logitech Harmony website.
2. Download and install the Harmony software for your PC or Mac.

3. Follow the on-screen prompts to complete the installation.

2. Connecting the Remote

- Ensure the remote has fresh batteries (1 Lithium Polymer battery required).
- Connect the Harmony 650 remote to your computer using the provided USB cable.
- The Harmony software should automatically detect the remote.

3. Device Configuration

- Within the Harmony software, add your home entertainment devices (e.g., TV, DVD/Blu-ray player, audio receiver, cable box).
- The software will guide you through selecting your device brands and models from its extensive database.
- Verify that all commands for each device are functioning correctly.

4. Activity Creation

- Create "Activities" such as "Watch TV," "Watch a Movie," or "Listen to Music."
- An activity combines multiple devices and sets them to the correct inputs and power states with a single button press. For example, "Watch a DVD" can turn on your TV, DVD player, and audio receiver, and switch the TV to the correct input.
- Customize the buttons on the remote's screen for each activity to display your favorite channels or frequently used commands.

OPERATING THE REMOTE

The Harmony 650 remote is designed for intuitive operation, primarily through its activity-based control.

Using Activities

1. Press one of the activity buttons at the top of the remote (e.g., **Watch TV**, **Watch a Movie**).
2. The remote will automatically power on the necessary devices and switch them to the correct inputs.
3. Once an activity is started, the remote's buttons will control the appropriate devices. For example, in "Watch TV" activity, volume buttons control the audio receiver, and channel buttons control the cable box.

Using the Color Screen

- The color screen displays icons for activities, favorite channels, and additional commands.
- Use the buttons adjacent to the screen to select the displayed options.
- Navigate through menus using the directional pad and **OK** button.

Help Button

- If devices are not responding correctly or an activity fails to start, press the **Help** button.
- The remote will guide you through troubleshooting steps to correct the issue.

Powering Off

- Press the **All Off** button to power down all devices associated with the current activity.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Harmony 650 remote.

- **Cleaning:** Use a soft, dry cloth to clean the remote. Avoid abrasive cleaners or solvents.

- **Battery Replacement:** The remote requires 1 Lithium Polymer battery. Replace batteries when the low battery indicator appears on the screen or when performance degrades. Ensure correct polarity when inserting new batteries.
- **Software Updates:** Periodically connect your remote to your computer and check for software updates via the Harmony software. Updates can improve performance, add new device compatibility, and fix bugs.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

TROUBLESHOOTING

If you encounter issues with your Harmony 650 remote, refer to the following common troubleshooting steps:

Problem	Possible Cause / Solution
Remote not responding.	<ul style="list-style-type: none">• Check battery level and replace if necessary.• Ensure no buttons are stuck.• Try resetting the remote by removing and reinserting batteries.
Devices not turning on/off or switching inputs correctly.	<ul style="list-style-type: none">• Press the Help button on the remote and follow the on-screen prompts.• Ensure the remote is pointed directly at the devices.• Verify device settings and activities in the Harmony software. Re-sync the remote after making changes.• Check for obstructions between the remote and devices.
Specific commands not working.	<ul style="list-style-type: none">• Ensure the correct device is selected within the activity.• Use the Harmony software to re-learn the command from the original remote.• Check for software updates for the remote.
Remote screen is blank or frozen.	<ul style="list-style-type: none">• Remove and reinsert batteries to perform a hard reset.• Connect the remote to your computer and check for software issues or updates.

SPECIFICATIONS

Feature	Detail
Model Number	915-000159X
Dimensions (L x W x H)	10.8 x 5.8 x 1.6 inches
Weight	5.8 ounces
Color	Silver
Max Supported Devices	8
Battery Type	1 Lithium Polymer battery (required)
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

This product is sold as "Renewed." Specific warranty terms for renewed products may vary. Please refer to the seller's return policy or contact the seller directly for detailed warranty information.





For technical support, software downloads, and additional resources, please visit the official Logitech Harmony support website. You can also find community forums and FAQs there.

Note: As this is a renewed product, direct manufacturer support may be limited.



© 2024 Logitech. All rights reserved. Harmony is a trademark of Logitech.

Related Documents

	<p>Logitech Harmony 650 Remote User Manual</p> <p>A comprehensive user manual for the Logitech Harmony 650 remote, detailing its features, setup, usage, and troubleshooting.</p>
	<p>Logitech Harmony One User Manual</p> <p>This user manual provides comprehensive instructions for setting up, using, personalizing, and troubleshooting the Logitech Harmony One Advanced Universal Remote. Learn how to control your home entertainment system with ease.</p>
	<p>Logitech Harmony 785 Remote User Manual</p> <p>User manual for the Logitech Harmony 785 universal remote control, detailing setup, features, customization, and troubleshooting.</p>
	<p>Logitech Harmony 700 Remote Setup Guide: Effortless Home Entertainment</p> <p>Learn how to set up your Logitech Harmony 700 remote for seamless control of your home entertainment system. Includes package contents, device setup, charging, and support.</p>