

Casio 71604262

Casio Original Watch Strap Instruction Manual

Model: 71604262 for DW-6900 and Compatible Models

INTRODUCTION

This document provides comprehensive instructions for the Casio Original Watch Strap, Model 71604262. This genuine factory replacement band is designed for various Casio G-Shock models, including the DW-6900 series. Please read this manual thoroughly before installation and use to ensure proper fitting and longevity of your watch strap.

The strap features a durable silicone material and a tang buckle clasp, ensuring a secure and comfortable fit for daily wear.

PRODUCT FEATURES

- Genuine Factory Casio Replacement Band.
- Lug Width: 16mm, Band Width: 26mm.
- Replaces Band Numbers: 70642266 and 71604349.
- Compatible with Casio models: DW-6900, DW-5300, DW-5900, DW-6000, DW-6100, DW-6200, DW-6600, DW-6695, DW-8700, G-6900, GW-6900.
- Material: Durable Silicone.
- Clasp Type: Tang Buckle.

SETUP AND INSTALLATION

Installing your new Casio watch strap requires careful handling to avoid damage to your watch or the strap. A spring bar tool is recommended for this process.

1. **Prepare Your Workspace:** Lay your watch face down on a soft, clean cloth to prevent scratches. Ensure you have good lighting.
2. **Remove the Old Strap:**
 - Locate the spring bars that hold the current strap to the watch lugs.
 - Using a spring bar tool, gently compress one end of the spring bar and pull the strap away from the watch case.
 - Repeat for the other side of the strap and for the second strap piece. Retain the old spring bars if they are in good condition, as new ones are not typically included with the replacement strap.

3. **Inspect Spring Bars:** Examine your existing spring bars for any bends or damage. If they are compromised, it is recommended to acquire new ones for a secure fit.

4. **Attach the New Strap:**

- Insert one end of a spring bar into a lug hole on the watch case.
- Place one piece of the new strap between the watch lugs.
- Using the spring bar tool, compress the other end of the spring bar and guide it into the opposite lug hole. Ensure both ends of the spring bar are securely seated in the lug holes.
- Gently tug on the strap to confirm it is firmly attached and does not easily detach.
- Repeat this process for the second piece of the watch strap.



Image: The two components of the Casio watch strap, ready for installation onto the watch case.



Image: The Casio watch strap fully assembled with its tang buckle.

OPERATING INSTRUCTIONS

Once installed, the watch strap is ready for use. Adjust the strap to a comfortable fit on your wrist.

- **Wearing the Watch:** Place the watch on your wrist. Insert the end of the strap through the buckle and secure the tang (pin) into one of the adjustment holes.
- **Adjusting the Fit:** Select an adjustment hole that allows the watch to sit snugly but comfortably on your wrist. It should not be too tight to restrict circulation, nor too loose to slide freely.
- **Securing the Excess Strap:** Thread the excess strap through the keeper loops to prevent it from flapping.

MAINTENANCE

Proper maintenance will extend the life and appearance of your Casio watch strap.

- **Cleaning:** Clean the silicone strap regularly with mild soap and water. Use a soft cloth or brush to gently scrub away dirt and grime. Rinse thoroughly with clean water and dry completely with a soft towel.
- **Avoid Harsh Chemicals:** Do not use strong detergents, solvents, or abrasive cleaners, as these can damage the silicone material.
- **Storage:** When not in use, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

- **Inspection:** Periodically inspect the strap for any signs of wear, cracks, or damage, especially around the lug attachments and buckle.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Strap does not attach securely.	Spring bars not properly seated; damaged spring bars; incorrect strap size.	Ensure spring bar ends are fully engaged in lug holes. Replace bent or damaged spring bars. Verify strap is correct model for your watch.
Strap feels uncomfortable or causes irritation.	Strap is too tight or too loose; skin sensitivity to silicone; dirt buildup.	Adjust the strap to a comfortable fit. Clean the strap thoroughly. If irritation persists, consult a dermatologist.
Strap appears discolored or worn.	Exposure to harsh chemicals; prolonged direct sunlight; natural wear over time.	Clean the strap as per maintenance instructions. Avoid exposure to harsh chemicals and direct sunlight. Consider replacement if wear is significant.

SPECIFICATIONS

Specification	Detail
Item Model Number	71604262
Manufacturer	Casio
Material	Silicone
Clasp Type	Tang Buckle
Lug Width	16mm
Band Width	26mm
Package Dimensions	7.68 x 1.77 x 0.51 inches
Item Weight	0.35 ounces
Date First Available	March 14, 2015

WARRANTY INFORMATION

This Casio Original Watch Strap is a genuine replacement part. For specific warranty details regarding replacement parts, please refer to the warranty documentation provided with your original Casio watch or contact Casio customer support directly. Typically, replacement parts may carry a limited warranty against manufacturing defects.

SUPPORT

If you encounter any issues or have questions regarding the installation or use of your Casio watch strap, please contact Casio customer support or the retailer from whom you purchased the product. You may find contact information on the official Casio website or your purchase receipt.

For additional resources, visit the official Casio website: www.casio.com

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for this specific watch strap at this time.