

[Manuals.plus](#) /

› [Fujitsu](#) /

› FUJITSU LIFEBOOK T725 12.5" Tablet User Manual

Fujitsu XBUY-T725-002

FUJITSU LIFEBOOK T725 12.5" Tablet User Manual

Model: XBUY-T725-002

Brand: Fujitsu

INTRODUCTION

This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your FUJITSU LIFEBOOK T725 12.5" Tablet. Please read this manual thoroughly before using your device to ensure optimal performance and longevity.



Figure 1: FUJITSU LIFEBOOK T725 Tablet. This image displays the tablet in its laptop configuration, featuring the 12.5-inch screen, keyboard, and touchpad. The device is shown from an angled perspective, highlighting its compact design and various ports on the sides.

SETUP

1. Unboxing

Carefully remove all components from the packaging. The box should contain the FUJITSU LIFEBOOK T725 Tablet and its power adapter. Inspect all items for any signs of damage. If any items are missing or damaged, contact your vendor immediately.

2. Initial Power On

1. Connect the power adapter to the tablet's power input port and then to a wall outlet.
2. Press the power button, typically located on the side or top edge of the tablet, to turn on the device.
3. The tablet will boot up and display the Windows 7 Professional operating system setup wizard.

3. Operating System Setup

Follow the on-screen instructions to complete the initial setup of Windows 7 Professional. This typically includes:

- Selecting your region and language.
- Accepting the license terms.
- Creating a user account and password.

- Setting up network connections (Wi-Fi).

OPERATING THE TABLET

Display and Input

The FUJITSU LIFEBOOK T725 features a 12.5-inch widescreen LED backlight bright LCD with wide viewing angles. It supports HD resolution (1366 x 768 pixels) and includes a Dual Digitizer, allowing for both pen input and capacitive multi-touch screen functionality.

- **Touchscreen:** Use your fingers for multi-touch gestures, such as pinching to zoom, swiping to scroll, and tapping to select.
- **Stylus (Pen Input):** Utilize a compatible stylus for precise input, drawing, and handwriting recognition. The tablet supports stylus functionality for enhanced productivity.
- **Keyboard and Touchpad:** When in laptop mode, use the integrated keyboard for typing and the touchpad for cursor control.

Connectivity and Ports

The tablet offers various ports and wireless connectivity options:

- **Wireless:** Integrated 802.11bgn for Wi-Fi connectivity.
- **USB Ports:** For connecting external devices such as USB drives, mice, or keyboards.
- **Video Output:** VGA and HDMI ports for connecting to external monitors or projectors.
- **Audio Jacks:** Headphone and microphone jacks for audio input and output.
- **SD Card Slot:** For expanding storage or transferring data from memory cards.

MAINTENANCE

Cleaning

- Always power off the tablet and disconnect the power adapter before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a screen cleaner specifically designed for electronics to clean the screen. Avoid harsh chemicals.
- For the casing, use a soft, dry cloth. Do not spray liquids directly onto the tablet.

Battery Care

- Avoid exposing the tablet to extreme temperatures, as this can degrade battery life.
- For optimal battery health, avoid completely discharging the battery frequently.
- If storing the tablet for an extended period, ensure the battery is charged to approximately 50%.

Software Updates

Regularly check for and install operating system and driver updates to ensure your tablet has the latest security patches and performance improvements. This can be done through the Windows Update feature in Windows 7 Professional.

TROUBLESHOOTING

This section addresses common issues you might encounter with your FUJITSU LIFEBOOK T725 Tablet.

Problem	Possible Cause	Solution
Tablet does not power on.	Low battery; Power adapter not connected; Hardware issue.	Ensure power adapter is securely connected and outlet is functional. Charge the tablet for at least 30 minutes. If issue persists, contact support.
Screen is blank or black.	Tablet is off; Display settings; Hardware issue.	Press the power button to ensure it's on. Try connecting to an external monitor to check if the display output works. Restart the tablet.
Touchscreen is unresponsive.	Software glitch; Dirty screen; Driver issue.	Restart the tablet. Clean the screen thoroughly. Check for updated touchscreen drivers in Device Manager.
Wi-Fi connection issues.	Router issue; Incorrect password; Driver issue.	Restart your Wi-Fi router. Verify the Wi-Fi password. Check network adapter drivers.

For issues not covered here, or if solutions do not resolve the problem, please refer to the support section or contact Fujitsu customer service.

SPECIFICATIONS

Detailed technical specifications for the FUJITSU LIFEBOOK T725 Tablet (Model: XBUY-T725-002).

Feature	Specification
Model Name	XBUY-T725-002
Operating System	Windows 7 Professional (64-bit)
Screen Size	12.5 inches
Screen Resolution	1366 x 768 pixels (HD)
Display Type	LED backlight bright LCD with wide viewing angles, Dual Digitizer (pen input and capacitive multi-touch)
Processor	2.2 GHz (None specified beyond speed)
RAM	4 GB DDR3L SDRAM (1600 MHz)
Hard Drive	500 GB HDD
Graphics Coprocessor	Intel HD Graphics 5500
Wireless Type	802.11bgn
Item Weight	3.84 pounds
Product Dimensions	12.44 x 9.17 x 1.1 inches
Voltage	19 Volts
First Available Date	March 15, 2015

WARRANTY AND SUPPORT

For information regarding product warranty, technical support, and service, please refer to the documentation included with your purchase or visit the official Fujitsu support website. Keep your proof of purchase for warranty claims.

Online Support: Visit the official Fujitsu support website for drivers, FAQs, and further assistance.

Contact Support: Refer to your product's warranty card or Fujitsu's official website for contact numbers and email support options.

© 2024 Fujitsu. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00UPNXV26>

More documents and user manuals: <https://manuals.plus/>