

Chicco 7412100000

Chicco U/Go Trike Model 7412100000 Instruction Manual

For models: 7412100000

1. INTRODUCTION

Thank you for choosing the Chicco U/Go Trike. This manual provides important information for the safe assembly, operation, and maintenance of your trike. Please read it carefully before use and keep it for future reference.

The Chicco U/Go Trike is designed for children aged 18 months to 5 years, offering two modes of use: Push 'n' Go and Free Pedalling. It features a durable construction (95% plastic, 5% rubber) and includes safety features like a safety belt and a front basket for convenience.

2. SAFETY INFORMATION

- **Adult Supervision Required:** Always supervise your child when they are using the trike.
- **Age and Weight Limits:** Suitable for children from 18 months up to 5 years.
- **Protective Gear:** Ensure your child wears appropriate protective gear, such as a helmet, when riding.
- **Safe Riding Environment:** Use the trike on flat, even surfaces away from traffic, stairs, hills, and swimming pools.
- **Inspect Before Use:** Before each use, check that all parts are securely fastened and that the trike is in good working condition.
- **Safety Belt:** Always secure your child with the safety belt provided.

3. PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and undamaged. The Chicco U/Go Trike package typically includes:

- 1 x Chicco U/Go Trike (main frame, wheels, seat, handlebars, pedals)
- 1 x Telescopic Parent Handle
- 1 x Front Basket
- Instruction Manual (this document)



Figure 1: Chicco U/Go Trike packaging. The box illustrates the trike's features and two modes of use.

4. ASSEMBLY

Assembly of the Chicco U/Go Trike is straightforward. Follow these general steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Attach Front Wheel and Handlebars:** Securely attach the front wheel assembly to the main frame. Then, insert the handlebars into the designated slot and ensure they are firmly locked in place.
3. **Install Rear Wheels:** Attach the two rear wheels to the axle, ensuring they click into position.
4. **Mount Seat and Pedals:** Fix the seat onto the frame. Attach the pedals to the front wheel crank arms.
5. **Attach Front Basket:** Clip the front basket onto the handlebars or front frame as indicated.
6. **Insert Parent Handle:** If using the Push 'n' Go mode, insert the telescopic parent handle into the rear of the trike frame. Adjust its height to a comfortable level and secure it.
7. **Final Check:** Before first use, double-check all connections, bolts, and locking mechanisms to ensure they are tight and secure.

For detailed visual instructions, please refer to the diagrams in the printed manual included with your product.

5. OPERATING INSTRUCTIONS

The Chicco U/Go Trike offers two versatile modes to adapt to your child's development:

5.1 Push 'n' Go Mode (Parent-Controlled)

This mode is ideal for younger children (from 18 months) who are not yet ready to pedal independently. The telescopic handle allows parents to push and steer the trike.

- **Engage Steering Lock:** Locate the steering lock mechanism (usually near the front wheel or handlebars) and engage it to prevent the child from steering independently. This allows the parent to control direction via the handle.
- **Engage Free Wheel System:** Activate the free wheel system on the front wheel. This prevents the pedals from rotating when the trike is pushed, allowing the child to rest their feet without the pedals spinning.
- **Adjust Parent Handle:** Extend the telescopic parent handle to a comfortable height for pushing.
- **Secure Child:** Place your child in the seat and fasten the safety belt securely.



Figure 2: Parent guiding the trike in Push 'n' Go mode. The telescopic handle provides control for the adult.

5.2 Free Pedalling Mode (Child-Controlled)

Once your child is older and ready to pedal and steer on their own (typically from 3 years onwards), you can convert the trike to Free Pedalling mode.

- **Remove Parent Handle:** Detach the telescopic parent handle from the trike.
- **Disengage Steering Lock:** Release the steering lock to allow the child to steer the handlebars freely.
- **Disengage Free Wheel System:** Deactivate the free wheel system so that the pedals engage with the front wheel, allowing the child to pedal and propel the trike.
- **Secure Child:** Always ensure the safety belt is fastened, even when the child is pedalling independently.



Figure 3: Child enjoying the trike in Free Pedalling mode, demonstrating independent use.

6. MAINTENANCE

Regular maintenance will ensure the longevity and safe operation of your Chicco U/Go Trike.

- **Cleaning:** Clean the trike regularly with a damp cloth and mild soap. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws, bolts, and fasteners to ensure they are tight. Inspect wheels, pedals, and the steering mechanism for any signs of wear or damage.
- **Storage:** Store the trike in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation.
- **Lubrication:** Moving parts generally do not require lubrication. If any squeaking occurs, consult the manufacturer's guidelines or a qualified service center.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Front wheel pedals do not engage or keep unlocking in Free Pedalling mode.	The free wheel system might still be engaged, or the mechanism is not fully disengaged.	Ensure the free wheel system is fully disengaged. Refer to the specific instructions for your model on how to switch between free wheel and engaged pedal modes. If the issue persists, inspect the pedal mechanism for obstructions or damage.
Parent handle does not steer the front wheel effectively.	Steering lock is disengaged, or the connection between the handle and steering mechanism is loose.	Ensure the steering lock is engaged for parent control. Check that the parent handle is securely inserted and locked into the trike's steering connection point.
Trike feels unstable or wobbly.	Loose connections or improper assembly.	Re-check all assembly points, especially wheel attachments, handlebar connections, and seat fastening. Tighten any loose screws or bolts.

8. SPECIFICATIONS

Brand	Chicco
Model Number	7412100000
ASIN	B00URLWIRK
Product Dimensions	19.69 x 9.84 x 13.19 inches
Item Weight	9.46 pounds
Manufacturer Recommended Age	18 months and up
Material Composition	95% plastic, 5% rubber
Department	Unisex-Child

Manufacturer	Chicco
---------------------	--------

9. WARRANTY AND SUPPORT

Chicco products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Chicco website.

If you encounter any issues or have questions not covered in this manual, please contact Chicco Customer Service:

- **Online Support:** Visit the [Chicco Official Store on Amazon](#) or the main Chicco website.
- **Contact Information:** Refer to the contact details provided on the product packaging or the official Chicco website for phone numbers or email support.