

## Chicco U-GO 2in1

# Chicco U-Go 2in1 Tricycle User Manual

Model: U-GO 2in1

## INTRODUCTION

Thank you for choosing the Chicco U-Go 2in1 Tricycle. This manual provides essential information for the safe assembly, operation, and maintenance of your tricycle. Please read all instructions carefully before use and retain this manual for future reference.

The Chicco U-Go 2in1 Tricycle is designed for children aged **18 months to 5 years**, with a maximum weight capacity of **20 kg**. It features two modes of use: "Push and Go" for adult-assisted riding and "Free Pedaling" for independent child use.

## SAFETY INFORMATION

- Always ensure the child is securely fastened with the safety harness.
- Supervise children at all times when using the tricycle.
- Do not use the tricycle near stairs, steep inclines, swimming pools, or on public roads.
- Regularly check all parts for wear and tear, and ensure all fasteners are tight before each use.
- The tricycle is equipped with a steering lock system and on/off pedal locking system for enhanced safety. Ensure these are used appropriately for the chosen mode.
- Maximum weight capacity: 20 kg.
- Recommended age: 18 months to 5 years.

## ASSEMBLY INSTRUCTIONS

The Chicco U-Go 2in1 Tricycle requires assembly. Please follow these general steps. For detailed visual instructions, refer to the included assembly diagram (not provided in this digital manual).

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list.
2. **Attach Front Wheel and Handlebars:** Securely attach the front wheel assembly and handlebars to the main frame. Ensure all locking mechanisms are engaged.

3. **Install Rear Wheels:** Attach the rear wheels to the axle, ensuring they are firmly in place.
4. **Mount Seat and Backrest:** Secure the seat and backrest to the tricycle frame.
5. **Attach Telescopic Handle (if applicable):** Insert the telescopic push handle into its designated slot at the rear of the tricycle. Adjust to the desired height and lock it.
6. **Attach Storage Basket:** Secure the storage basket to the rear of the tricycle.
7. **Final Check:** Before first use, ensure all screws, bolts, and fasteners are tightened, and all components are correctly assembled and locked.



Image: Chicco U-Go 2in1 Tricycle, showing the overall assembled product.

## OPERATING MODES

The Chicco U-Go 2in1 Tricycle offers two distinct modes of operation to adapt to your child's development.

### 1. Push and Go Mode (Adult-Controlled)

This mode is ideal for younger children who are not yet ready to pedal independently. An adult guides the tricycle using the telescopic handle.

- **Engage Telescopic Handle:** Ensure the telescopic handle is securely attached and adjusted to a comfortable height for the adult (three adjustable positions).

- **Lock Steering:** Activate the steering lock system to prevent the child from steering independently while the adult is pushing.
- **Lock Pedals:** Engage the pedal locking system (on/off) so the child's feet can rest on the pedals without them rotating, or to prevent the child from interfering with the adult's pushing.
- **Secure Child:** Always ensure the child is seated comfortably and securely fastened with the safety harness.
- **Guidance:** Use the telescopic handle to push and steer the tricycle, guiding the child during their first experiences.



Image: Tricycle in Push and Go mode, demonstrating adult control with the telescopic handle.

## 2. Free Pedaling Mode (Child-Controlled)

Once your child is ready to pedal and steer independently, the tricycle can be converted to Free Pedaling mode.

- **Remove Telescopic Handle:** Detach the telescopic push handle from the rear of the tricycle.
- **Unlock Steering:** Disengage the steering lock system to allow the child to steer freely.
- **Unlock Pedals:** Disengage the pedal locking system (off position) to allow the child to pedal independently.
- **Secure Child:** Ensure the child is seated comfortably and securely fastened with the safety harness, even when pedaling independently.
- **Exploration:** The child can now pedal and steer the tricycle freely, exploring their surroundings.



Image: Tricycle in Free Pedaling mode, showing a child riding independently.

## MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Chicco U-Go 2in1 Tricycle.

- **Cleaning:** Clean the tricycle with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- **Inspection:** Periodically inspect all parts, especially wheels, pedals, steering mechanism, and safety harness, for any signs of damage, wear, or loose connections.
- **Lubrication:** Lightly lubricate moving parts such as wheel axles and pedal mechanisms if they become stiff. Use a child-safe lubricant.
- **Storage:** Store the tricycle in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.
- **Tire Care:** The soft rubber, puncture-proof wheels require minimal maintenance. Ensure they are free from debris.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Tricycle difficult to steer in Push and Go mode.	Steering lock not engaged or disengaged incorrectly.	Ensure the steering lock is properly engaged for adult control or disengaged for child control. Check for obstructions.
Pedals not rotating in Free Pedaling mode.	Pedal lock system is engaged.	Disengage the pedal locking system to allow free pedaling. Check for any debris obstructing pedal movement.
Telescopic handle feels loose.	Handle not fully inserted or locking mechanism not engaged.	Ensure the telescopic handle is fully inserted and its height adjustment locking mechanism is securely engaged.
Unusual noises during operation.	Loose parts or lack of lubrication.	Inspect all connections for tightness. Apply a small amount of child-safe lubricant to moving parts if necessary.

## SPECIFICATIONS

- **Model:** U-GO 2in1
- **Brand:** Chicco
- **Material:** Metal frame
- **Product Weight:** 4.3 kg
- **Product Dimensions:** 65 cm (Length) x 45 cm (Width) x 57 cm (Height)
- **Maximum Weight Capacity:** 20 kg
- **Recommended Age:** 18 months to 5 years
- **Wheels:** Soft rubber, puncture-proof
- **Features:** Telescopic adjustable handle, safety harness, on/off pedal lock, steering lock, storage basket.

## WARRANTY INFORMATION

---

The Chicco U-Go 2in1 Tricycle comes with a manufacturer's warranty of **2 years** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for any warranty claims. For full terms and conditions, please refer to the official Chicco warranty policy or contact customer support.

## CUSTOMER SUPPORT

---

For further assistance, spare parts, or any questions regarding your Chicco U-Go 2in1 Tricycle, please contact Chicco customer service.

- **Brand:** Chicco
- **Website:** [www.chicco.it](http://www.chicco.it) (or refer to your local Chicco website)
- **Online Store:** [Chicco Official Store on Amazon](#)