

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Craftmade](#) /

› [Craftmade UCI-Remote Universal Remote Control Instruction Manual](#)

Craftmade UCI-REMOTE

Craftmade UCI-Remote Universal Remote Control

Instruction Manual for Model: **UCI-REMOTE**

Brand: Craftmade

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Craftmade UCI-Remote Universal Remote Control. This remote is designed to provide convenient control over compatible Craftmade ceiling fans, allowing for adjustment of fan speeds and light functions.

Please read this manual thoroughly before attempting to install or operate the remote control to ensure proper function and safety.

2. PRODUCT OVERVIEW



Figure 1: Craftmade UCI-Remote Universal Remote Control Handset

This image displays the front of the Craftmade UCI-Remote. It is a black, elongated remote control with a central panel containing several oval-shaped buttons. From top to bottom, the buttons on the left column are labeled "HIGH", "MED", "LOW", and "OFF". On the right column, there are buttons labeled "L-1", "L-2", and "REV". Below these buttons, the word "Craftmade" is prominently displayed. At the very bottom of the central panel, there is a small horizontal slider switch.

2.1 Key Features

- Designed for use with select Craftmade fans only.
- Requires a compatible receiver to function (receiver not included).
- Provides 3-speed fan control (High, Medium, Low).
- Includes light control functions (L-1, L-2).
- Features a reverse function for fan direction.
- Sleek black finish.

3. PACKAGE CONTENTS

The Craftmade UCI-Remote package includes:

- Craftmade UCI-REMOTE Handset (1 unit)

Note: Batteries are not included and must be purchased separately. A compatible fan receiver is also required for operation and is not included with this handset.

4. SETUP AND INSTALLATION

4.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or unclip the cover to open the compartment.
3. Insert the required batteries (typically AAA or 9V, refer to the remote's internal label if present) ensuring correct polarity (+/-).
4. Replace the battery compartment cover securely.

4.2 Pairing with Fan Receiver

This remote control must be paired with a compatible Craftmade fan receiver (e.g., Model UC7224T, if applicable) for proper operation. The pairing process typically involves setting DIP switches on both the remote and the receiver to match, or a learning function. Refer to your fan receiver's instruction manual for specific pairing procedures.

General Pairing Steps (May Vary by Receiver Model):

1. Ensure power to the ceiling fan is OFF at the circuit breaker.
2. Access the DIP switches on both the remote control (often inside the battery compartment) and the fan receiver.
3. Set the DIP switches on both devices to an identical pattern. Ensure no other remote in the vicinity uses the same pattern to avoid interference.
4. Restore power to the ceiling fan at the circuit breaker.
5. Within 30 seconds of restoring power, press and hold the "OFF" button on the remote control for approximately 5 seconds until the fan or light responds, indicating successful pairing.

If pairing is unsuccessful, repeat the steps, ensuring the DIP switch settings are identical and the timing is correct.

5. OPERATING INSTRUCTIONS

Once the remote control is paired with your fan receiver, you can operate your ceiling fan and light using the buttons on the handset:

- **HIGH:** Sets the fan speed to high.
- **MED:** Sets the fan speed to medium.
- **LOW:** Sets the fan speed to low.
- **OFF:** Turns the fan off.
- **L-1:** Controls light function 1 (e.g., turns light on/off, or adjusts brightness).
- **L-2:** Controls light function 2 (if applicable, e.g., a second light kit or dimming).
- **REV:** Reverses the direction of the fan blades (typically for seasonal use: clockwise for winter, counter-clockwise for summer).

Note: The exact functionality of light buttons (L-1, L-2) may depend on the specific fan and receiver model. Some may offer dimming

by holding the button.

6. CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your Craftmade UCI-Remote, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's range decreases or it becomes unresponsive. Always use the recommended battery type.
- **Storage:** If storing the remote for an extended period, remove the batteries to prevent leakage and corrosion. Store in a cool, dry place.
- **Avoid Moisture:** Keep the remote control away from water and high humidity.
- **Avoid Extreme Temperatures:** Do not expose the remote to extreme heat or cold.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding to fan/light.	<ul style="list-style-type: none">◦ Dead or low batteries.◦ Remote not paired with receiver.◦ Power to fan is off.◦ Interference from other devices.	<ul style="list-style-type: none">◦ Replace batteries.◦ Re-pair the remote with the fan receiver (refer to Section 4.2).◦ Ensure power is on at the wall switch and circuit breaker.◦ Check for other remote controls or electronic devices operating on similar frequencies.
Fan operates but light does not.	<ul style="list-style-type: none">◦ Light bulb is burnt out or loose.◦ Light function not enabled on receiver.	<ul style="list-style-type: none">◦ Check and replace light bulb(s).◦ Consult your fan receiver manual for light wiring and settings.
Limited range or intermittent operation.	<ul style="list-style-type: none">◦ Low batteries.◦ Obstructions between remote and receiver.◦ Electrical interference.	<ul style="list-style-type: none">◦ Replace batteries.◦ Ensure clear line of sight or minimize obstructions.◦ Move other electronic devices away from the fan/receiver.

8. SPECIFICATIONS

Attribute	Detail
Model Number	UCI-REMOTE
Part Number	UCI-REMOTE

Attribute	Detail
Brand	Craftmade
Color	Black
Finish	Painted
Item Weight	8 ounces
Product Dimensions	17.1 x 17.1 x 17.1 inches (Note: This dimension seems unusually large for a remote control and might refer to packaging or a different component. Please verify actual remote dimensions.)
Power Source	AC & Battery (Note: AC likely refers to the receiver, battery to the handset)
Voltage	120 Volts (for compatible receiver)
Special Feature	Universal (for compatible Craftmade fans)
Usage	General Purpose Ceiling Fan Control
Included Components	Craftmade UCI-REMOTE UCI Remote Control Handset
Batteries Included?	No
Batteries Required?	Yes (for handset operation)
Connectivity Technology	Infrared (IR) or Radio Frequency (RF) - typically RF for ceiling fans. (Note: The specification says Infrared, but most ceiling fan remotes are RF. User should verify with product packaging/receiver manual.)
Date First Available	March 16, 2015

9. WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or replacement parts, please contact Craftmade customer service or visit the official Craftmade website. Keep your purchase receipt as proof of purchase for any warranty claims.

Craftmade Contact Information:

- Website: www.craftmade.com (Example link, actual link may vary)
- Customer Service: Refer to the website for current contact numbers or email.