

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Craftmade](#) /

› [Craftmade UCI-WALL Wall Control User Manual](#)

## Craftmade UCI-WALL

# Craftmade UCI-WALL Universal Intelligent Controls Wall Control User Manual

Model: UCI-WALL

## 1. INTRODUCTION

---

The Craftmade UCI-WALL Universal Intelligent Controls Wall Control is designed to provide convenient and precise control over your Craftmade ceiling fan and its integrated lighting. This wall control features 3-speed fan operation and a 1.5 Amp/300 Watt dimmer for lighting, ensuring optimal comfort and ambiance. It is specifically designed for 2-wire installation and requires a compatible Craftmade fan receiver to function.

## 2. SAFETY INFORMATION

---

Please read and understand all instructions before beginning installation. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **WARNING:** To avoid possible electrical shock, turn off the electricity at the main fuse box or circuit breaker panel before beginning installation.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.
- This control is designed for use with Craftmade fans only. Do not attempt to use it with other brands or types of fans.
- Ensure the total wattage of the connected light fixture does not exceed 300 Watts.
- Do not use this control with solid-state fan speed controls.

## 3. PACKAGE CONTENTS

---

Verify that all components are present before installation:

- Craftmade UCI-WALL Wall Control
- Mounting Screws
- Wire Connectors



Image 1: Front view of the Craftmade UCI-WALL Wall Control, showing fan speed buttons (HIGH, MED, LOW, OFF), light button (L-1), and a master ON/OFF slider switch at the bottom.



Image 2: Various components of the Craftmade UCI-WALL system, including the wall control unit, wiring, and mounting plate.

## 4. SPECIFICATIONS

---

<b>Model Number</b>	UCI-WALL
<b>Voltage</b>	120 Volts
<b>Fan Amperage</b>	1.5 Amp
<b>Light Wattage</b>	300 Watt (Max)
<b>Wiring</b>	2-Wire Installation
<b>Dimensions (L x W x H)</b>	17.1 x 17.1 x 17.1 inches (Product)
<b>Weight</b>	3.87 ounces
<b>Mounting Type</b>	Wall Mount
<b>Compatibility</b>	Craftmade Fans Only (Requires compatible receiver)

## 5. SETUP AND INSTALLATION

---

This wall control is designed for standard 2-wire electrical box installation. It requires a compatible Craftmade fan receiver (not included) to operate your ceiling fan and light.

- 1. Turn Off Power:** Before starting any electrical work, ensure the power to the fan circuit is turned off at the main fuse box or circuit breaker. Verify the power is off using a voltage tester.
- 2. Prepare Wiring:** Carefully pull the existing wiring from the wall box. Identify the Live/Hot wire (usually black) and the Neutral wire (usually white). If unsure, consult a qualified electrician.
- 3. Connect Wall Control:**
  - Connect the Live/Hot wire from the wall box to the designated input wire on the UCI-WALL control.
  - Connect the output wire from the UCI-WALL control to the Live/Hot wire leading to the fan receiver.
  - Connect the Neutral wire from the wall box to the Neutral wire leading to the fan receiver. (Note: The UCI-WALL itself is a 2-wire device and typically does not require a direct neutral connection to operate its internal electronics, but the fan/light circuit will need a neutral.)
  - Secure all connections with wire connectors.
- 4. Mount Wall Control:** Gently push the wired wall control into the wall box. Secure it using the provided mounting screws.
- 5. Install Wall Plate:** Attach the decorative wall plate over the control and secure it with screws.
- 6. Restore Power:** Turn the electricity back on at the main fuse box or circuit breaker.
- 7. Test Operation:** Test the fan and light functions using the wall control buttons.

For detailed wiring diagrams specific to your Craftmade fan and receiver, refer to the instruction manual provided with your fan and receiver unit.



Image 3: Comparison view showing the Craftmade UCI-WALL Wall Control (right) alongside a compatible handheld remote control (left), illustrating the control options for Craftmade fans.

## 6. OPERATING INSTRUCTIONS

---

The UCI-WALL control provides intuitive operation for your Craftmade ceiling fan and light.

- **Master ON/OFF Switch:** Located at the bottom of the control, slide this switch to the "ON" position to enable the control and to the "OFF" position to completely cut power to the fan and light.
- **Fan Speed Control:**
  - Press **HIGH** for maximum fan speed.
  - Press **MED** for medium fan speed.
  - Press **LOW** for minimum fan speed.
  - Press **OFF** to turn the fan off.
- **Light Control:**
  - Press the **L-1** button to turn the light ON or OFF.
  - To dim the light, press and hold the **L-1** button. Release the button when the desired brightness level is reached. The dimmer function requires dimmable light bulbs.

## 7. MAINTENANCE

---

The Craftmade UCI-WALL Wall Control requires minimal maintenance.

- **Cleaning:** To clean the surface of the wall control, wipe it gently with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or internal components.
- **Power Cycle:** If the control becomes unresponsive, try sliding the master ON/OFF switch to "OFF" for 30 seconds, then back to "ON" to reset it.
- This wall control is hardwired and does not require battery replacement.

## 8. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Fan/Light does not respond to wall control.	<ul style="list-style-type: none"> <li>• Master ON/OFF switch is in "OFF" position.</li> <li>• Power to the circuit is off.</li> <li>• Incorrect wiring.</li> <li>• Incompatible fan receiver.</li> <li>• Faulty wall control or receiver.</li> </ul>	<ul style="list-style-type: none"> <li>• Slide master switch to "ON".</li> <li>• Check circuit breaker/fuse box.</li> <li>• Verify wiring connections (refer to Section 5).</li> <li>• Ensure your fan has a compatible Craftmade receiver.</li> <li>• Contact Craftmade customer support.</li> </ul>
Light does not dim.	<ul style="list-style-type: none"> <li>• Non-dimmable light bulbs installed.</li> <li>• Dimmer function not activated correctly.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace with dimmable LED or incandescent bulbs.</li> <li>• Press and hold the L-1 button to activate dimming.</li> </ul>
Fan operates only at one speed or erratically.	<ul style="list-style-type: none"> <li>• Incompatible fan receiver.</li> <li>• Wiring issue.</li> <li>• Interference.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure your fan has a compatible Craftmade receiver.</li> <li>• Recheck wiring connections.</li> <li>• Ensure no other devices are causing signal interference.</li> </ul>

## 9. WARRANTY AND SUPPORT

---

Craftmade products are manufactured to the highest quality standards. For specific warranty information regarding your UCI-WALL Wall Control, please refer to the warranty documentation included with your original purchase or visit the official Craftmade website.

If you encounter any issues or require technical assistance, please contact Craftmade customer support:

- **Craftmade Official Website:** [www.craftmade.com](http://www.craftmade.com)
- Refer to the website for contact numbers and support hours.