

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Mitsubishi Electric](#) /

› [Mitsubishi Washing Machine and Dryer Drain Extension Hose 1m M10E53804 User Manual](#)

Mitsubishi Electric M10E53804

Mitsubishi Washing Machine and Dryer Drain Extension Hose 1m

Model: M10E53804 | **Brand:** Mitsubishi Electric

1. INTRODUCTION

This user manual provides detailed instructions for the installation, proper use, and maintenance of the Mitsubishi Electric Drain Extension Hose, model M10E53804. This 1-meter extension hose is designed to provide additional length for the drainage system of compatible Mitsubishi washing machines and clothes dryers, ensuring efficient water discharge.

Please read this manual thoroughly before installation and retain it for future reference. Proper installation and maintenance are crucial for the optimal performance and longevity of the product.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent injury or damage to property:

- Always disconnect the washing machine or dryer from the power supply before attempting any installation or maintenance.
- Ensure the hose is securely connected at both ends to prevent leaks. Loose connections can cause water damage.
- Do not kink, twist, or excessively bend the hose, as this can restrict water flow or cause damage.
- Verify that the drain outlet is clear and unobstructed before connecting the hose.
- Do not use this hose for purposes other than its intended use with compatible washing machines and dryers.
- Keep the hose away from sharp objects or heat sources that could damage the material.

3. PACKAGE CONTENTS

Upon opening the package, ensure all components are present and undamaged:

- 1 x Mitsubishi Electric Drain Extension Hose (1 meter, Model M10E53804)

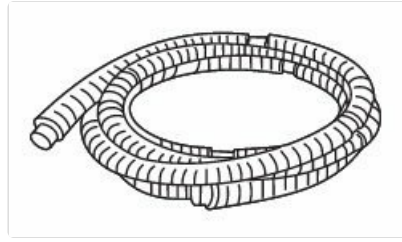


Image 1: Mitsubishi Electric Drain Extension Hose M10E53804. This image shows the flexible, corrugated drain hose with a grey finish, approximately 1 meter in length, designed for extending washing machine or dryer drainage.

4. SETUP AND INSTALLATION

Follow these steps to properly install the drain extension hose:

1. **Preparation:** Ensure the washing machine or dryer is turned off and unplugged from the electrical outlet. Close the water supply valves.
2. **Locate Existing Drain Hose:** Identify the current drain hose connected to your appliance.
3. **Connect Extension Hose:**
 - If extending an existing hose: Connect one end of the M10E53804 extension hose to the end of your appliance's existing drain hose. Ensure a tight fit. You may need a hose clamp (not included) to secure the connection and prevent leaks.
 - If replacing a short hose: Remove the old hose from the appliance and connect the M10E53804 hose directly to the drain outlet on the washing machine or dryer. Secure with a hose clamp if necessary.
4. **Route the Hose:** Carefully route the extended drain hose to the desired drain point (e.g., utility sink, standpipe, floor drain). Avoid sharp bends, kinks, or placing heavy objects on the hose.
5. **Secure the Drain End:** Ensure the end of the drain hose is securely positioned in the drain opening. It should be high enough to prevent siphoning but low enough to allow proper drainage. Use a U-bend bracket if provided with your appliance or a suitable alternative to hook it over a sink or into a standpipe.
6. **Check for Leaks:** Once installed, reconnect the appliance to the power supply and turn on the water supply. Run a short drain cycle (e.g., rinse and spin) and carefully inspect all connections for any signs of leakage. Tighten connections if necessary.

5. OPERATING INSTRUCTIONS (PROPER USE)

The drain extension hose operates passively as part of your appliance's drainage system. Ensure the following for proper function:

- **Maintain Clear Path:** Always ensure the hose path is free from obstructions.
- **Proper Elevation:** The drain hose should not be positioned too low, which can cause continuous draining (siphoning), or too high, which can prevent proper drainage. Refer to your appliance's manual for recommended drain height.
- **Avoid Overloading:** Do not overload your washing machine, as this can lead to excessive water volume and pressure, potentially straining the drain system.

6. MAINTENANCE

Regular inspection and simple maintenance can extend the life of your drain hose:

- **Periodic Inspection:** Periodically check the entire length of the hose for any signs of wear, cracks, punctures, or kinks.
- **Connection Check:** Ensure all connections remain tight and free from leaks.
- **Cleanliness:** If you notice slow drainage, the hose might be partially blocked. Disconnect the hose (after unplugging the appliance and closing water supply) and flush it with water to remove any lint or debris.
- **Replacement:** If the hose shows significant signs of damage or wear, replace it immediately to prevent water damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Water Leakage	Loose connection; Damaged hose; Improperly seated hose.	Tighten hose clamps; Replace damaged hose; Re-seat hose securely.
Slow or No Drainage	Kinked or twisted hose; Blockage in hose or drain; Drain too high.	Straighten hose; Clear blockage; Adjust drain height according to appliance manual.
Continuous Draining (Siphoning)	Drain hose end is too low.	Raise the drain hose end to the recommended height (usually above the water level in the appliance).

If problems persist after attempting these solutions, consult the user manual for your specific washing machine or dryer, or contact Mitsubishi Electric customer support.

8. SPECIFICATIONS

- **Product Type:** Drain Extension Hose
- **Brand:** Mitsubishi Electric
- **Model Number:** M10E53804
- **Length:** 1 meter (approximately 3.3 feet)
- **Material:** Durable corrugated plastic
- **Color:** Grey
- **Compatible Appliance Types:** Washing Machines, Clothes Dryers
- **Partial List of Compatible Mitsubishi Models:**
 - AW-42A1, AW-42B1, AW-42C1, AW-42D1
 - MAW-50MP, MAW-50Q, MAW-50QP, MAW-50R, MAW-50RP, MAW-511, MAW-55X, MAW-55Y, MAW-5S, MAW-5SP, MAW-5T, MAW-5U2, MAW-5U, MAW-5W
 - MAW-60M, MAW-60MP, MAW-60R, MAW-60RP, MAW-60S, MAW-60SP, MAW-60TP, MAW-611, MAW-612P, MAW-62X, MAW-62Y, MAW-6TPV5, MAW-6U2, MAW-6U, MAW-6W
 - MAW-70MP, MAW-70R, MAW-70RP, MAW-70S, MAW-70SP, MAW-711P, MAW-712P, MAW-715P, MAW-716P
 - MAW-815P, MAW-816P

- MAW-CHV8UP, MAW-D7TP, MAW-D7UP, MAW-D7WP, MAW-D7XP, MAW-D7YP, MAW-D8TP, MAW-D8UP, MAW-D8WP, MAW-D8XP, MAW-D8YP, MAW-D9WP, MAW-D9XP, MAW-D9YP
- MAW-EG6P, MAW-EG6RP, MAW-EG6SP
- MAW-F70P, MAW-F80P, MAW-F90P, MAW-FV7TP, MAW-FV8TP
- MAW-GD108Y, MAW-H75V6, MAW-H75V7, MAW-H85V6, MAW-HD66Y, MAW-HD88X, MAW-HD88Y
- MAW-HV6UP, MAW-HV6WP, MAW-HV7UP, MAW-HV7WP, MAW-HV7XP, MAW-HV7YP, MAW-HV8UP, MAW-HV8WP, MAW-HV8XP, MAW-HV8YP, MAW-HV9WP, MAW-HV9XP, MAW-HV9YP
- MAW-K5TP, MAW-KV7WP, MAW-KV8WP, MAW-KV9WP
- MAW-MV7UP, MAW-MV8UP
- MAW-N6UP, MAW-N6WP, MAW-N6XP, MAW-N7TP, MAW-N7UP, MAW-N7WP, MAW-N7XP, MAW-N7YP, MAW-N8TP, MAW-N8UP, MAW-N8WP, MAW-N8XP, MAW-N8YP, MAW-N9WP, MAW-N9XP, MAW-N9YP
- MAW-R7T, MAW-S90, MAW-V6RP, MAW-V6SP, MAW-V6TP, MAW-V7JP, MAW-V7MP, MAW-V7RP, MAW-V7SP, MAW-V7TP, MAW-V7UP, MAW-V8MP, MAW-V8RP, MAW-V8SP, MAW-V8TP, MAW-V8UP, MAW-VB7P, MAW-YP7
- MAW-Z6E, MAW-Z6F, MAW-Z6H, MAW-Z7EP, MAW-Z7FP, MAW-Z7HP
- MVW-VD1

9. WARRANTY AND SUPPORT

Specific warranty details for this accessory may vary. Please refer to the documentation provided with your original Mitsubishi washing machine or dryer, or contact Mitsubishi Electric customer service for warranty information related to replacement parts and accessories.

For technical support or inquiries, please visit the official Mitsubishi Electric website or contact their customer service department in your region. Keep your product model number (M10E53804) handy when seeking support.