

- Manuals.plus /
- › Fiskars /
 - › Fiskars RazorEdge Micro-Tip Easy Action Scissors (6-Inch) Instruction Manual

Fiskars 190500-1001

Fiskars RazorEdge Micro-Tip Easy Action Scissors (6-Inch) Instruction Manual

Model: 190500-1001

1. PRODUCT OVERVIEW

The Fiskars RazorEdge Micro-Tip Easy Action Scissors are designed for precise and intricate cutting tasks, particularly with fabric. These 6-inch scissors feature high-grade stainless steel blades with a fine Micro-Tip point, allowing for exceptional control when cutting detailed patterns. The Easy-Action design incorporates a spring-assisted mechanism that gently reopens the blades after each cut, reducing hand fatigue during extended use. A SoftGrip handle provides enhanced comfort and control.



Image 1.1: Fiskars RazorEdge Micro-Tip Easy Action Scissors, 6-inch model.

2. SETUP

These scissors require minimal setup. Upon receiving your Fiskars RazorEdge Micro-Tip Easy Action Scissors, remove them from their packaging. Inspect the blades and handles for any visible damage. The scissors are ready for immediate use.



Image 2.1: Full view of the scissors, ready for use.

3. OPERATING INSTRUCTIONS

The Fiskars RazorEdge Micro-Tip Easy Action Scissors are designed for precision cutting in various crafting and sewing applications.

1. **Grip:** Hold the scissors comfortably in your hand, utilizing the SoftGrip handles for enhanced control. The ambidextrous design allows for comfortable use by both left and right-handed individuals.
2. **Cutting Action:** Squeeze the handles together to make a cut. The Easy-Action spring mechanism will automatically open the blades after each cut, reducing strain on your hand.
3. **Precision Cutting:** Utilize the Micro-Tip blades for intricate details and tight spaces. The RazorEdge design ensures clean cuts all the way to the tip.
4. **Suitable Materials:** These scissors are ideal for cutting various fabrics such as silk, oil cloth, polyester, cotton, crepe, and felt. They are also suitable for paper and other light crafting materials. Avoid cutting excessively thick or hard materials to prevent blade damage.
5. **Safe Storage:** When not in use, engage the easy-open thumb lock to keep the blades safely closed. This prevents accidental cuts and protects the blade edges.

**Precise Micro-Tip[®]
blades make
intricate cuts**



Image 3.1: Demonstrating precise cutting with Micro-Tip blades.



Easy Action™

spring assisted handle

FISKARS®

Image 3.2: Detail of the Easy Action spring-assisted handle.

4. MAINTENANCE

Proper maintenance ensures the longevity and performance of your Fiskars scissors.

- **Cleaning:** After each use, wipe the blades with a soft, dry cloth to remove any fabric fibers, adhesive residue, or dust. For stubborn residue, a cloth lightly dampened with rubbing alcohol can be used, followed by drying thoroughly.
- **Lubrication:** Periodically, apply a small drop of sewing machine oil or a similar light lubricant to the pivot point to maintain smooth operation. Wipe off any excess oil.
- **Storage:** Always store the scissors with the thumb lock engaged to protect the blade edges and prevent accidental injury. Store in a dry place to prevent rust.
- **Sharpening:** The high-grade stainless steel blades are designed to stay sharp for a long time. If sharpening becomes necessary, it is recommended to use a professional scissor sharpening service to maintain the RazorEdge and Micro-Tip precision.



Stainless steel blades

hold their sharp edge for long-lasting performance

FISKARS®

Image 4.1: High-grade stainless steel blades for lasting sharpness.

5. TROUBLESHOOTING

If you encounter issues with your scissors, consider the following:

- **Difficulty Cutting:**

- Ensure the blades are clean and free of debris.
- Check if the material being cut is appropriate for these scissors. Avoid overly thick or hard materials.
- If blades feel dull, consider professional sharpening.

- **Stiff Operation:**

- Apply a small amount of lubricant to the pivot point.
- Ensure no debris is lodged in the spring mechanism.

- **Thumb Lock Not Engaging/Disengaging:**
 - Check for any obstructions around the lock mechanism.
 - Ensure the scissors are fully closed when attempting to engage the lock.

6. SPECIFICATIONS

Feature	Detail
Brand	Fiskars
Model Number	190500-1001
Product Dimensions	6.05"L x 1.76"W
Item Weight	2.11 ounces (0.06 Kilograms)
Material	Stainless Steel (Blades), SoftGrip (Handle)
Blade Material	Stainless Steel
Blade Edge	Straight, Micro-Tip
Hand Orientation	Ambidextrous
UPC	020335049772 (Primary)



FISKARS®

Image 6.1: Product dimensions.

7. WARRANTY AND SUPPORT

Fiskars tools are designed for durability and are guaranteed to maintain exceptional performance. This product includes a **Full Lifetime Warranty**.

For detailed warranty information and support, please visit the official Fiskars website:

[Fiskars Warranty Information](#)

For further assistance or inquiries, please contact Fiskars customer support through their official website.

A large orange shield-shaped badge with a black border. Inside the shield, the words "FULL", "LIFE", "TIME", and "WARRANTY" are stacked vertically in a bold, black, sans-serif font. The background of the entire page is black.

**FULL
LIFE
TIME
WARRANTY**

Image 7.1: Full Lifetime Warranty badge.

© 2025 Fiskars. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00UY11IFG>

More documents and user manuals: <https://manuals.plus/>