

[Manuals.plus](#) /

› [Kalorik](#) /

› Kalorik TKG OT 1013 BCRL Mini Oven Instruction Manual

Kalorik TKG OT 1013 BCRL

Kalorik TKG OT 1013 BCRL Mini Oven Instruction Manual

Model: TKG OT 1013 BCRL

INTRODUCTION

Thank you for purchasing the Kalorik TKG OT 1013 BCRL Mini Oven. This appliance is designed for versatile cooking, including baking, roasting, and grilling, with a 40-liter capacity. Please read this instruction manual thoroughly before first use to ensure safe and efficient operation. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.

- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

PRODUCT COMPONENTS AND ACCESSORIES

The Kalorik TKG OT 1013 BCRL Mini Oven comes with the following components and accessories:

- Mini Oven Unit
- Baking Tray
- Wire Rack
- Rotating Skewer (Rotisserie Spit)
- Tray Handle



Image: The Kalorik TKG OT 1013 BCRL Mini Oven shown with its included accessories: baking tray, wire rack, rotating skewer, and tray handle.

SETUP

1. **Unpacking:** Carefully remove the oven and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash the baking tray, wire rack, and rotating skewer in warm, soapy water. Rinse and dry thoroughly.
3. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the oven (at least 10-15 cm clearance on all sides and top). Do not place near flammable materials or under cabinets.

4. **Power Connection:** Ensure the power cord is not damaged. Plug the oven into a standard 230V electrical outlet.
5. **First Use Burn-Off:** It is recommended to operate the oven empty for approximately 15 minutes at the maximum temperature (250°C) with the door slightly ajar. This will burn off any manufacturing residues and odors. Ensure the area is well-ventilated during this process.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel before operation.



Image: Front view of the Kalorik Mini Oven, highlighting the control knobs for temperature, function, and timer.

Control Panel Overview

- **Temperature Knob:** Adjusts temperature from 100°C to 250°C.
- **Function Selector Knob:** Selects heating elements (upper, lower, or both) and rotisserie function.
- **Timer Knob:** Sets cooking time up to 60 minutes with automatic shut-off and noise alert.
- **Power Light:** Illuminates when the oven is operating.

General Cooking Steps

1. **Prepare Food:** Place food on the baking tray or wire rack.
2. **Insert Accessories:** Slide the baking tray or wire rack into the desired rack position inside the oven.
3. **Set Temperature:** Turn the Temperature Knob to the desired cooking temperature (100-250°C).
4. **Select Function:** Turn the Function Selector Knob to choose the heating mode:

- Upper heating element only (for grilling/browning)
- Lower heating element only (for gentle baking)
- Both upper and lower heating elements (for general baking/roasting)
- Both elements with fan (for even convection cooking)
- Rotisserie function (with or without heating elements)

5. **Set Timer:** Turn the Timer Knob to the desired cooking time (up to 60 minutes). The oven will start heating. The Power Light will illuminate.
6. **Monitor Cooking:** The heat-resistant glass door allows you to monitor your food.
7. **Completion:** When the set time elapses, the oven will automatically shut off and emit a noise alert. Carefully remove food using the tray handle or oven mitts.

Using the Rotisserie Function

The rotating skewer is ideal for roasting poultry or larger cuts of meat evenly.

1. **Prepare Skewer:** Secure the food (e.g., chicken) onto the rotating skewer using the forks provided. Ensure the food is centered and balanced to allow for smooth rotation.
2. **Insert Skewer:** Place the pointed end of the skewer into the rotisserie drive socket on the right side of the oven interior. Rest the square end of the skewer onto the support bracket on the left side.
3. **Select Rotisserie Function:** Turn the Function Selector Knob to the rotisserie symbol, optionally combined with upper and/or lower heating elements.
4. **Set Temperature and Time:** Adjust the Temperature Knob and Timer Knob as required for your recipe.



Image: The Kalorik Mini Oven in operation, showing a roasted chicken with potatoes on the wire rack, demonstrating its cooking capabilities.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

1. **Before Cleaning:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
3. **Interior Cleaning:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive oven cleaner designed for conventional ovens can be used, following the product's instructions. Ensure all cleaner residue is removed.
4. **Accessories:** The baking tray, wire rack, and rotating skewer can be washed in warm, soapy water. They are generally not dishwasher safe unless specified. Rinse thoroughly and dry completely before storing or reusing.
5. **Glass Door:** Clean the glass door with a glass cleaner or a damp cloth. Avoid harsh chemicals that could damage the seal.
6. **Storage:** When not in use, ensure the oven is clean and dry. Store it in a cool, dry place.



Image: The Kalorik Mini Oven with its door open, showing the interior and removable accessories like the baking tray and wire rack, ready for cleaning.

TROUBLESHOOTING

If you encounter issues with your Kalorik Mini Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the oven is securely plugged into a working outlet. Check if the timer knob is set to a cooking duration.

Problem	Possible Cause	Solution
Oven not heating properly.	Temperature or function knob set incorrectly; heating elements faulty.	Verify temperature and function settings. If problem persists, contact customer support.
Rotisserie skewer not rotating.	Food too large or unbalanced; skewer not properly seated; rotisserie function not selected.	Ensure food is balanced and not obstructing rotation. Check if the skewer is correctly inserted into the drive socket and support. Select the rotisserie function.
Excessive smoke during operation.	Food spills or residue inside the oven; first use burn-off.	Clean the oven interior thoroughly. If it's the first use, some smoke is normal during the burn-off period. Ensure good ventilation.

SPECIFICATIONS

Model Number	TKG OT 1013 BCRL
Brand	Kalorik
Capacity	40 Liters
Wattage	1500 Watts
Temperature Range	100°C - 250°C
Timer	Up to 60 minutes with automatic shut-off
Material	Metal, Glass, Plastic (Tempered Glass Door)
Color	Black
Item Weight	7.25 Kilograms
Control Type	Knob
Interior Dimensions	42 x 38.5 x 29.7 cm (approximate, from description)

WARRANTY AND SUPPORT

This Kalorik appliance is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting not covered in this manual, or to inquire about replacement parts, please contact Kalorik Customer Support. Contact information can typically be found on the manufacturer's official website or on the warranty card.

When contacting support, please have your model number (TKG OT 1013 BCRL) and purchase date available.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00UZBV6CA>

More documents and user manuals: <https://manuals.plus/>