

Zyliss E910015U

Zyliss Easy Pull Food Chopper and Manual Food Processor Instruction Manual

Model: E910015U

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Zyliss Easy Pull Food Chopper. Retain this manual for future reference.

- **Sharp Blades:** The blades are extremely sharp. Handle with care during assembly, disassembly, and cleaning to avoid injury. Always use the blade protector when storing.
- **Keep Away from Children:** This appliance is not intended for use by children. Keep the chopper and its components out of reach of children.
- **Proper Use:** Use the chopper only for its intended purpose of chopping, mincing, grinding, mixing, and slicing food. Do not attempt to chop hard items like coffee beans, ice cubes, or bones.
- **Stable Surface:** Always operate the chopper on a stable, flat, and dry surface.
- **Avoid Overfilling:** Do not overfill the container. This can strain the mechanism and prevent proper chopping.
- **Cleaning:** Refer to the "Maintenance and Cleaning" section for detailed instructions. Do not immerse the lid in water.
- **Inspection:** Before each use, inspect the chopper for any damage. Do not use if any part is damaged.

2. PRODUCT OVERVIEW

The Zyliss Easy Pull Food Chopper is designed for efficient manual food preparation. It consists of three main components:

1. **Container Base:** The transparent bowl where food is chopped. It features non-slip feet for stability.
2. **Blade Assembly:** A unit with sharp stainless steel blades for cutting. It includes a protective cover for safe handling and storage.
3. **Lid with Pull Mechanism:** The top part that houses the pull cord and rotating mechanism to operate the blades.



Image 1: Assembled Zyliss Easy Pull Food Chopper, showing the red lid, white top, and clear container with blades inside.



Image 2: Exploded view of the Zyliss Easy Pull Food Chopper, displaying the lid, blade assembly, and container base separately.

3. SETUP AND ASSEMBLY

Follow these steps to prepare your chopper for use:


1. **Unpack:** Carefully remove all components from the packaging.
2. **Wash:** Before first use, wash the container base and blade assembly in warm, soapy water. Rinse thoroughly and dry. The lid should be wiped clean with a damp cloth (do not immerse).
3. **Assemble Blades:** Remove the protective cover from the blade assembly. Carefully place the blade assembly onto the central pin inside the container base. Ensure it sits securely.

4. OPERATING INSTRUCTIONS

Using your Zyliss Easy Pull Food Chopper is straightforward:

1. **Prepare Ingredients:** Cut larger food items into smaller, manageable pieces (approximately 1-2 inches) that fit easily into the container. Do not overload the container.
2. **Load Container:** Place the prepared ingredients into the container base, around the blade assembly.

3. **Secure Lid:** Place the lid onto the container base, aligning the tabs and twisting gently to lock it into place. Ensure the lid is securely fastened before operating.
4. **Chop:** Hold the chopper firmly on a stable surface. Pull the handle of the cord horizontally away from the body. The blades will rotate, chopping the food.
5. **Control Consistency:** The more times you pull the cord, the finer the chop will be. For coarse chopping, pull a few times. For fine mincing or pureeing, pull more times until desired consistency is achieved.
6. **Check Progress:** The transparent container allows you to monitor the chopping progress without removing the lid.
7. **Remove Food:** Once chopping is complete, carefully remove the lid, then lift out the blade assembly by its central shaft. Scrape the chopped food from the container.

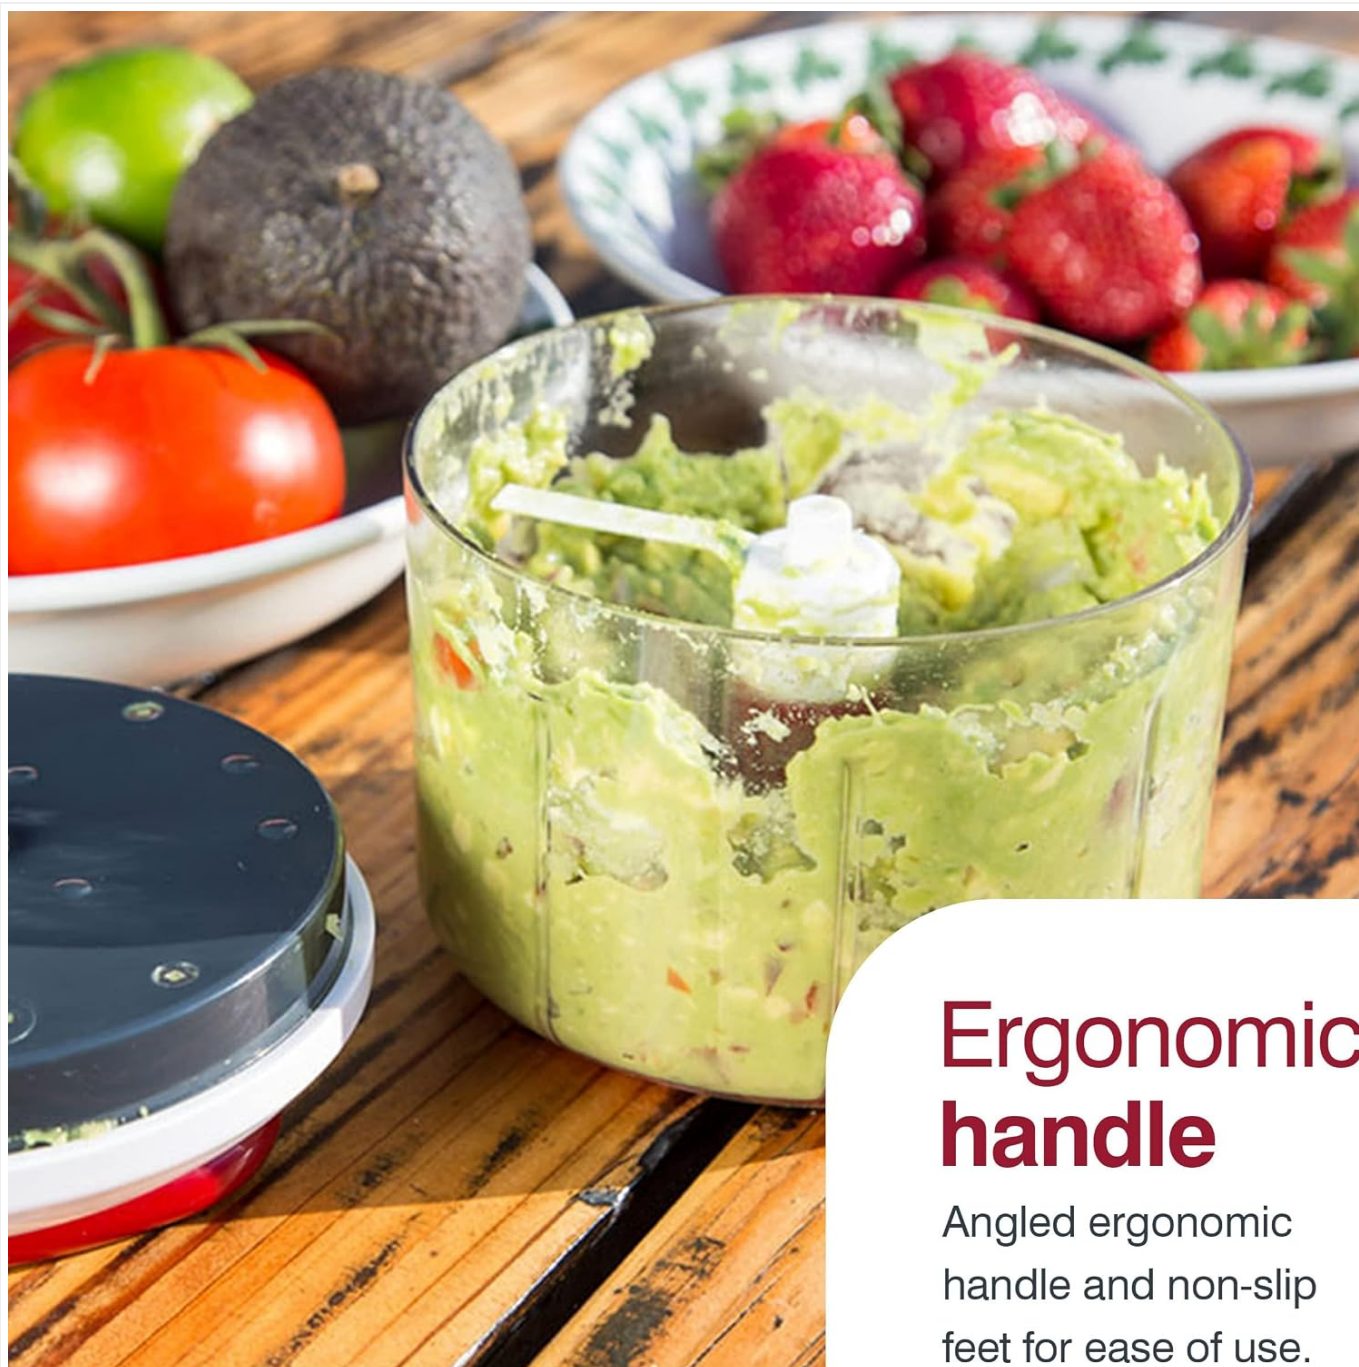

Ergonomic handle

Angled ergonomic handle and non-slip feet for ease of use.

Image 3: Zyliss Easy Pull Food Chopper with chopped vegetables inside, demonstrating its function.



Image 4: A hand demonstrating the pull mechanism of the Zyliss Easy Pull Food Chopper to activate the blades.

5. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your chopper:

- **Disassembly:** After each use, disassemble the chopper by removing the lid and then carefully lifting out the blade assembly.
- **Container and Blades:** The container base and blade assembly are dishwasher safe (top rack recommended) or can be washed by hand with warm, soapy water. Use a brush to clean around the blades carefully.
- **Lid Cleaning:** The lid contains the pull mechanism and should **not** be immersed in water or placed in a dishwasher. Wipe the lid clean with a damp cloth. If food particles get into the pull string area, use a small brush or toothpick to gently remove them. Ensure the lid is completely dry before storage.
- **Drying:** Ensure all parts are thoroughly dry before reassembling or storing to prevent rust on the blades and maintain hygiene.
- **Storage:** Store the chopper with the blade protector in place to prevent accidental cuts and keep blades sharp.

6. TROUBLESHOOTING

If you encounter issues with your Zyliss Easy Pull Food Chopper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blades not rotating or difficult to pull.	• Container is overloaded. • Ingredients are too large or too hard. • Lid not securely fastened.	• Reduce the amount of food in the container. • Cut ingredients into smaller pieces. • Ensure the lid is twisted and locked properly.
Food not chopped evenly.	• Not enough pulls. • Ingredients are sticking to the sides.	• Pull the cord more times for finer consistency. • Stop, remove the lid, scrape down the sides with a spatula, then continue chopping.
Water or food particles inside the lid mechanism.	• Lid was immersed in water or placed in dishwasher. • Food splashed up during chopping.	• Do not immerse the lid. Wipe clean with a damp cloth. • Use a small brush or toothpick to carefully remove particles. Ensure it dries completely before next use.

7. SPECIFICATIONS

- **Brand:** Zyliss

- **Model Number:** E910015U
- **Material:** Stainless Steel (blades), Plastic (container, lid)
- **Color:** Red (handle/accents), White (lid), Clear (container)
- **Product Dimensions:** 5.5"L x 5.5"W x 5.2"H
- **Item Weight:** 8.8 ounces
- **Recommended Uses:** Chopping, Grinding, Mincing, Mixing, Slicing
- **UPC:** 098389168367, 054067100159, 054067123660

8. WARRANTY AND SUPPORT

Zyliss products are designed for durability and performance. For information regarding warranty coverage, product registration, or customer support, please visit the official Zyliss website or contact their customer service department.

Official Zyliss Website: [Visit the Zyliss Store on Amazon](#)

Please have your model number (E910015U) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question