

[manuals.plus](#) /› [Samsung](#) /› [Samsung Galaxy Tab A 8-inch Wi-Fi Tablet \(SM-T350NZWAXAR\) User Manual](#)

Samsung SM-T350NZAAXAR

Samsung Galaxy Tab A 8-inch Wi-Fi Tablet (SM-T350NZWAXAR) User Manual

Model: SM-T350NZWAXAR | Brand: Samsung

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Samsung Galaxy Tab A 8-inch Wi-Fi Tablet. Please read it thoroughly before operating your device.

The Samsung Galaxy Tab A 8-inch Wi-Fi Tablet (Model SM-T350NZWAXAR) features an 8.0-inch touchscreen display, runs on Android 5.0 Lollipop, and is powered by a 1.2 GHz quad-core Samsung processor. It includes 16 GB of flash memory, 1.5 GB of RAM, and supports microSD cards up to 128GB for expanded storage. The display resolution is 1024 x 768 XGA. This tablet is designed for everyday use, offering a balance of performance and portability.

2. SETUP

2.1. Unboxing and Initial Charge

Upon receiving your Samsung Galaxy Tab A, carefully remove all contents from the packaging. The box typically includes the tablet itself. It is recommended to fully charge the device before its first use to ensure optimal battery calibration.

Contents of the box: Tablet

2.2. Inserting a MicroSD Card (Optional)

To expand your tablet's storage capacity (up to 128GB), you can insert a microSD card.

1. Locate the microSD card slot on the side of your tablet.
2. Using the provided ejection tool or a small paperclip, gently press into the small hole next to the slot to eject the card tray.
3. Place the microSD card into the tray with the gold contacts facing down, ensuring it is seated correctly.
4. Carefully reinsert the tray into the tablet until it clicks securely into place.

Image Description: A close-up view of a hand inserting a Samsung 32GB microSD card into the side slot of a Samsung Galaxy Tab A tablet. The tablet is silver/grey, and the microSD card is orange and white.

2.3. Powering On/Off

To power on your tablet, press and hold the Power button (usually on the right side) until the Samsung logo appears on the screen. To power off, press and hold the Power button, then select "Power off" from the options that appear on the screen.

3. OPERATING YOUR TABLET

3.1. Navigating the Interface

Your tablet runs on Android 5.0 Lollipop with Samsung's TouchWiz interface. Navigation is primarily done through the touchscreen. Swipe left or right on the home screen to access different panels. Use the physical Home button below the screen to return to the home screen, and the capacitive Back and Recent Apps buttons for navigation.

Image Description: The home screen of the Samsung Galaxy Tab A, displaying a clock, weather widget, and several app icons like Calendar, My Files, Memo, Google, Yahoo Mail, and Microsoft Apps. The background is a blue and green gradient.

3.2. Installing and Managing Apps

You can download and install applications from the Google Play Store. The tablet comes pre-installed with various apps, including Microsoft Office apps (Word, Excel, PowerPoint, OneNote, OneDrive, Skype).

Image Description: A screen capture of the Samsung Galaxy Tab A's app drawer, showing multiple pages of app icons. Icons for Gallery, Camera, Email, Chrome, and various other applications are visible.

3.3. Using Multi-Window

The Samsung Galaxy Tab A supports multi-window functionality, allowing you to run two apps simultaneously on the screen. To activate, press and hold the Recent Apps button, then select the desired applications from the recent apps list.

Your browser does not support the video tag.

Video Description: This video demonstrates the multi-window feature on the Samsung Galaxy Tab A, showing how to open and use two applications side-by-side on the tablet screen. It highlights the ease of multitasking by displaying a YouTube video and a web browser simultaneously.

3.4. Camera Features

The tablet is equipped with a 5-megapixel rear camera and a 2-megapixel front-facing camera. The camera app offers various modes and effects for capturing photos and videos.

Image Description: The camera application interface on the Samsung Galaxy Tab A, showing various shooting modes and settings. The screen displays a preview of a scene with options for auto, panorama, continuous shot, beauty face, sound & shot, and sports modes.

4. MAINTENANCE

4.1. Battery Management

The Samsung Galaxy Tab A 8-inch model is equipped with a 4200 mAh internal battery, offering excellent battery life (up to 10 hours of average use). To optimize battery performance, utilize the standard power saving mode or the Ultra power saving mode, which limits background data, CPU performance, and screen brightness.

Image Description: The battery settings screen of the Samsung Galaxy Tab A, showing options for power saving mode, ultra power saving mode, and display battery percentage. A graph illustrates battery usage over time, indicating remaining battery life and usage details.

4.2. Software Updates

Ensure your tablet's software is up to date for optimal performance and security. You can check for updates in the device settings under "About device" or "Software update." Regular updates provide new features, bug fixes, and security enhancements.

5. TROUBLESHOOTING

5.1. Common Issues and Solutions

- Device not responding:** If your tablet becomes unresponsive, press and hold the Power button for about 10 seconds to force a restart.
- Slow performance:** Close unused apps, clear app caches, or restart the device. Consider using the built-in Smart Manager app to optimize performance and free up RAM.
- Battery draining quickly:** Adjust screen brightness, disable unnecessary features (Wi-Fi, Bluetooth, GPS) when not in use, and check for background app usage in the battery settings.
- Wi-Fi connectivity issues:** Restart your tablet and your Wi-Fi router. Forget the Wi-Fi network in settings and then reconnect. Ensure your tablet is within range of the Wi-Fi signal.

6. SPECIFICATIONS

Feature	Detail
Model Name	Galaxy Tab A
Item Model Number	SM-T350NZWAXAR
Brand	Samsung
Screen Size	8 Inches
Screen Resolution	1024 x 768 pixels (XGA)
Processor	1.2 GHz Quad Core (Samsung Processor)
RAM	1.5 GB SDRAM
Internal Storage	16 GB Flash Memory
MicroSD Card Slot	Supports up to 128GB
Operating System	Android 5.0 Lollipop
Wireless Type	802.11abg (Wi-Fi)
Bluetooth	Yes (version 4.0 from video)
GPS	Yes (from video)
Average Battery Life	10 Hours
Battery Type	2 Lithium Ion batteries required (included)
Item Weight	10.9 ounces

Feature	Detail
Product Dimensions (LxWxH)	0.2 x 5.43 x 8.2 inches
Color	White
Rear Camera Resolution	5 MP (with autofocus and 4x digital zoom)
Front Camera Resolution	2 MP

7. WARRANTY AND SUPPORT

For detailed warranty information and technical support, please refer to the official Samsung website or contact Samsung customer service. It is advisable to keep your purchase receipt as proof of purchase for any warranty claims.

Online resources, FAQs, and contact information can be found on the official [Samsung Support website](#).