

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Taurus](#) /

› [Taurus Verona 12 Drip Coffee Maker User Manual](#)

**Taurus 920615000**

# Taurus Verona 12 Drip Coffee Maker User Manual

Model: 920615000

## INTRODUCTION

---

Thank you for choosing the Taurus Verona 12 Drip Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before first use and keep them for future reference.



Image: The Taurus Verona 12 Drip Coffee Maker, black in color, positioned on a clean white kitchen counter. A glass carafe is in place, and a jar of ground coffee with loose coffee beans is next to it.

## Important Safety Instructions

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.

## SETUP

---

### Unpacking and First Use

1. Carefully unpack your coffee maker and remove all packaging materials.
2. Wash the glass carafe, permanent filter, and filter basket in warm, soapy water. Rinse thoroughly and dry. These parts are also dishwasher safe.
3. Wipe the exterior of the coffee maker with a damp cloth. Do not immerse the main unit in water.
4. Before brewing coffee for the first time, operate the coffee maker with only water to clean the internal components. Fill the water reservoir to the maximum level, place the empty filter basket and carafe, and run a full brewing cycle. Discard the water. Repeat this process 2-3 times.

### Component Identification

- **Water Reservoir:** Located at the back, with a clear water level indicator.
- **Lid:** Covers the water reservoir and filter basket area.
- **Filter Basket:** Holds the permanent filter and coffee grounds.
- **Permanent Filter:** Reusable filter for coffee grounds.
- **Glass Carafe:** Collects brewed coffee, with a capacity of 1.2 liters (up to 12 cups).
- **Warming Plate:** Keeps the carafe warm after brewing.
- **On/Off Switch:** Initiates and stops the brewing process.

## OPERATING INSTRUCTIONS

---

### Brewing Coffee

1. **Fill Water Reservoir:** Open the lid and fill the water reservoir with fresh, cold water. Use the water level indicator on the side of the reservoir to measure the desired number of cups (up to 1.2L or 12 cups). Do not exceed the MAX fill line.
2. **Add Coffee Grounds:** Place the permanent filter into the filter basket. Add the desired amount of ground coffee into the permanent filter. A general guideline is one tablespoon of ground coffee per cup, but adjust to your taste.



Image: A person's hand uses a scoop to add ground coffee into the white permanent filter, which is seated in the filter basket of the coffee maker.

- 3. Position Carafe:** Ensure the glass carafe with its lid is correctly placed on the warming plate. The anti-drip system will not function if the carafe is not properly seated.
- 4. Start Brewing:** Close the lid securely. Plug the power cord into a suitable electrical outlet. Press the On/Off switch to start the brewing cycle. The indicator light will illuminate.



Image: A man in a grey t-shirt is shown operating the Taurus Verona 12 Drip Coffee Maker, looking down at the glass carafe as it brews coffee.

5. **Anti-Drip System:** The coffee maker features an anti-drip system, allowing you to temporarily remove the carafe during the brewing cycle to pour a cup of coffee. The brewing will pause and resume once the carafe is returned to its position. Do not remove the carafe for more than 30 seconds to prevent overflow.
6. **Keep Warm Function:** After the brewing cycle is complete, the warming plate will automatically keep the coffee hot for a period of time. The coffee maker will automatically shut off after a certain period for safety and energy saving.
7. **Serving:** Carefully remove the carafe from the warming plate to pour and serve coffee.



Image: A man is pouring freshly brewed coffee from the glass carafe of the Taurus Verona 12 into a small clear glass, demonstrating the serving process.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

### Daily Cleaning

1. Always unplug the coffee maker and allow it to cool completely before cleaning.
2. Remove the glass carafe, permanent filter, and filter basket. Discard used coffee grounds.
3. Wash the carafe, permanent filter, and filter basket in warm, soapy water. Rinse thoroughly. These parts are top-rack dishwasher safe.
4. Wipe the exterior surfaces of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
5. Do not immerse the main unit, power cord, or plug in water or any other liquid.

### Descaling

Mineral deposits (limescale) can build up in your coffee maker over time, affecting its performance and the taste of

your coffee. Descale your coffee maker every 2-4 weeks, depending on water hardness and frequency of use.

1. Fill the water reservoir with a mixture of white vinegar and water (1 part vinegar to 2 parts water). For example, 400ml vinegar and 800ml water for a 1.2L capacity.
2. Place the empty permanent filter and filter basket into position, and ensure the empty carafe is on the warming plate.
3. Turn on the coffee maker and let it complete half of a brewing cycle.
4. Turn off the coffee maker and let it soak for at least 15 minutes to allow the descaling solution to work.
5. Turn the coffee maker back on and let the remaining solution brew through.
6. Discard the vinegar solution from the carafe.
7. Run 2-3 full brewing cycles with fresh, clean water to rinse out any residual vinegar taste or smell.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Coffee does not brew.	<ul style="list-style-type: none"><li>• Coffee maker not plugged in.</li><li>• Power switch not turned on.</li><li>• Water reservoir empty.</li></ul>	<ul style="list-style-type: none"><li>• Ensure the appliance is securely plugged into a working outlet.</li><li>• Press the On/Off switch.</li><li>• Fill the water reservoir with water.</li></ul>
Coffee overflows from the filter basket.	<ul style="list-style-type: none"><li>• Too much coffee grounds used.</li><li>• Coffee grounds too fine.</li><li>• Carafe not properly seated, activating anti-drip for too long.</li><li>• Clogged filter basket/permanent filter.</li></ul>	<ul style="list-style-type: none"><li>• Reduce the amount of coffee grounds.</li><li>• Use medium-ground coffee.</li><li>• Ensure carafe is correctly placed. Do not remove for more than 30 seconds.</li><li>• Clean the filter basket and permanent filter thoroughly. Descale if necessary.</li></ul>
Coffee tastes weak or too strong.	<ul style="list-style-type: none"><li>• Incorrect coffee-to-water ratio.</li><li>• Coffee grounds too coarse/fine.</li></ul>	<ul style="list-style-type: none"><li>• Adjust the amount of coffee grounds to your preference.</li><li>• Use medium-ground coffee for optimal extraction.</li></ul>
Brewing is slow.	<ul style="list-style-type: none"><li>• Mineral buildup (limescale).</li></ul>	<ul style="list-style-type: none"><li>• Perform a descaling cycle as described in the Maintenance section.</li></ul>

## SPECIFICATIONS

---

**Model:** Taurus Verona 12

**Model Number:** 920615000

**Power:** 680 Watts

**Voltage:** 240 Volts

**Capacity:** 1.2 Liters (approx. 12 cups)

**Dimensions (L x W x H):** 31.19 x 23.5 x 18.59 cm

**Weight:** 1.5 Kilograms

**Material:** Plastic (housing), Glass (carafe)

**Features:** Permanent filter, Anti-drip system, Warming plate, Automatic shut-off

## **WARRANTY AND SUPPORT**

---

### **Warranty Information**

Taurus products are manufactured to high-quality standards. This product is covered by a limited warranty against manufacturing defects from the date of purchase. Please refer to the warranty card included with your product packaging for specific terms and conditions, including the warranty period and coverage details. Keep your proof of purchase (receipt) for warranty claims.

### **Customer Support**

If you have any questions, require assistance, or encounter issues not covered in this manual, please contact Taurus customer support. You can find contact information (phone numbers, email, or website) on the product packaging or on the official Taurus website.

For online support and frequently asked questions, visit: [www.taurus-home.com](http://www.taurus-home.com)

© 2023 Taurus. All rights reserved.