

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VIZIO](#) /

› [VIZIO XRT122 TV Remote Control Instruction Manual](#)

VIZIO XRT122

VIZIO XRT122 TV Remote Control Instruction Manual

Model: XRT122

INTRODUCTION

This instruction manual provides comprehensive guidance for the setup, operation, and maintenance of your VIZIO XRT122 TV Remote Control. Designed for seamless compatibility with various VIZIO E Series TV models, this remote offers intuitive control over your television's functions and integrated streaming services.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Front view of the VIZIO XRT122 remote control, showing its buttons and overall dimensions. The battery compartment is located on the reverse side.

Initial Use

The VIZIO XRT122 remote control is pre-programmed for compatible VIZIO E Series TVs and typically requires no additional setup or programming. Once batteries are installed, point the remote at your VIZIO TV and begin operation.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions for optimal control of your VIZIO E Series TV.



Image: A detailed front view of the VIZIO XRT122 remote control, highlighting the layout and labels of all operational buttons.

Button Functions

- **POWER (●):** Turns the TV on or off.

- **INPUT:** Cycles through available input sources (HDMI 1, HDMI 2, AV, etc.).
- **amazon / NETFLIX / iHeart Radio:** Direct access buttons for these streaming applications.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record):** Controls media playback.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **MENU:** Accesses the TV's main menu.
- **EXIT:** Exits the current menu or application.
- **INFO:** Displays information about the current program or input.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and selects options.
- **BACK:** Returns to the previous screen or menu.
- **GUIDE:** Opens the electronic program guide (if available).
- **VOL (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV audio.
- **CH (Channel +/-):** Changes the TV channel.
- **PIC:** Accesses picture settings.
- **Number Pad (0-9, ENTER, -):** Directly enters channel numbers or other numerical inputs.

Compatible VIZIO E Series Models

The VIZIO XRT122 remote is compatible with a wide range of VIZIO E Series TV models, including but not limited to:

- E32-C1, E50-C1, E48-C2, E43-C2, E420-B1, E40-C2, E40x-C2
- E390i-B1E, E280i-B1, E241i-B1, E231-B1
- E550i-B2, E55-C1, E55-C2, E60-C3, E65x-C2, E65-C3, E700i-B3, E70-C3
- And other VIZIO E Series models.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners, as these can damage the remote's finish or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote is pointed directly at the TV's infrared sensor.
 - Check if the batteries are correctly installed with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Remove any obstructions between the remote and the TV.
- **Specific buttons not working:**
 - This could indicate a faulty button or internal issue. If other buttons work, try replacing batteries first.
- **TV not turning on/off:**
 - Verify the TV is plugged into a power outlet and receiving power.

- Ensure the remote's batteries are fresh.

SPECIFICATIONS

Model:	XRT122
Brand:	VIZIO
Compatible Devices:	VIZIO E Series TVs (e.g., E32-C1, E50-C1, E48-C2, etc.)
Power Source:	2 x AAA Batteries (required)
Product Dimensions:	Approximately 7 x 5 x 2 inches (178 x 127 x 51 mm)
Item Weight:	Approximately 2.39 ounces (67.7 grams)
Color:	Black



Image: An angled view of the VIZIO XRT122 remote control, showcasing its ergonomic design and button layout from a different perspective.

WARRANTY INFORMATION

This VIZIO XRT122 TV Remote Control typically comes with a **30-day warranty** from the date of purchase. Please retain your proof of purchase for any warranty claims. For specific warranty terms and conditions, refer to the documentation provided by your retailer or VIZIO's official support channels.

SUPPORT

For further assistance or inquiries regarding your VIZIO XRT122 remote control, please visit the official VIZIO support website or contact their customer service. Specific contact details can usually be found on the VIZIO website or within your TV's user manual.



