

[Manuals.plus](#) /

› [Xtreme](#) /

› Outdoor Power Xtreme Equipment X0111 PTO Clutch User Manual

Xtreme X0111

Outdoor Power Xtreme Equipment X0111 PTO Clutch User Manual

Model: X0111

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Outdoor Power Xtreme Equipment X0111 PTO Clutch. This clutch is designed for compatibility with various Hustler engines and other models, serving as a critical component in power transmission for outdoor equipment.

Please read this manual thoroughly before attempting any installation or operation to ensure safety and optimal performance of the unit.

SAFETY INFORMATION

Always observe the following safety precautions when handling, installing, or maintaining the PTO clutch:

- **Disconnect Power:** Ensure all power sources to the equipment are disconnected and secured before beginning any work on the clutch.
- **Wear Protective Gear:** Always wear appropriate personal protective equipment (PPE), including safety glasses and gloves.
- **Professional Installation Recommended:** Installation of this component may require specialized tools and knowledge. If you are unsure, consult a qualified technician.
- **Inspect for Damage:** Before installation, carefully inspect the clutch for any signs of shipping damage or manufacturing defects. Do not install a damaged unit.
- **Proper Tools:** Use only the correct tools for installation and removal to prevent damage to the clutch or injury.

PRODUCT OVERVIEW

The X0111 PTO Clutch is engineered for durability and performance, featuring several key design elements:

- Xtreme Torque Series with 125 ft. lbs. torque capacity.
- High Torque Cool Coil Upgrade for improved heat dissipation.
- High Temperature Bearing Upgrade for extended lifespan.
- Replaceable Pulley Bearing for ease of maintenance.
- Super Smooth "Xtreme Precision" Machined Pulley.

- Integrated Water Tight Wire Harness for reliable electrical connection.



Front view of the Xtreme X0111 PTO Clutch, showcasing its overall design and integrated wiring.



Top-down view of the Xtreme X0111 PTO Clutch, highlighting the pulley and central shaft.



Close-up of the integrated water-tight wire harness, designed for reliable electrical connection in various conditions.



Detail of the high-temperature bearing, an upgrade designed for enhanced

durability and performance under demanding conditions.



View of the precision-machined pulley and the replaceable bearing, emphasizing the smooth operation and serviceability of the clutch.



Close-up of the tough stainless steel rivets, indicating robust construction and secure assembly of the clutch components.

SETUP AND INSTALLATION

Proper installation is crucial for the safe and effective operation of the PTO clutch. Refer to your equipment's service manual for specific instructions related to your model.

1. **Preparation:** Ensure the equipment is turned off, spark plug wire is disconnected, and the battery is disconnected. Allow the engine to cool.
2. **Access:** Gain access to the existing PTO clutch. This may involve removing deck belts, guards, or other components.
3. **Removal of Old Clutch:** Carefully disconnect the wiring harness and remove the retaining bolt(s) or nut(s) securing the old clutch to the crankshaft. Note the orientation of any washers or spacers.
4. **Crankshaft Inspection:** Inspect the crankshaft for any damage, wear, or debris. Clean the crankshaft thoroughly before installing the new clutch.
5. **New Clutch Installation:** Slide the new X0111 PTO clutch onto the crankshaft, ensuring it seats properly. Align any anti-rotation devices (e.g., keyways, pins) with the engine block or frame.
6. **Secure Clutch:** Install the retaining bolt(s) or nut(s) and torque them to the manufacturer's specifications (refer to your equipment's manual).
7. **Connect Wiring:** Connect the integrated water-tight wire harness of the new clutch to the equipment's electrical system. Ensure a secure and proper connection.
8. **Reassembly:** Reinstall any removed belts, guards, or other components. Ensure all parts are securely fastened.
9. **Final Check:** Before starting the engine, manually check that the pulley rotates freely and that there is no interference with other components.

OPERATING INSTRUCTIONS

The X0111 PTO clutch engages and disengages power to the driven accessory (e.g., mower blades). Its operation is typically controlled by a switch on your equipment's control panel.

- **Engagement:** To engage the PTO, ensure the engine is running at the recommended RPM (consult your equipment's manual) and activate the PTO switch. The clutch will engage, transferring power to the accessory.
- **Disengagement:** To disengage the PTO, deactivate the PTO switch. The clutch will disengage, stopping power to the accessory.
- **Smooth Operation:** Avoid rapid or repeated engagement/disengagement, especially under heavy load, as this can reduce clutch lifespan.
- **Listen for Abnormalities:** During operation, listen for any unusual noises, vibrations, or smells coming from the clutch area. If detected, disengage the PTO immediately and investigate.

MAINTENANCE

Regular maintenance helps ensure the longevity and reliable performance of your PTO clutch.

- **Keep Clean:** Periodically clean the exterior of the clutch to remove grass clippings, dirt, and debris that can accumulate and cause overheating or interference.
- **Inspect Wiring:** Check the wire harness for any signs of fraying, cuts, or loose connections. Repair or replace as necessary.
- **Pulley and Belt Inspection:** Inspect the pulley for wear or damage. Ensure the belt is properly tensioned and free from cracks or excessive wear.
- **Bearing Check:** While the X0111 features a high-temperature, replaceable bearing, it's good practice to listen for any unusual bearing noise during operation. If excessive noise or play is detected, the bearing may need replacement.
- **Storage:** If storing equipment for an extended period, ensure the clutch is clean and dry.

TROUBLESHOOTING

This section addresses common issues you might encounter with your PTO clutch.

Problem	Possible Cause	Solution
Clutch does not engage	No power to clutch; faulty switch; wiring issue; clutch coil failure; incorrect air gap.	Check fuses and electrical connections. Test PTO switch. Inspect wiring harness for damage. Consult a technician for coil testing or air gap adjustment.
Clutch engages but slips	Worn clutch surfaces; incorrect belt tension; excessive load; low voltage.	Check belt tension and condition. Reduce load if possible. Verify system voltage. Clutch may need replacement if surfaces are worn.
Excessive noise or vibration	Worn bearing; loose mounting bolts; bent crankshaft; debris in clutch.	Inspect and replace bearing if necessary. Tighten mounting bolts. Check crankshaft for straightness. Clean clutch area.
Clutch overheats	Excessive slipping; continuous heavy load; poor airflow; incorrect air gap.	Ensure proper engagement. Reduce continuous heavy loads. Clean clutch area for better airflow. Consult technician for air gap adjustment.

For issues not listed or if solutions do not resolve the problem, it is recommended to consult a qualified service technician.

SPECIFICATIONS

Attribute	Detail
Model Number	X0111
Crankshaft Diameter	1.000 inches
Pulley Diameter	6.300 inches
Rotation	Counter Clockwise
Belt Type	A/B Belt
Xtreme Torque	125 ft. lbs.
Product Dimensions (L x W x H)	11 x 9 x 6 inches
Item Weight	14 pounds
Manufacturer	Outdoor Power Xtreme Equipment
Replaces OEM Numbers	Big Dog: 784835, 784835K; Hustler: 784835, 784835K

WARRANTY AND SUPPORT

Specific warranty details for your Xtreme PTO Clutch are typically provided at the point of purchase or on the manufacturer's official website. Please retain your proof of purchase for warranty claims.

For technical support, installation assistance, or warranty inquiries, please contact Outdoor Power Xtreme Equipment directly through their official channels. Refer to the packaging or their website for current contact information.

Disclaimer: Xtreme Mower Clutches is a registered trademark of Xtreme Mower Clutches Inc. (XMCI). XMCI does not imply any association or affiliation with any OEM Manufacturer including Warner Electric, Ogura Industrial Corp., John Deere, Exmark/Toro, Hustler, Husqvarna, Cub Cadet, or any of its associates or affiliates, trademarks or copyrights. The terms "OEM Upgrade" or "Warner Upgrade" refer only to specific product features such as the billet pulley, stainless steel braking rivets, replaceable pulley bearing, Xtreme wire protection system, and Cool coil technology, which are unique to the Xtreme Mower Clutch product line.

© 2024 Outdoor Power Xtreme Equipment. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00VF1907M>

More documents and user manuals: <https://manuals.plus/>