

Logitech K400 Plus (920-007127)

Logitech K400 Plus Wireless Touch Keyboard User Manual

Brand: Logitech

Model: K400 Plus (920-007127)

PRODUCT OVERVIEW

The Logitech K400 Plus is a wireless touch keyboard designed for comfortable control of your computer connected to a TV. It features an integrated touchpad, providing a seamless navigation experience from your couch. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your device.



Image: Top view of the Logitech K400 Plus Wireless Touch Keyboard, showcasing its compact design and integrated touchpad.

SETUP GUIDE

1. Unpacking and Battery Installation

Carefully remove the keyboard and its components from the packaging. The K400 Plus requires two AA batteries for operation. Locate the battery compartment on the underside of the keyboard, open it, and insert the batteries, ensuring correct polarity. The keyboard comes with pre-installed batteries, often with a pull tab to activate them.

2. Connecting the Unifying Receiver

The Logitech K400 Plus connects wirelessly via a Logitech Unifying USB receiver. Plug the small USB receiver into an available USB port on your computer or smart TV. The keyboard should automatically connect within a few seconds. No additional software installation is typically required for basic functionality.

14 cm
5.5"



35 cm / 14"



Gewicht: 390 g

Image: The Logitech K400 Plus keyboard shown with its approximate dimensions, the included USB Unifying receiver, and two AA batteries, illustrating the components for setup.



PLUG & PLAY-KOMFORT

Image: A family comfortably using the Logitech K400 Plus keyboard while seated on a couch, demonstrating its intended use for media control with a connected TV.

OPERATING INSTRUCTIONS

Keyboard Functions

The K400 Plus features a full set of standard keyboard keys, including function keys (F1-F12) that can be used for media control (play/pause, volume, mute) by pressing the 'Fn' key in combination with the respective function key. The keyboard layout is German, indicated by specific key markings such as 'Ä', 'Ö', 'Ü', and 'ß'.

Touchpad Navigation

The integrated 3.5-inch touchpad supports multi-touch gestures for intuitive navigation. Use one finger to move the cursor, two fingers to scroll, and tap to click. The dedicated left and right-click buttons are located below the touchpad for precise control.

- **Single-finger tap:** Left-click
- **Two-finger tap:** Right-click
- **Two-finger scroll:** Scroll vertically or horizontally



Image: A clear top-down view of the Logitech K400 Plus keyboard, highlighting the German key layout and the integrated touchpad on the right side.



Image: A close-up view of the integrated touchpad on the Logitech K400 Plus, showing the yellow accent line and the distinct left and right-click buttons below it.

MAINTENANCE

Battery Replacement

When the keyboard's performance degrades or it stops responding, it may be time to replace the AA batteries. Open the battery compartment on the underside of the keyboard, remove the old batteries, and insert new ones, ensuring correct orientation. Dispose of used batteries responsibly.

Cleaning the Keyboard and Touchpad

To clean the keyboard, use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution. Avoid excessive moisture. For the touchpad, use a dry, soft cloth to wipe away dust and smudges. Do not use abrasive cleaners or immerse the device in liquid.

TROUBLESHOOTING

Connection Issues

- **Check Receiver:** Ensure the USB Unifying receiver is securely plugged into a working USB port on your computer or TV.
- **Battery Check:** Verify that the batteries are correctly installed and have sufficient charge. Replace them if necessary.
- **Proximity:** Ensure the keyboard is within the operational range of the receiver (typically up to 10 meters or 33 feet).
- **Interference:** Move the keyboard and receiver away from other wireless devices or large metal objects that might cause interference.

Unresponsive Keys or Touchpad

- **Restart Device:** Try restarting the computer or TV to which the keyboard is connected.
- **Re-pair:** If issues persist, you may need to re-pair the keyboard with the Unifying receiver using Logitech's Unifying software (available for download from Logitech's support website).

- **Clean:** Ensure no debris is lodged under the keys or on the touchpad surface.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	920-007127
Connectivity Technology	Wireless (2.4 GHz via Unifying Receiver)
Compatible Devices	PC
Keyboard Description	Wireless Touch Keyboard
Item Weight	13.4 ounces (approx. 380g)
Product Dimensions (LxWxH)	13.78 x 5.51 x 0.79 inches (35 x 14 x 2 cm)
Color	Black
Batteries	2 AA batteries required
Language	German (Keyboard Layout)
Manufacturer	Logitech



Image: Side profile view of the Logitech K400 Plus keyboard, illustrating its slim and ergonomic design.





WARRANTY AND SUPPORT

Logitech products typically come with a limited hardware warranty. For specific warranty terms and conditions applicable to your Logitech K400 Plus keyboard, please refer to the warranty information included with your product or visit the official Logitech website.

For technical support, frequently asked questions, and driver downloads, please visit the Logitech support website. You can find comprehensive resources and contact options there.

Visit the official Logitech Store for more information:[Logitech Store on Amazon](#)

Related Documents

	<p>Logitech MK120 Corded Keyboard and Mouse Combo - Product Overview</p> <p>Discover the Logitech MK120, a durable and reliable corded keyboard and mouse combo offering simplicity, comfort, and plug-and-play functionality. Ideal for everyday use with its full-size design, spill-resistant keyboard, and ambidextrous mouse.</p>
	<p>Logitech MX Keys Mini for Business Wireless Keyboard - Features and Specifications</p> <p>Discover the Logitech MX Keys Mini for Business wireless keyboard, featuring a compact design, smart backlighting, and versatile connectivity for enhanced productivity. Explore its specifications and compatibility.</p>
	<p>Logitech ERGO K860 Split Keyboard for Business: Ergonomic Wireless Keyboard</p> <p>Discover the Logitech ERGO K860 Split Keyboard for Business, a science-driven ergonomic keyboard designed for enhanced comfort and productivity. Featuring a curved split key frame, integrated numpad, ultra-quiet typing, and versatile wireless connectivity via Logi Bolt or Bluetooth Low Energy.</p>
	<p>Logitech MK540 Advanced Wireless Keyboard and Mouse Combo</p> <p>Discover the Logitech MK540 Advanced Wireless Combo, featuring a full-size keyboard with comfortable, familiar keys and a sculpted, ambidextrous mouse for precise control. Enjoy reliable wireless connectivity with the Logitech Unifying receiver, long battery life, and customizable shortcuts for enhanced productivity. Ideal for users seeking comfort and efficiency.</p>