

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Laugh & Learn Smart Stages Scooter Ride-On User Manual

Fisher-Price CGX01

Fisher-Price Laugh & Learn Smart Stages Scooter Ride-On User Manual

Model: CGX01

1. INTRODUCTION

Welcome to the world of learning and fun with the Fisher-Price Laugh & Learn Smart Stages Scooter! This interactive ride-on toy is designed to grow with your child, offering engaging activities and educational content across three Smart Stages levels. It helps develop gross and fine motor skills while teaching letters, numbers, shapes, colors, and opposites. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure a safe and enjoyable experience for your toddler.



Image 1.1: The Fisher-Price Laugh & Learn Smart Stages Scooter in use by a toddler.

2. SAFETY INFORMATION

Please read and understand all safety instructions before allowing a child to use this product. Failure to follow these instructions may result in injury.

- **Adult Supervision Required:** Always supervise children when they are using the scooter.
- **Age and Weight Limit:** Suitable for toddlers ages 12 months to 3 years. Maximum weight capacity is 55 lb (25 kg).
- **Use on Flat Surfaces:** Use the scooter only on flat, level surfaces indoors. Avoid stairs, inclines, uneven terrain, and near swimming pools or other bodies of water.
- **Clear Play Area:** Ensure the play area is clear of obstacles, furniture, and other hazards.
- **No Public Roads:** This toy is not intended for use on public roads or sidewalks.

- **Battery Safety:** Follow all battery safety guidelines during installation and replacement. Do not mix old and new batteries, or different types of batteries.

3. WHAT'S IN THE BOX

Your Fisher-Price Laugh & Learn Smart Stages Scooter package includes:

- 1 x Fisher-Price Laugh & Learn Smart Stages Scooter (main unit)

4. SETUP

4.1. Battery Installation

The scooter requires 2 AA (LR6) alkaline batteries (not included).

1. Locate the battery compartment on the underside of the scooter.
2. Using a Phillips head screwdriver, loosen the screw in the battery compartment door and remove the door.
3. Insert 2 new AA (LR6) alkaline batteries, ensuring the + and - terminals are oriented correctly as indicated inside the compartment.
4. Replace the battery compartment door and tighten the screw. Do not overtighten.

4.2. Handlebar Assembly

The handlebar unit needs to be snapped into place.

1. Align the handlebar post with the opening on the front of the scooter body.
2. Push down firmly until you hear a "click," indicating it is securely locked into place.
3. Ensure the handlebars are stable and do not wobble before use.



Image 4.1: Product packaging illustrating features and assembly.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off and Volume Control

- Locate the power switch and volume control on the dashboard.
- Slide the switch to the "ON" position to activate the scooter.
- Adjust the volume to your preferred setting using the volume control switch.

5.2. Smart Stages Selector

The Smart Stages technology allows you to change the learning content as your child grows.

- **Level 1 - Explore (12M+):** Introduces first words and sounds to spark curiosity.
- **Level 2 - Encourage (18M+):** Prompts your child through questions and simple directions.
- **Level 3 - Pretend (24M+):** Encourages imaginative fun and early role-play.
- Slide the Smart Stages selector switch to choose the appropriate learning level for your child.

5.3. Interactive Dashboard

The scooter features an interactive dashboard with various buttons and a turn-key clicker:

- **Shape Buttons:** Press the three shape buttons (triangle, circle, square) to activate learning songs, sounds, and phrases related to numbers, shapes, and colors.
- **Horn:** Press the horn button to hear fun horn sounds.
- **Turn-Key Clicker:** Turn the key to hear realistic engine sounds and phrases.

5.4. Motion-Activated Music and Sounds

The scooter rewards your child as they scoot along with motion-activated music and sounds, encouraging active play and exploration.



3 Smart Stages® levels teach numbers, opposites & more

Image 5.1: Detailed view of the interactive dashboard.



Roll along for fun music and sounds

Image 5.2: Toddler engaging with the scooter's motion-activated features.

6. FEATURES

- **Smart Stages Technology:** 3 levels of learning content that adapt as your child grows.
- **Educational Content:** Teaches letters, numbers, shapes, colors, and opposites through songs, sounds, and phrases.
- **Interactive Dashboard:** Features 3 shape buttons, a horn, and a turn-key clicker for engaging play.
- **Motion-Activated:** Music and sounds activate as the child scoots, encouraging movement.
- **Stable Design:** Wide-wheel base provides stability, making it easy for little ones to balance, get on, and get off.
- **Developmental Benefits:** Helps foster gross motor skills (scooting, balancing) and fine motor skills (pressing buttons, turning key).

7. MAINTENANCE

7.1. Cleaning

To clean the scooter, wipe it with a damp cloth using a mild soap solution. Do not immerse the toy in water. Avoid using harsh cleaners or abrasives.

7.2. Battery Care

- Remove batteries if the toy is to be stored for an extended period.
- Dispose of used batteries properly according to local regulations.
- Never dispose of batteries in a fire.

8. TROUBLESHOOTING

Problem	Possible Solution
No sound or lights	Ensure the power switch is in the 'ON' position. Check if batteries are installed correctly (+/-). Replace with fresh AA alkaline batteries.
Scooter not moving smoothly	Ensure the scooter is being used on a flat, hard surface. Check wheels for any obstructions.

9. SPECIFICATIONS

Feature	Detail
Brand	Fisher-Price
Model Number	CGX01
Age Range	12 - 36 months
Maximum Weight	55 lb (25 kg)
Material Type	Plastic
Item Weight	6 Pounds
Item Dimensions (L x W x H)	22.4"L x 10.13"W x 16.14"H

Feature	Detail
Assembly Required	No (Handlebar snap-in)

10. WARRANTY AND SUPPORT

According to product information, there is **No Warranty** explicitly provided for this item.

For any questions, concerns, or further assistance with your Fisher-Price Laugh & Learn Smart Stages Scooter, please contact Fisher-Price customer service directly. Contact information can typically be found on the product packaging or on the official Fisher-Price website.

© 2024 Fisher-Price. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question