

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Imaginext Ultra T-rex Model CHG26 Instruction Manual

Fisher-Price CHG26

Fisher-Price Imaginext Ultra T-rex Instruction Manual

MODEL: CHG26

Introduction

This manual provides instructions for the assembly, operation, and maintenance of the Fisher-Price Imaginext Ultra T-rex, Model CHG26. Please read all instructions carefully before use to ensure proper function and safety.

Package Contents

Verify that all items listed below are present in your package:

- 1 x Ultra T-rex figure
- 3 x Imaginext figures with helmets and accessories
- 4 x Boulders
- 4 x Projectiles
- 1 x Tethered projectile claw
- Additional accessories: jail, trap door, weapon storage, glider, boulder launcher, storage on back



Image: The Ultra T-rex figure with all included accessories, such as figures, boulders, and projectiles, displayed separately.

Assembly Instructions

The Ultra T-rex requires minor assembly. Follow these steps:

1. Carefully remove all components from the packaging.
2. Connect the main body sections of the T-rex as indicated in the included quick-start guide (not detailed here).
3. Attach any removable accessories such as the jail, trap door, weapon storage, glider, boulder launcher, and storage components to their designated locations on the T-rex.
4. Insert 4 AA batteries into the battery compartment. Ensure correct polarity.



Image: The Ultra T-rex in a forward-leaning, walking stance, demonstrating its articulated structure.

Operating Instructions

The Ultra T-rex features multiple interactive functions controlled by Power Pads and buttons:

- **Walking Action:** Turn the Power Pad located behind the T-rex's tail. The T-rex will take four steps forward, accompanied by sound effects.
- **Standing Tall & Lights:** Turn the Power Pad located above the T-rex's left hip. The T-rex will rise to its full height of 2.5 feet, and the LED lights in its spikes and eyes will illuminate.
- **Chomping & Projectile Firing (Mouth):** Turn the third Power Pad to open and close the T-rex's mouth, producing chomping sound effects. This action also fires projectiles from its mouth.
- **Boulder Launchers (Chest):** Press the button located on the T-rex's chest to launch boulders.
- **Projectile Claw:** Press the lever to fire the tethered projectile claw.



Image: The Ultra T-rex standing at its full height, showcasing its impressive size and detailed design.



Image: A child's hand placing a projectile into one of the T-rex's launchers, demonstrating the loading mechanism.

Official Product Video: Fisher-Price Imaginext Ultra T-Rex



Video: An official demonstration of the Fisher-Price Imaginext Ultra T-Rex, highlighting its various features and actions.

Features

- Three Power Pads for interactive play.
- Motorized walking action with sound effects.
- Raises to a full height of 2.5 feet.
- LED lights in spikes and eyes.
- Chomping mouth action with sound effects and projectile firing.
- Two chest-mounted boulder launchers.
- Tethered projectile claw.
- Includes jail, trap door, weapon storage, glider, and storage on back.

Maintenance

To ensure the longevity of your Ultra T-rex:

- Wipe the toy with a clean, damp cloth to remove dust and dirt. Do not immerse in water.

- Remove batteries if the toy will not be used for an extended period to prevent leakage.
- Store the toy in a cool, dry place away from direct sunlight.
- Regularly check for any loose parts or damage. Discontinue use if significant damage is found.

Troubleshooting

If you encounter issues with your Ultra T-rex, refer to the following common solutions:

- **No Power/No Sound:** Ensure batteries are correctly installed and are not depleted. Replace with fresh AA batteries if necessary. Check that the on/off switch (if present) is in the 'on' position.
- **Movement Issues:** Verify that no debris is obstructing the T-rex's legs or wheels. Ensure the Power Pad for walking is fully turned. The toy performs best on hard, flat surfaces.
- **Projectiles Not Firing:** Check that projectiles are correctly loaded into their respective launchers. Ensure the activation buttons/levers are fully pressed.

Specifications

- **Product Dimensions:** 16 x 8 x 30 inches
- **Item Weight:** 11.53 pounds
- **Model Number:** CHG26
- **Manufacturer Recommended Age:** 36 months - 8 years
- **Batteries:** 4 AA batteries required (not included)
- **Manufacturer:** Fisher-Price

Safety Information

No specific safety warnings are applicable beyond general toy safety guidelines. Always supervise children during play. Keep small parts away from children under 3 years of age to prevent choking hazards.

Warranty and Support

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Fisher-Price website. Please retain your purchase receipt for any warranty claims.