

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Playmobil](#) /

› [Playmobil 6624 Santa's Farm Advent Calendar Instruction Manual](#)

Playmobil 6624

Playmobil 6624 Santa's Farm Advent Calendar Instruction Manual

INTRODUCTION

Welcome to your Playmobil 6624 Santa's Farm Advent Calendar. This manual provides essential information for setting up, operating, and maintaining your advent calendar to ensure a delightful experience throughout the holiday season.

Safety Information

WARNING: Not suitable for children under 3 years. Contains small parts which may present a choking hazard.

Recommended age: 4 years and up.



This image displays the complete Playmobil 6624 Santa's Farm Advent Calendar set. It features Santa Claus, an angel, and a child driving a green tractor. Numerous farm animals are present, including cows, goats, sheep, chickens, cats, dogs, and smaller creatures like mice and birds. Accessories such as a red cart, a birdhouse, hay bales, and feed troughs are also visible, all set against a snowy farm backdrop with a barn in the distance.

SETUP

Unpacking the Advent Calendar

Carefully remove the advent calendar from its outer packaging. Identify the main calendar box with 24 numbered windows.

Preparing the Play Scene

The calendar includes a cardboard scene. Gently unfold and assemble this scene according to the illustrations provided on the packaging. This scene will serve as the backdrop for your daily figures and accessories. It is recommended to set up the cardboard scene first, bending the fold lines to ensure stability. This provides a complete environment for the figures as they are revealed.

Initial Inspection

Before starting, ensure all packaging materials are removed and dispose of them properly. Verify that no small parts are left within the packaging.

OPERATING INSTRUCTIONS

The Playmobil 6624 Advent Calendar is designed to reveal a new surprise each day, gradually building a festive farm scene leading up to Christmas.

Daily Operation

1. **Starting December 1st:** Each day, open the window corresponding to the current date. The windows are numbered from 1 to 24.
2. **Discover the Surprise:** Behind each window, you will find a Playmobil figure or accessory.
3. **Build Your Scene:** Add the newly discovered item to your assembled farm play scene. Over 24 days, you will gradually build a complete Christmas farm setting with all its characters and elements.
4. **Interactive Play:** The set includes Santa Claus, an angel, a boy on a tractor, various farm animals (cow, goat, sheep, chickens, cats, dogs, mice, birds), a cart, a birdhouse, and numerous accessories like hay bales, food, and a toy sack. Use these items to create imaginative farm stories and scenarios.

Key Components

- **Santa Claus Figure:** A central character, often depicted caring for animals or delivering gifts.
- **Angel Figure:** Assists Santa with various farm duties.
- **Boy Figure with Tractor:** Used for transporting food, hay, and other farm items.
- **Farm Animals:** A diverse collection of animals including cows, goats, sheep, chickens, cats, dogs, and smaller creatures like mice and birds. Many animals come with their young, encouraging nurturing play.
- **Accessories:** Includes a red cart, a birdhouse, hay bales, feed troughs, milk cans, and a sack filled with toys, enhancing the play experience.

The figures and accessories are designed to be durable and compatible with other Playmobil sets, extending play value beyond the advent season.

MAINTENANCE

Cleaning

To clean Playmobil figures and accessories, use a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these may damage the plastic. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and air drying. Ensure all parts are completely dry before storage.

Storage

After the holiday season, store all figures and accessories in a clean, dry place, away from direct sunlight and extreme temperatures. The original box can be used for organized storage. Ensure all small parts are kept together to prevent loss and facilitate future play.

TROUBLESHOOTING

This Playmobil set is manufactured to high standards for durability and ease of use. Should you encounter any issues, consider the following:

Missing Parts

If a part appears to be missing, carefully re-check all packaging materials and the calendar windows. Small parts can sometimes be overlooked or remain hidden within the packaging. If a part is genuinely missing, please refer to the "Warranty and Support" section.

Damaged Parts

In the event of damaged parts upon opening, please refer to the "Warranty and Support" section for information on how to contact customer service for assistance.

SPECIFICATIONS

Feature	Detail
Brand	Playmobil
Model Number	6624
Product Dimensions (L x W x H)	7.5 x 40 x 30 cm
Item Weight	740 g
Material	Plastic
Theme	Christmas, Farm
Recommended Age	4 to 10 years
Special Features	24 countdown windows, farm scene with over 20 animals, includes Santa, angel, and boy on tractor.

WARRANTY AND SUPPORT

Playmobil products are manufactured to high-quality standards. For information regarding warranty, replacement parts, or customer support, please visit the official Playmobil website or contact their customer service department directly.

Official Playmobil Website: www.playmobil.com

Please retain your proof of purchase for any warranty claims or support inquiries.