

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Dualit](#) /
- › [Dualit Classic 4 Slice NewGen Toaster Instruction Manual](#)

## Dualit 47440

# Dualit Classic 4 Slice NewGen Toaster Instruction Manual

Model: 47440

## INTRODUCTION

---

The Dualit Classic 4 Slice NewGen Toaster combines traditional design with modern functionality. Hand-built in the UK, this toaster features durable ProHeat elements, a mechanical timer for precise browning, and a manual ejector system. Its robust construction ensures longevity and consistent performance for perfect toast every time.



The Dualit Classic 4 Slice NewGen Toaster, featuring a durable stainless steel body with copper accents.

### Key Features:

- **ProHeat Elements:** Exclusive to Dualit, these elements feature a protective, armour-plated layer for durability and even heat distribution.
- **Hand Built and Fully Repairable:** Each toaster is hand-assembled in the UK, designed for longevity with replaceable parts.
- **Energy Saving Slot Selector:** Allows activation of specific slots (1, 2, or 4) to toast only the required number of slices, conserving energy.
- **Mechanical Timer:** Provides precise control over browning levels.
- **Manual Ejector Lever:** Enables checking toast during the cycle and keeps it warm until ready to serve.
- **Removable Crumb Tray:** For easy cleaning and maintenance.

### SAFETY INFORMATION

---

Please read all instructions before using the toaster and retain for future reference. Improper use can result in

electric shock, fire, or injury.

- Always ensure the toaster is placed on a stable, heat-resistant surface, away from flammable materials.
- Do not operate the toaster near or under curtains, shelves, cupboards, or other flammable materials.
- Never immerse the toaster, cord, or plug in water or any other liquid.
- Unplug the toaster from the power outlet when not in use, before cleaning, or if a fault occurs.
- Do not insert oversized foods, metal foil packages, or utensils into the toaster slots as this may cause fire or electric shock.
- Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials. They must be attended when in use.
- Regularly check the power cord for damage. If damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## SETUP

---

### **Unpacking and Placement:**

- Carefully remove the toaster from its packaging.
- Place the toaster on a flat, stable, heat-resistant surface. Ensure there is adequate clearance around the toaster for ventilation.
- Ensure the crumb tray is correctly inserted at the bottom of the toaster.

### **Power Connection:**

Plug the toaster into a suitable grounded electrical outlet. The toaster operates at 120V and 1800 watts.



Side profile of the toaster, showing the power cord connection.

## OPERATING INSTRUCTIONS

---

The Dualit Classic Toaster is designed for simple and effective operation. Familiarize yourself with the controls before first use.

## BENEFITS OF THE **PROHEAT**. ELEMENT



### PROTECTIVE COVERING

- The durable protective film keeps the filaments clean and makes our **PROHEAT**. elements virtually unbreakable.

### EVEN TOASTING

- No element has as many 'winds per square cm' as Dualit's **PROHEAT**. element – this makes for the most evenly toasted bread.

### REPLACEABLE ELEMENTS

- **PROHEAT**. elements are replaceable to ensure minimal disruption to service.



The control panel featuring the slot selector and mechanical timer.

### 1. Slot Selector:

Use the upper dial to select the number of slots you wish to activate. This feature helps conserve energy by only heating the necessary elements.

- Rotate the dial to select 1, 2, or 4 slots for toasting.
- For optimal results, ensure the bread is placed in the active slots.

# ENERGY SAVING SLOT SELECTOR



The slot selector allows activation of specific slots to save energy.

## 2. Mechanical Timer:

The lower dial controls the toasting time and browning level. This is a mechanical timer that ticks down during operation.

- Place bread into the selected slots.
- Turn the mechanical timer dial to your desired browning level. The red indicator light will illuminate, signifying that the elements are active.
- The toaster will automatically switch off when the timer reaches zero.

## 3. Defrost Function:

To toast frozen bread, select the desired number of slots and turn the mechanical timer dial past the snowflake symbol. This will add extra time to the cycle to defrost the bread before toasting.

## 4. Manual Ejector Lever:

Unlike automatic pop-up toasters, the Dualit Classic features a manual ejector lever. This allows you to check the toast at any point during the cycle without interrupting the heating process, and keeps the toast warm until you are

ready to retrieve it.

- To check toast, gently push down the black ball on the ejector lever. The toast will rise for inspection.
- To retrieve toast, push the ejector lever fully down. The toast will lift out of the slots.



The manual ejector lever allows checking toast and keeping it warm.

### Official Product Video:

Video providing an overview of the Dualit Classic NewGen Toaster's features and operation.

## MAINTENANCE

---

### Cleaning the Crumb Tray:

Regularly empty the removable crumb tray to prevent crumb buildup, which can be a fire hazard.

- Ensure the toaster is unplugged and completely cool before cleaning.
- Pull out the crumb tray located at the bottom front of the toaster.
- Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.

## Exterior Cleaning:

Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.

## Replacing ProHeat Elements:

The Dualit Classic Toaster is designed for easy repair. ProHeat elements are replaceable, extending the life of your appliance. Refer to the detailed instructions provided with replacement elements or consult a qualified electrician for assistance.



HAND BUILT



REPAIRABLE



PROHEAT®  
ELEMENTS



The exclusive ProHeat elements, designed for efficiency and longevity, are replaceable.



Illustration of the toaster's fully repairable design with replaceable components.

## TROUBLESHOOTING

If you encounter issues with your Dualit Classic Toaster, please refer to the following common solutions:

Problem	Possible Cause	Solution
Toaster not heating	Not plugged in; power outage; faulty outlet; timer not set.	Check power connection; verify outlet functionality; ensure timer is set correctly.
Uneven toasting	Incorrect slot selection; elements need cleaning/replacement; bread type.	Ensure correct slots are selected for the number of slices; clean crumb tray; consider element replacement if persistent.
Smoke or burning smell	Crumbs in tray; food stuck in slots; excessive browning setting.	Unplug immediately. Allow to cool, then empty crumb tray and remove any lodged food. Adjust browning setting.

Problem	Possible Cause	Solution
Toast not ejecting properly	Ejector lever mechanism obstructed.	Ensure no food debris is obstructing the lever mechanism.

If the problem persists after attempting these solutions, please contact Dualit customer support.

## SPECIFICATIONS

---

Feature	Detail
Brand	Dualit
Model Number	47440
Color	Copper
Material	Stainless Steel
Product Dimensions (D x W x H)	8.6"D x 14.1"W x 8.2"H (22cm D x 36cm W x 21cm H)
Wattage	1800 watts
Voltage	120.0 V
Slot Count	4
Special Features	Fully Repairable, ProHeat Elements, Mechanical Timer, Defrost Function, Manual Ejector
Item Weight	9.4 Pounds
UPC	619743474407



Diagram showing the toaster's dimensions.

## WARRANTY AND SUPPORT

---

The Dualit Classic 4 Slice NewGen Toaster comes with a 1-year limited warranty. This manufacturer warranty is valid only when products are sold by Amazon.com.

For product support, spare parts, or warranty claims, please visit the official Dualit website or contact their customer service. The name of the assembler who built your toaster can be found on the base plate, a testament to its hand-built quality.

### Manufacturing Process Video:

Video demonstrating the hand-built process of the Dualit Classic Toaster in the UK.