



---

[Manuals.plus](#) /

› [ECHOGEAR](#) /

› ECHOGEAR Tilting TV Wall Mount (EGLT1-BK) Instruction Manual

## ECHOGEAR EGLT1-BK

# ECHOGEAR Tilting TV Wall Mount

Model: EGLT1-BK

## INTRODUCTION

---

This manual provides detailed instructions for the safe and proper installation, operation, and maintenance of your ECHOGEAR Tilting TV Wall Mount (Model EGLT1-BK). Please read all instructions carefully before beginning installation. Retain this manual for future reference.



Image: The ECHOGEAR Tilting TV Wall Mount, showcasing its main components.

## SETUP AND INSTALLATION

Follow these steps for a secure and efficient installation of your ECHOGEAR Tilting TV Wall Mount.

### 1. Unboxing and Component Check

Carefully open the packaging and verify that all components are present according to the parts list provided in your package. Ensure no parts are damaged. If any parts are missing or damaged, do not proceed with installation and contact customer support.



Image: All components included in the ECHOGEAR Tilting TV Wall Mount package, laid out for inspection.

## 2. Attaching TV Brackets

Attach the vertical TV brackets to the back of your television using the appropriate screws and spacers from the hardware kit. Ensure the brackets are securely fastened and aligned with the VESA mounting holes on your TV.



Image: A visual representation of the three main installation steps, including attaching the brackets to the TV.

### 3. Assembling and Mounting the Wall Plate

Assemble the wall plate components if necessary. Locate the wood studs in your wall using a stud finder. Mark the drilling locations precisely. Drill pilot holes into the center of the studs. Securely attach the wall plate to the wall using the provided lag bolts. Ensure the wall plate is level before tightening all fasteners.

### 4. Hanging the TV

With assistance, carefully lift the television and hook the attached TV brackets onto the wall plate. Ensure the TV is properly seated and locked into place. Some models include safety screws or pull-straps to secure the TV to the wall plate.

## 5. Securing and Adjusting Tilt

Once the TV is hung, you can adjust the tilt angle up to 15 degrees to reduce glare. Use the tool-free tension knobs on the mount to set your desired tilt. Ensure all adjustments are tightened to prevent unwanted movement.



Image: Detail of the tilt mechanism, illustrating the range of motion and the tension knob for adjustment.

## Installation Video Guide

Your browser does not support the video tag.

Video: Official ECHOGEAR guide on how to install a large tilting TV mount (EGLT1-BK).

## OPERATING INSTRUCTIONS

---

The ECHOGEAR Tilting TV Wall Mount is designed for simple operation, allowing you to optimize your viewing experience.

### Adjusting the Tilt Angle

To adjust the tilt of your television, simply loosen the tool-free tension knobs located on the side of the TV brackets. Gently push or pull the bottom of your TV to achieve the desired viewing angle. Once the desired angle is set, tighten the tension knobs to secure the TV in position. The mount allows for up to 15 degrees of downward tilt and 5 degrees of upward tilt.

### Low Profile Design

This mount features a low-profile design, positioning your TV approximately 2.5 inches from the wall. This minimizes the gap between the TV and the wall, providing a clean and integrated appearance while still allowing for cable access.

# SIZE MATTERS

BUILT FOR TVs UP TO **75"**



**PRO TIP:**  
YOU COULD GET  
A BIGGER TV!

Image: A television mounted with the ECHOGEAR mount, demonstrating its low-profile design.

## MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV wall mount.

- **Cleaning:** Dust the mount periodically with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish.

- **Inspections:** Annually, inspect all screws and bolts to ensure they remain tight. Over time, vibrations can cause fasteners to loosen. Re-tighten any loose connections.
- **Moving Parts:** The tilt mechanism is designed for smooth operation. If you notice any stiffness, ensure the tension knobs are not overtightened. No lubrication is typically required.

## TROUBLESHOOTING

If you encounter issues with your ECHOGEAR Tilting TV Wall Mount, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
TV is not level	Wall plate not level during installation.	Remove TV, loosen wall plate fasteners, adjust level, and re-tighten. Ensure pilot holes were drilled accurately.
Difficulty tilting TV	Tension knobs are too tight.	Loosen the tension knobs slightly to allow for easier tilt adjustment.
TV feels unstable on mount	TV not properly seated or safety screws not installed.	Ensure TV brackets are fully engaged with the wall plate. Install and tighten all safety screws as per installation instructions. Verify wall plate is securely fastened to studs.

## SPECIFICATIONS

Feature	Detail
Model Number	EGLT1-BK
Mounting Type	Wall Mount
Movement Type	Tilt
Compatible TV Sizes	32 - 75 Inches
Maximum Tilt Angle	15 Degrees
Material	Alloy Steel
Distance from Wall	2.5 Inches (Low Profile)
Compatible Devices	Television
UPC	793795529732

## WARRANTY INFORMATION

This ECHOGEAR Tilting TV Wall Mount is covered by a **5-Year Warranty**. For specific terms and conditions, please refer to the warranty card included with your product or visit the official ECHOGEAR website.

## CUSTOMER SUPPORT

For technical assistance, missing parts, or warranty claims, please contact ECHOGEAR customer support:

- **Website:** [Visit the ECHOGEAR Store on Amazon](#)
- **Email:** Refer to your product packaging for direct email support.
- **Phone:** Refer to your product packaging for direct phone support.

Please have your model number (EGLT1-BK) and proof of purchase ready when contacting support.