

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sonnet](#) /

› [Sonnet T-1949 Digital LED Alarm Clock User Manual](#)

## Sonnet T-1949

# Sonnet T-1949 Digital LED Alarm Clock User Manual

Model: T-1949


## INTRODUCTION

This manual provides detailed instructions for the Sonnet T-1949 Digital LED Alarm Clock. This device features a clear LED display, an alarm function with snooze, and two integrated USB charging ports for smartphones and tablets. It operates on 110-120 volt AC power at 60 cycles and includes a battery backup feature (battery not included) to maintain time settings during power outages.

## PRODUCT OVERVIEW



**Image 1:** Front view of the Sonnet T-1949 Digital LED Alarm Clock. The clock features a matte black finish and a red LED display showing "10:00". Indicators for PM and ALM (alarm) are visible on the left side of the display.

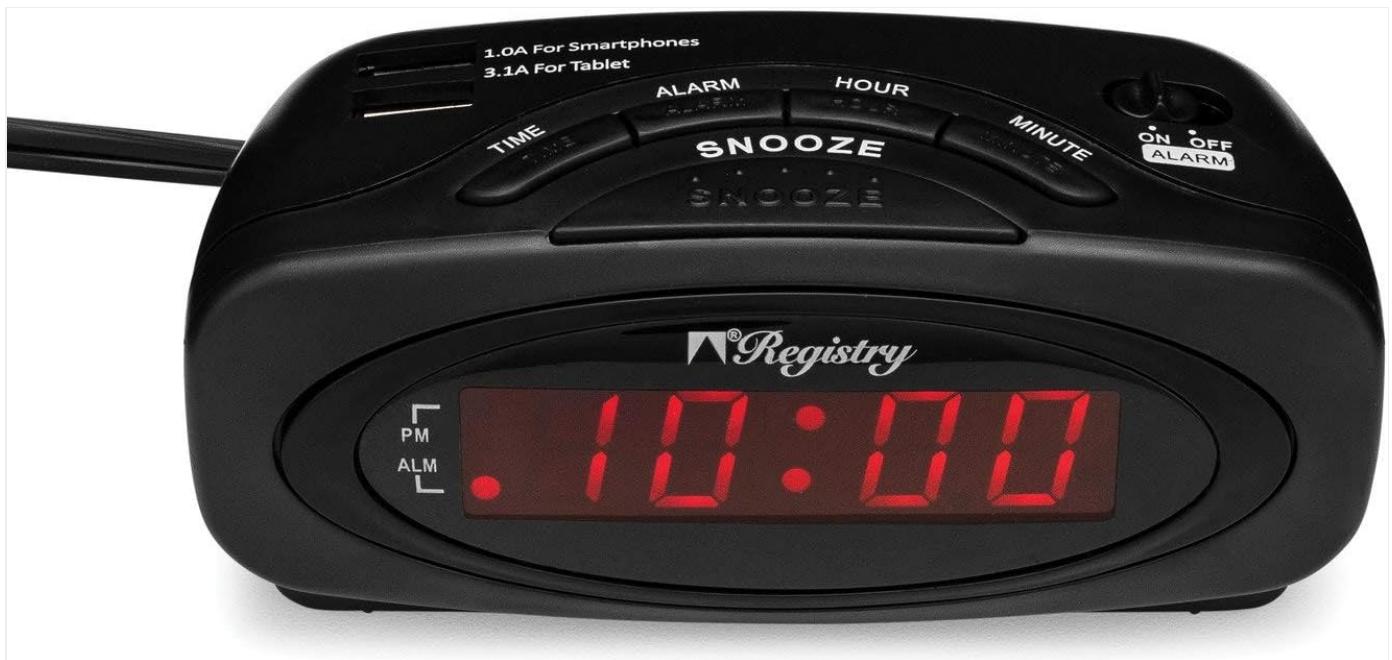

**Image 2:** Top view of the Sonnet T-1949 Digital LED Alarm Clock. This image highlights the control buttons for TIME, ALARM, SNOOZE, HOUR, and MINUTE. Two USB charging ports are visible at the top, labeled "1.0A For Smartphones" and "3.1A For Tablet". An ON/OFF ALARM switch is located on the right side.



**Image 3:** Back view of the Sonnet T-1949 Digital LED Alarm Clock. The battery compartment is open, revealing the slot for a button cell

battery (CR2032, not included) for backup power. The power cord extends from the back of the unit.

## SETUP INSTRUCTIONS

---

1. **Power Connection:** Plug the alarm clock into a standard 110-120 volt AC, 60 cycle electrical outlet. The LED display will illuminate.
2. **Battery Backup (Optional):** For battery backup functionality, open the battery compartment on the back of the unit (refer to Image 3). Insert one CR2032 button cell battery (not included), ensuring correct polarity. This battery preserves time and alarm settings during a power outage.
3. **Setting the Time:**
  - Press and hold the **TIME** button.
  - While holding **TIME**, press the **HOUR** button to adjust the hour. Observe the PM indicator for correct AM/PM setting.
  - While holding **TIME**, press the **MINUTE** button to adjust the minute.
  - Release the **TIME** button to set the current time.
4. **Setting the Alarm:**
  - Press and hold the **ALARM** button.
  - While holding **ALARM**, press the **HOUR** button to adjust the alarm hour.
  - While holding **ALARM**, press the **MINUTE** button to adjust the alarm minute.
  - Release the **ALARM** button to set the alarm time. The ALM indicator on the display will light up, confirming the alarm is active.

## OPERATING INSTRUCTIONS

---

- **Time Display:** The .6-inch high LED display continuously shows the current time. The PM indicator illuminates when the time is in the PM hours.
- **Alarm Activation/Deactivation:** Use the **ON/OFF ALARM** slide switch located on the top right of the clock (refer to Image 2) to turn the alarm function on or off. When the alarm is ON, the ALM indicator will be lit.
- **Snooze Function:** When the alarm sounds, press the large **SNOOZE** button to temporarily silence the alarm. The alarm will sound again after a short interval (typically 9 minutes).
- **Stopping the Alarm:** To stop the alarm completely after it sounds, slide the **ON/OFF ALARM** switch to the OFF position.
- **USB Charging Ports:** The clock is equipped with two USB charging ports on the top surface (refer to Image 2):
  - One 1.0A USB port for charging smartphones.
  - One 2.1A USB port for charging tablets and other higher-power devices.

Connect your device's USB charging cable to the appropriate port. Charging will begin automatically.

## MAINTENANCE

---

To maintain your Sonnet T-1949 alarm clock, wipe the exterior with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish. Ensure the unit is unplugged before cleaning. Keep the clock away from excessive moisture and direct sunlight.

If using the battery backup, check the CR2032 battery periodically and replace it as needed to ensure continuous timekeeping during power interruptions.

## TROUBLESHOOTING

Problem	Possible Solution
Clock display is blank.	Ensure the power cord is securely plugged into a working electrical outlet. Check if the outlet has power.
Alarm does not sound.	Verify that the <b>ON/OFF ALARM</b> switch is in the ON position (ALM indicator lit). Confirm the alarm time is set correctly.
Time/Alarm settings are lost after power outage.	The battery backup is not functioning. Install a new CR2032 button cell battery or ensure the existing battery is correctly installed and not depleted.
USB devices are not charging.	Ensure the clock is powered on. Check if the USB cable is properly connected to both the clock and the device. Verify the device is compatible with the charging port's amperage (1.0A for smartphones, 2.1A for tablets).

## SPECIFICATIONS

- **Model:** T-1949
- **Brand:** Sonnet
- **Display Type:** Digital LED (0.6" high)
- **Color:** Black
- **Power Source:** 110-120V AC, 60Hz (Corded Electric)
- **Battery Backup:** 1 x CR2032 button cell battery (not included)
- **USB Charging Ports:**
  - 1 x 1.0A (for smartphones)
  - 1 x 2.1A (for tablets)
- **Features:** Alarm, Snooze, AM/PM indicator
- **Material:** Plastic
- **Item Weight:** 8.1 ounces
- **Package Dimensions:** 5.63 x 3.9 x 2.64 inches

## WARRANTY AND SUPPORT

Specific warranty information for the Sonnet T-1949 Digital LED Alarm Clock is typically provided with the product packaging or available on the manufacturer's official website. For technical support, service, or warranty claims, please refer to the contact information provided by Sonnet or your retailer.