

Ingenuity 60476-1-W11

Ingenuity Inlighten 2-in-1 Cradling Swing - Avondale Instruction Manual

Brand: Ingenuity | Model: 60476-1-W11

INTRODUCTION

The Ingenuity Inlighten 2-in-1 Cradling Swing in Avondale design is engineered to provide soothing comfort and engaging entertainment for your infant. This versatile product functions as both a full-size cradling swing and a removable, portable rocker, adapting to your child's needs and your living space.

Key features include multiple swing speeds, melodies, nature sounds, a light-up mobile with plush toys, and a plush seat with two recline positions. The design prioritizes ease of use and portability, allowing you to keep your little one comfortable and content.



Image: The Ingenuity Inlighten 2-in-1 Cradling Swing fully assembled, showcasing its elegant design and integrated mobile.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always use the restraint system. Ensure it is properly adjusted and secured.
- Do not use this product once your child can sit up unaided or weighs more than 9 kg (20 lbs).
- Never leave child unattended.
- Do not move or lift the product with the child inside.
- Always place the product on a flat, level surface. Do not use on elevated surfaces.
- Strings can cause strangulation! Do not place items with a string around a child's neck, such as hood strings or pacifier cords. Do not suspend strings over a product or attach strings to toys.
- Keep away from open flames and other sources of strong heat.

- Adult assembly required. Keep small parts away from children during assembly.
- Batteries are not included. Use 4 D batteries. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

PACKAGE CONTENTS

Before assembly, ensure all components are present. If any parts are missing or damaged, do not use the product and contact customer service.

- Swing Frame Assembly (legs, base, uprights)
- Seat Assembly (with harness and head support)
- Overhead Mobile with Plush Toys
- Control Unit/Motor Housing
- AC Adapter (if included, otherwise battery operation only)
- Instruction Manual

SETUP AND ASSEMBLY

Follow these steps carefully to assemble your Ingenuity Inlighten 2-in-1 Cradling Swing.

1. **Assemble the Frame:** Connect the swing frame components according to the diagrams provided in the physical manual. Ensure all connections click securely into place.
2. **Attach the Seat:** Securely attach the seat assembly to the swing frame. Verify that the seat is firmly locked into position and cannot be easily dislodged.
3. **Install Batteries:** Locate the battery compartment, typically on the control unit. Insert 4 D batteries (not included), ensuring correct polarity. Close the compartment securely. Alternatively, connect the AC adapter if your model includes one.
4. **Attach the Mobile:** Secure the overhead mobile to the designated slot on the control unit. Ensure the plush toys hang freely and are out of reach of the child's grasp when in the swing.
5. **Prepare the Seat:** Adjust the head support and harness straps to fit your child. The harness should be snug but not restrictive.



Image: A baby comfortably seated and smiling in the assembled Ingenuity Inlighten Cradling Swing, demonstrating proper use.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel for optimal use of your swing.

- **Power On/Off:** Press the power button on the control unit to turn the swing on or off.
- **Swing Speed:** Use the speed control buttons to select from multiple swing speeds. Observe your child's comfort and preference.
- **Swing Direction:** This swing offers multi-directional swinging (front-to-back and side-to-side). Rotate the seat to change the swing direction as desired.
- **Melodies and Sounds:** Select from a variety of pre-loaded melodies and nature sounds using the dedicated buttons. Adjust volume as needed.
- **Light-Up Mobile:** Activate the light feature on the mobile to project gentle lights. The mobile also rotates to engage your child with the hanging plush toys.

- **Recline Positions:** The seat offers two recline positions. Adjust the recline by pressing the recline adjustment buttons/levers, typically located on the sides of the seat.
- **Using as a Rocker:** To use the product as a portable rocker, detach the seat from the swing frame. Ensure the seat is securely locked into its rocker base before placing it on a flat surface. The rocker can be used independently for soothing motion.



Image: The detachable seat of the Ingenuity Inlighten Cradling Swing, functioning as a standalone rocker with a baby inside, highlighting its 2-in-1 versatility.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and safety of your swing.

- **Fabric Care:** The seat pad and head support are typically machine washable. Refer to the care tag on the fabric for specific washing instructions (usually cold water, gentle cycle, no bleach, tumble dry low or air dry).
- **Frame Cleaning:** Wipe the swing frame, control unit, and plastic components with a damp cloth and mild soap. Do

not immerse the control unit or motor in water.

- **Battery Replacement:** Replace all 4 D batteries when the swing's performance (speed, sound, lights) diminishes. Always replace with new, identical type batteries.
- **Storage:** When not in use for extended periods, store the swing in a clean, dry place away from direct sunlight and extreme temperatures. You may disassemble it for more compact storage.
- **Inspection:** Periodically check all fasteners, connections, and moving parts to ensure they are secure and in good working order. Do not use if any part is damaged or broken.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing does not turn on or operate.	<ul style="list-style-type: none"> • Batteries are dead or incorrectly installed. • AC adapter not properly connected (if applicable). • Power button not pressed firmly. 	<ul style="list-style-type: none"> • Replace batteries with new D batteries, ensuring correct polarity. • Ensure AC adapter is fully plugged into both the swing and a working wall outlet. • Press the power button firmly until the unit activates.
Swing motion is weak or inconsistent.	<ul style="list-style-type: none"> • Low batteries. • Child's weight exceeds limit. • Obstruction preventing smooth motion. 	<ul style="list-style-type: none"> • Replace batteries. • Ensure child's weight is within the specified range (2.5 kg - 9 kg). • Check for any fabric, toys, or objects obstructing the swing mechanism.
No sound or lights from mobile.	<ul style="list-style-type: none"> • Low batteries. • Volume set to minimum. • Feature not activated. 	<ul style="list-style-type: none"> • Replace batteries. • Increase volume using the control buttons. • Ensure the sound/light button is pressed to activate the feature.
Rocker seat does not detach or attach easily.	<ul style="list-style-type: none"> • Locking mechanism not fully disengaged/engaged. • Misalignment during attachment. 	<ul style="list-style-type: none"> • Ensure all release levers/buttons are fully pressed when detaching, and fully engaged when attaching. • Align the seat properly with the frame's connection points before attempting to attach.

SPECIFICATIONS

Model Number	60476-1-W11
Minimum Weight Recommendation	2.5 kg (5.5 lbs)
Maximum Weight Recommendation	9 kg (20 lbs)
Batteries Required	Yes, 4 D batteries (not included)
Is Portable	Yes (rocker seat is portable)
Product Dimensions (LxWxH)	72.39 x 47.75 x 26.67 cm (28.5 x 18.8 x 10.5 inches)

Item Weight	8 kg (17.6 lbs)
UPC	074451604766




WARRANTY AND SUPPORT

This product comes with a limited warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Ingenuity website. Keep your proof of purchase for warranty claims. For technical support, replacement parts, or further assistance, please contact Ingenuity Customer Service. Contact information can typically be found on the product packaging or the manufacturer's official website:

[Visit Ingenuity Official Website](#)

© 2023 Ingenuity. All rights reserved. | Please retain this manual for future reference.

Related Documents

 <p>Ingenuity InLighten Soothing Swing - Dakota™ Swing - Reclining - Motorized ingenuitybaby.com</p>	<p>Ingenuity InLighten Soothing Swing - Dakota User Manual and Safety Guide</p> <p>Comprehensive guide for the Ingenuity InLighten Soothing Swing - Dakota, covering safety warnings, assembly instructions, battery information, care, cleaning, and operation of the control module.</p>
 <p>Ingenuity InLighten Soothing Swing - Kitt™ Swing - Reclining - Motorized ingenuitybaby.com</p>	<p>Ingenuity InLighten Soothing Swing - Kitt™ User Manual and Safety Guide</p> <p>This comprehensive user manual provides detailed instructions for assembling, using, and caring for the Ingenuity InLighten Soothing Swing - Kitt™. It includes essential safety warnings, operational guidance for the control module, and maintenance tips, presented in English, Spanish, and French.</p>
 <p>Ingenuity InLighten Soothing Swing - Van™ Swing - Reclining - Motorized ingenuitybaby.com</p>	<p>Ingenuity InLighten Soothing Swing - Van Elephant User Manual</p> <p>User manual for the Ingenuity InLighten Soothing Swing in the Van Elephant design. Provides instructions on assembly, use, safety warnings, and care.</p>

ingenuity

110000-00



InLighten™ Soothing Swing - Nally™
Swing - Nally™ - Nally™
ingenuitybaby.com

[Ingenuity InLighten Soothing Swing - Nally™ User Manual and Safety Guide](#)

Comprehensive guide for the Ingenuity InLighten Soothing Swing - Nally™. Includes assembly instructions, safety warnings, care and cleaning tips, and control module operation.