

Timex TW2P62300

Timex Weekender Chronograph 40 mm Watch Instruction Manual

Model: TW2P62300

INTRODUCTION

The Timex Weekender Chronograph 40 mm Watch is a versatile timepiece designed for everyday wear. It features a classic chronograph function, a durable leather slip-thru strap, and Timex's signature INDIGLO Night-Light for visibility in low light conditions. This manual provides essential information for setting up, operating, and maintaining your watch.



Front view of the Timex Weekender Chronograph 40 mm Watch, featuring a blue dial with white numerals and a tan leather slip-thru strap.

Setting Time and Date

1. Pull the crown (the knob on the side of the watch) out to position 2.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands.
3. To set the date, pull the crown out to position 1. Turn the crown until the correct date appears in the date window.
4. Once time and date are set, push the crown back into position 0 to start the watch.

Strap Adjustment

The watch comes with a leather double layer slip-thru strap. This type of strap is designed to be easily interchanged without tools. Simply slide the strap through the spring bars on the watch case. Ensure the watch case is centered on the strap for comfortable wear.



Box Supplied may be different from picture

Detailed view of the tan leather slip-thru strap, highlighting its construction and buckle.

Using the Chronograph Function

The chronograph measures time to 1/20th of a second. It features three sub-dials for seconds, minutes, and 1/20th seconds.

1. To start the chronograph, press the top pusher (button). The chronograph second hand will begin to move.
2. Press the top pusher again to stop the chronograph. The elapsed time will be displayed on the sub-dials.
3. To reset the chronograph, press the bottom pusher. All chronograph hands will return to their zero positions.






Side profile of the watch, illustrating the position of the crown and the two chronograph pushers.

INDIGLO Night-Light

The INDIGLO Night-Light illuminates the entire watch dial for easy reading in the dark.

- To activate the INDIGLO Night-Light, press and hold the crown. The dial will illuminate.
- Release the crown to turn off the light.

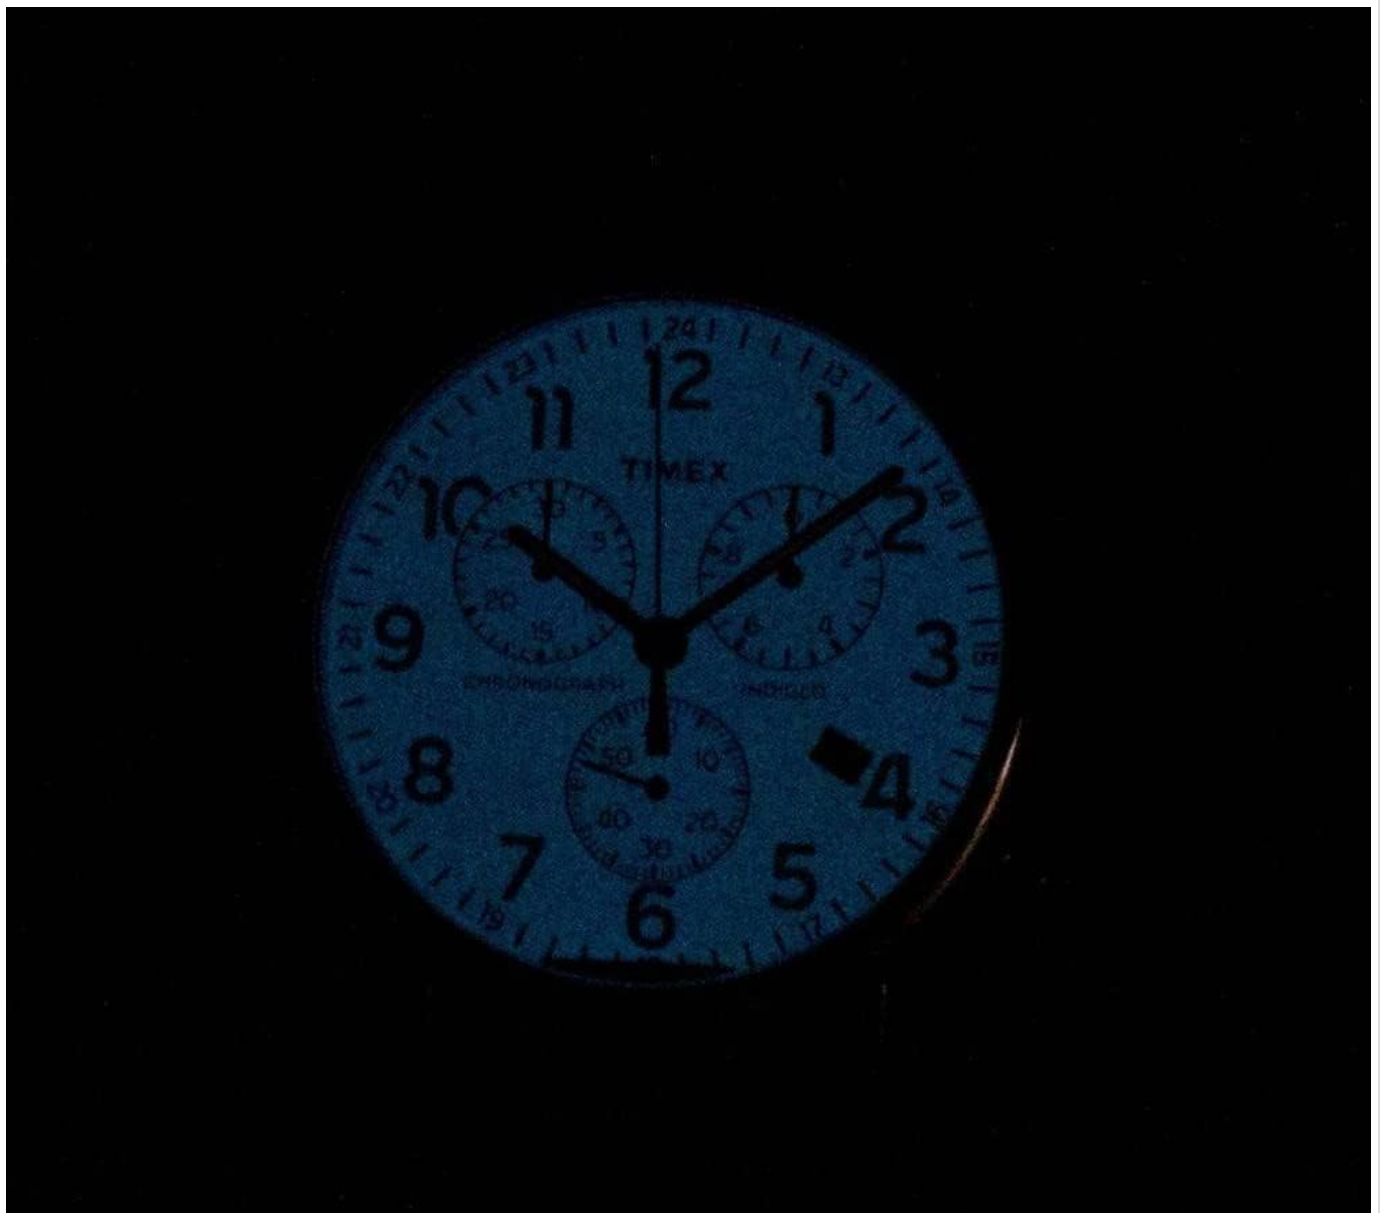

The watch dial glowing brightly in the dark, demonstrating the INDIGLO Night-Light feature.

MAINTENANCE

Water Resistance

This watch has a water resistance rating of 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is not recommended for swimming, showering, or diving.

Battery Replacement

The watch requires 1 Lithium Metal battery, which is included. When the watch stops or the INDIGLO light dims significantly, it may be time for a battery replacement. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and water resistance.

Cleaning

To clean your watch, wipe the case and crystal with a soft, damp cloth. For the leather strap, avoid excessive moisture and use a leather-specific cleaner if necessary. Allow the strap to air dry completely.

TROUBLESHOOTING

- Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- INDIGLO light not working:** Ensure the crown is pressed firmly. If it still doesn't work, the battery may be low.
- Chronograph hands not resetting to zero:** This may indicate a need for calibration or service. Consult a watch technician.

SPECIFICATIONS







Brand	Timex
Model Number	TW2P62300
Product Dimensions	1.57 x 3.94 x 2.36 inches
Item Weight	2.31 ounces
Water Resistance	30m (3 ATM)
Battery Type	Lithium Metal (1 required, included)
Chronograph	Measures to 1/20th second
Special Features	INDIGLO Night-Light, Date Feature

WARRANTY AND SUPPORT

Timex products are manufactured to high-quality standards. For information regarding warranty coverage, service, or support, please refer to the official Timex website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, visit the [Timex Store on Amazon](#).

Related Documents - TW2P62300

	<p>Timex Kids Digital Watch User Guide - Operation and Features</p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>
	<p>Timex T100 User Guide: Operation, Features, and Maintenance</p> <p>Official user guide for the Timex T100 watch, detailing how to set time, date, use the chronograph, timer, alarms, Indiglo night-light, and information on water resistance and warranty.</p>
	<p>Timex W-191-AS Watch User Manual and Instructions</p> <p>Detailed instructions and user guide for the Timex W-191-AS digital watch, covering all features including time/date setting, chronograph, timer, interval timer, alarms, and INDIGLO night-light functionality. Includes warranty information.</p>
	<p>Timex W-209 Watch User Manual: Features, Operation, and Warranty</p> <p>Comprehensive guide to operating your Timex W-209 watch, covering time setting, chronograph, timer, alarms, occasions, INDIGLO night-light, water resistance, battery, and international warranty information.</p>
	<p>Timex Kids Digital Watch User Guide</p> <p>Comprehensive user guide for the Timex Kids Digital Watch (W33 791095007), covering operations, features, water resistance, and maintenance in multiple languages.</p>
	<p>Timex Watch User Manual: Features, Operation, and Care</p> <p>Comprehensive user manual for Timex watches, detailing features like analog and digital time, multiple time zones, alarms, chronographs, timers, water resistance, and bracelet adjustment.</p>