

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Coleman](#) /

› [Coleman Triton 2-Burner Propane Gas Camping Stove Instruction Manual](#)

Coleman Triton

Coleman Triton 2-Burner Propane Gas Camping Stove Instruction Manual

Model: Triton (2000020953NP)

INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your Coleman Triton 2-Burner Propane Gas Camping Stove. Please read all instructions carefully before operating the appliance. This stove is designed for outdoor cooking and offers up to 22,000 total BTUs of power with adjustable wind-blocking panels.

SAFETY INFORMATION

WARNING: This product can expose you to chemicals including carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

- **FOR OUTDOOR USE ONLY:** Never use this appliance indoors, in a tent, house, RV, or any enclosed space. Carbon monoxide poisoning can occur, which is odorless and deadly.
- Ensure the stove is placed on a stable, level surface away from flammable materials.
- Keep children and pets away from the stove during operation.
- Always connect and disconnect propane cylinders outdoors and away from ignition sources.
- Check for gas leaks before each use by applying a soapy water solution to connections. Bubbles indicate a leak.
- Do not leave the operating stove unattended.

WHAT'S IN THE BOX

- Coleman Triton 2-Burner Propane Stove
- Propane regulator
- Instruction Manual

SETUP INSTRUCTIONS



Image: The Coleman Triton 2-Burner Propane Gas Camping Stove shown open with its side wind guards extended, ready for use.

1. **Unpack the Stove:** Carefully remove the stove and all components from its packaging. Ensure all packing materials are removed.
2. **Open the Stove:** Place the stove on a flat, stable surface. Unlatch the front clasp and lift the lid.
3. **Extend Wind-Blocking Panels:** The side panels are designed to fold out. Secure them by inserting the small metal clips into the designated holes on the side of the stove base. These panels help shield the burners from wind and can be adjusted for various pan sizes.
4. **Attach Propane Regulator:** The propane regulator is typically stored inside the stove. Remove it and securely screw it into the gas inlet on the side of the stove. Ensure a tight connection to prevent leaks.
5. **Place Cooking Grate:** The chrome-plated cooking grate sits over the burners. Ensure it is properly seated. This grate is removable for easy cleaning.

Your browser does not support the video tag.

Video: A seller demonstrates the unboxing and initial setup of the Coleman Triton Camping Stove, highlighting its features like the wind guards and removable grate.

OPERATING INSTRUCTIONS

1. **Connect Propane Cylinder:** Screw a 16.4 oz (1 lb) propane cylinder (not included) onto the regulator. Hand-tighten only.
2. **Lighting the Burners:** This stove does not feature a piezo ignition. Use a long-stem lighter or matches. Turn the burner control knob slowly to the "LIGHT" position while simultaneously applying the flame to the burner. Once lit, adjust the flame to the desired heat level.
3. **Adjusting Flame:** Use the individual control knobs for each burner to achieve precise temperature control,

from a high boil to a gentle simmer.

4. **Cooking Capacity:** The stove is designed to accommodate a 12-inch pan and a 10-inch pan simultaneously on its two burners.
5. **After Use:** Turn off both burner control knobs completely. Disconnect the propane cylinder once the stove has cooled down.

Your browser does not support the video tag.

Video: A seller demonstrates the ease of connecting the propane tank and the ample space for cooking with different sized pans on the Coleman Triton stove.

MAINTENANCE



Image: The Coleman Triton stove with the cooking grate lifted, revealing the rust-resistant aluminum cooktop underneath, which can be lined with foil for easier cleaning.

- **Cleaning the Grate:** The chrome-plated grate is removable for easy cleaning. Wash with warm, soapy water and a non-abrasive sponge.
- **Cleaning the Cooktop:** The rust-resistant aluminum cooktop can be wiped clean. For easier maintenance, some users line the cooktop area with aluminum foil before use to catch spills and grease.
- **Storage:** Ensure the stove is completely cool and clean before storing. Disconnect the propane cylinder and store the regulator inside the stove. Close the lid and latch it securely.

TROUBLESHOOTING

- **Burner Not Lighting:**
 - Ensure propane cylinder is connected correctly and has fuel.
 - Check for gas flow by listening for a hiss when the knob is turned.

- Verify that a flame source (lighter/match) is applied directly to the burner.

- **Low Flame/Inconsistent Performance:**

- The pressure-control technology is designed for consistent performance. If experiencing issues, ensure the propane cylinder is not low on fuel.
- Check for any obstructions in the burner ports.
- Ensure wind-blocking panels are properly positioned to protect the flame.

- **Gas Leak Smell:**

- Immediately turn off the stove and disconnect the propane cylinder.
- Move away from the area and ventilate.
- Do not attempt to light the stove. Check all connections for leaks using soapy water. If a leak persists, do not use the stove and contact Coleman customer support.

SPECIFICATIONS

Brand	Coleman
Model Name	Coleman Triton Stove
Part Number	2000020953NP
Fuel Type	Liquefied Petroleum Gas (Propane)
Cooking Power	Up to 22,000 total BTUs
Number of Burners	2
Material	Alloy Steel
Product Dimensions (LxWxH)	16.93"L x 9.45"W x 2.76"H
Item Weight	2.2 Kilograms
Included Components	Coleman Triton 2-Burner Propane Stove



Image: A diagram illustrating the dimensions of the Coleman Triton stove, showing its length, width, and height.

WARRANTY AND SUPPORT

Warranty: This product comes with a 3-Year Limited Warranty from Coleman.

For further assistance or warranty claims, please visit the official Coleman website or contact their customer support.

Visit the [Coleman Store on Amazon](#) for more products and information.

