

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [InSinkErator](#) /

› [Insinkerator 11016, Mounting Gasket User Manual](#)

## InSinkErator INS11016

# InSinkErator 11016 Mounting Gasket User Manual

Model: INS11016

## INTRODUCTION

This manual provides essential information for the proper installation, function, and maintenance of the InSinkErator 11016 Mounting Gasket. This genuine OEM replacement part is designed to ensure a secure and leak-free seal for InSinkErator food waste disposers.



Image: The InSinkErator 11016 Mounting Gasket. This is a circular, black rubber component designed to create a watertight seal in food waste disposer installations. It features a flat, wide base with a raised inner ring and several small, evenly spaced holes around its perimeter, likely for alignment or securing purposes.

## SETUP AND INSTALLATION

The InSinkErator 11016 Mounting Gasket is a critical component for sealing the connection between the food waste

disposer and the sink flange. Proper installation is essential to prevent leaks.

## Required Tools (Not Included):

- Screwdriver (appropriate type for disposer mounting screws)
- Plumber's putty (optional, for sink flange seal)
- Bucket or container (to catch any residual water)

## Installation Steps:

1. **Safety First:** Disconnect power to the food waste disposer at the circuit breaker before beginning any work.
2. **Drain Water:** Place a bucket under the disposer to catch any water that may drain during removal.
3. **Remove Old Gasket:** Loosen the mounting screws or ring that secure the disposer to the sink flange. Carefully lower the disposer and remove the old gasket. Clean the area thoroughly, removing any old sealant or debris from the sink flange and disposer mounting surface.
4. **Position New Gasket:** Place the new InSinkErator 11016 Mounting Gasket onto the sink flange or the disposer's mounting assembly, ensuring it is seated correctly and evenly. The gasket is designed to fit snugly.
5. **Reattach Disposer:** Lift the disposer back into position, aligning it with the sink flange and the new gasket. Secure the mounting screws or ring according to your specific disposer model's instructions, ensuring a tight and even seal.
6. **Test for Leaks:** Once the disposer is securely reattached, reconnect power. Run water into the sink and check carefully for any leaks around the gasket area. If leaks are present, tighten the mounting screws further or re-evaluate the gasket's position.

Refer to your specific InSinkErator food waste disposer's instruction manual for detailed assembly and installation diagrams.

## OPERATING PRINCIPLES

---

The InSinkErator 11016 Mounting Gasket functions as a static seal. Its primary role is to create a watertight and secure connection between the sink drain and the food waste disposer unit. Once installed, it passively prevents water and waste from leaking from the connection point during normal operation of the disposer and sink.

There are no operational controls or user interactions required for the gasket itself once it is properly installed. Its effectiveness relies entirely on correct installation and the integrity of the material.

## MAINTENANCE

---

The InSinkErator 11016 Mounting Gasket is designed for durability, but like all rubber components, it can degrade over time due to wear, chemical exposure, or age. Regular maintenance is not typically required for the gasket itself, but periodic inspection is recommended.

### Inspection:

- Visually inspect the area around the disposer's mounting connection under the sink for any signs of moisture or drips.
- If you notice persistent leaks or drips from the disposer's connection to the sink, the gasket may need replacement.
- Check for any visible cracks, hardening, or deterioration of the rubber material if the gasket is accessible.

If the gasket shows signs of wear or is leaking, it should be replaced immediately to prevent water damage and ensure proper function of the food waste disposer.

## TROUBLESHOOTING

---

The primary issue related to the mounting gasket is leakage. If you experience leaks from your food waste disposer, the gasket is a likely culprit.

## Symptom: Water Leaking from Top of Disposer (where it connects to sink)

- **Possible Cause 1:** Gasket is improperly seated or misaligned.

**Solution:** *Disconnect power to the disposer. Loosen the mounting screws, reposition the gasket, and re-tighten the mounting screws evenly and firmly. Test for leaks.*

- **Possible Cause 2:** Gasket is worn, cracked, or deteriorated.

**Solution:** *The gasket needs to be replaced. Follow the "Setup and Installation" steps to replace the old gasket with a new InSinkErator 11016 Mounting Gasket.*

- **Possible Cause 3:** Mounting screws are loose.

**Solution:** *Ensure power is off. Tighten the mounting screws evenly until the disposer is securely fastened and the gasket is compressed. Test for leaks.*

If leaks persist after troubleshooting, it is recommended to consult a qualified plumber or InSinkErator customer support.

## SPECIFICATIONS

Attribute	Detail
Model Number	INS11016
Manufacturer	InSinkErator
Product Dimensions	15 x 11 x 6 inches
Item Weight	11.22 ounces
ASIN	B00VV57HKY
Country of Origin	USA
First Available Date	October 30, 2012
Discontinued	No
What's in the Box	Mounting Gasket

## WARRANTY AND SUPPORT

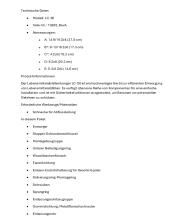
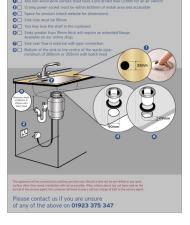
Specific warranty information for the InSinkErator 11016 Mounting Gasket is not provided in this manual. For warranty details, please refer to the documentation included with your InSinkErator food waste disposer or visit the official InSinkErator website.

For technical support or further assistance, please contact InSinkErator customer service. Contact information can typically be found on the InSinkErator official website or in the original product packaging of your food waste disposer.

## OFFICIAL PRODUCT VIDEOS

There are no official product videos provided for the InSinkErator 11016 Mounting Gasket at this time.

## Related Documents - INS11016

	<p><a href="#">InSinkErator SS Series Food Waste Disposers: Product Specifications and Installation Guide</a> Detailed specifications, features, dimensions, and installation information for the InSinkErator SS Series heavy-duty food waste disposers, suitable for foodservice establishments.</p>
	<p><a href="#">Insinkerator LC-50 Lebensmittelabfallentsorger: Installations- und Bedienungsanleitung</a> Umfassende Anleitung für den Insinkerator LC-50 Lebensmittelabfallentsorger, einschließlich technischer Daten, Installation, Betrieb, Sicherheitshinweisen und Fehlerbehebung für gewerbliche Anwendungen.</p>
	<p><a href="#">InSinkErator Food Waste Disposer Installation Criteria</a> Customer criteria for installing an InSinkErator food waste disposer, covering requirements for work surfaces, power sockets, sink dimensions, and plumbing.</p>
	<p><a href="#">InSinkErator ES30 &amp; ES50 Food Waste Disposal Installation and Use Manual</a> This manual provides detailed installation, operation, and maintenance instructions for the InSinkErator ES30 and ES50 Food Waste Disposals. It includes safety warnings, parts lists, step-by-step installation guides, operating tips, cleaning instructions, and warranty information.</p>
	<p><a href="#">InSinkErator ES30 &amp; ES50 Food Waste Disposal Installation and Operation Manual</a> This manual provides detailed instructions for the installation, operation, maintenance, and warranty information for InSinkErator Essentials ES30 and ES50 food waste disposals. It includes safety warnings and step-by-step guides.</p>

