

[Manuals.plus](#) /

› [Braun](#) /

› Braun Face SE830 Facial Epilator and Cleansing Brush User Manual

Braun SE830

Braun Face SE830 Facial Epilator and Cleansing Brush User Manual

Model: SE830 | Brand: Braun

1. INTRODUCTION

The Braun Face SE830 is a versatile device designed for facial care, combining two essential treatments: precise facial epilation and gentle, deep pore cleansing. This manual provides detailed instructions for the safe and effective use, maintenance, and troubleshooting of your device.

2. SAFETY INFORMATION

Please read all instructions before using this appliance to ensure safe operation. Keep this manual for future reference.

- This appliance is suitable for use in a bath or shower. For safety reasons, it can only be operated cordless.
- Do not use the epilator head on irritated skin, open wounds, moles, or varicose veins. Consult a doctor if you have a skin condition or disease.
- The cleansing brush is not intended for daily use on highly sensitive skin. If irritation occurs, reduce frequency of use or discontinue.
- Keep the appliance out of reach of children.
- Only use the appliance for its intended purpose as described in this manual.

3. PACKAGE CONTENTS

Your Braun Face SE830 package includes the following items:

- Braun Face SE830 device (main unit)
- Epilator head
- Cleansing brush head
- Lighted mirror
- Beauty pouch
- Protective cap for epilator head
- AA Battery (included)





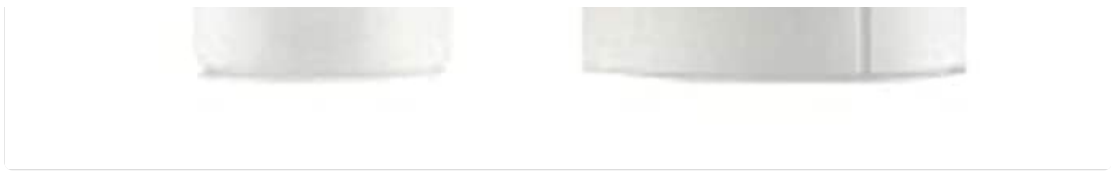


Image: Braun Face SE830 device and included accessories.

4. PRODUCT FEATURES

The Braun Face SE830 offers advanced features for comprehensive facial care:

- **Precise Facial Epilation:** The slim epilator head with 10 micro-openings captures the finest hairs (0.02 mm) for up to 4 weeks of smooth skin.
- **Deep Pore Cleansing:** The facial cleansing brush gently oscillates to remove makeup and impurities, providing a deep cleanse.
- **Wet & Dry Use:** Designed for use in the shower or bath for a more comfortable experience.
- **Battery Operated:** Cordless operation for convenience and portability.

5. SETUP

5.1 Battery Installation

1. Twist the bottom part of the device counter-clockwise to open the battery compartment.
2. Insert one AA battery, ensuring correct polarity (+/-).
3. Twist the bottom part clockwise to securely close the compartment.

5.2 Attaching Heads

To attach either the epilator or cleansing brush head:

1. Align the desired head with the main unit.
2. Press firmly until it clicks into place.
3. To remove, pull the head gently away from the main unit.

6. OPERATING INSTRUCTIONS

6.1 Facial Epilation

Use the epilator head for precise hair removal on areas such as the upper lip, chin, forehead, and for shaping eyebrows.

- **Preparation:** Ensure your skin is clean and dry. For best results, exfoliate your skin regularly to prevent ingrown hairs.
- **Technique:** Hold the epilator at a 90-degree angle to your skin. Gently glide the epilator against the direction of hair growth, applying light pressure. Move slowly to ensure all hairs are captured.
- **Eyebrow Shaping:** Use the epilator to carefully remove stray hairs around your eyebrows. Use the lighted mirror for enhanced visibility.



Image: Using the epilator head for precise eyebrow shaping.

6.2 Facial Cleansing

Use the cleansing brush head for deep pore cleansing.

- **Preparation:** Wet your face and the brush head. Apply your preferred facial cleanser directly to your skin or the brush head.
- **Technique:** Turn on the device and gently move the brush in small circular motions across your face. Avoid pressing too hard.
- **Duration:** Use for approximately one minute, dividing your face into sections (e.g., T-zone, cheeks).
- **Rinsing:** After cleansing, rinse your face and the brush head thoroughly with water.



Image: Using the cleansing brush head for deep facial cleansing.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your device.

- **Cleaning the Epilator Head:** After each use, remove the epilator head and rinse it under running water. Use the small cleaning brush (if included) to remove any trapped hairs.
- **Cleaning the Cleansing Brush Head:** Rinse the brush head thoroughly under running water after each use. Allow it to air dry. Replace the brush head every three months for best results.
- **Main Unit:** Wipe the main unit with a damp cloth. Do not submerge the main unit in water.
- **Storage:** Store the device and its accessories in the beauty pouch in a dry place, away from direct sunlight and extreme temperatures.



Image: Storing the Braun Face SE830 in its beauty pouch.

8. TROUBLESHOOTING

If you encounter issues with your Braun Face SE830, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted or incorrectly inserted.	Replace the AA battery or check its polarity.
Epilation is not effective.	Device not held at correct angle or moved too quickly.	Ensure the epilator is at a 90-degree angle and move slowly against hair growth.
Cleansing brush performance is poor.	Brush head is old or clogged.	Clean the brush head thoroughly or replace it if it's older than 3 months.
Skin irritation after use.	Over-exfoliation or sensitive skin.	Reduce frequency of use. Ensure gentle pressure. Consult a dermatologist if irritation persists.

9. SPECIFICATIONS

- **Model Number:** 610207 (SE830)
- **Power Source:** 1 x AA Battery (1.5V)
- **Water Resistance:** Waterproof (for wet & dry use)
- **Dimensions (Shipping):** 22.7 x 15.6 x 5.9 cm

- **Weight (Shipping):** 200 grams
- **Recommended Uses:** Facial hair removal, deep pore cleansing, eyebrow maintenance
- **Included Components:** Facial epilator, facial brush, lighted mirror, beauty pouch

10. WARRANTY AND SUPPORT

For warranty information, product registration, or further support, please refer to the warranty card included in your product packaging or visit the official Braun website. Do not attempt to repair the device yourself, as this may void the warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00VW6S7CE>

More documents and user manuals: <https://manuals.plus/>