

[Manuals.plus](#) /

› [Accessory USA](#) /

› Accessory USA Wall AC Power Adapter Charger User Manual for RCA DRC99392 and DRC99392E Portable DVD Players

Accessory USA DRC99392, DRC99392E

Accessory USA Wall AC Power Adapter Charger User Manual

For RCA DRC99392 and DRC99392E Portable DVD Players

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Accessory USA Wall AC Power Adapter Charger. This adapter is specifically designed to provide power and charge the internal battery for RCA DRC99392 and DRC99392E Portable DVD Players.

The product is certified with CE, FCC, and RoHS standards, ensuring it meets safety and environmental requirements. Please read this manual thoroughly before use.

PRODUCT OVERVIEW



Figure 1: Accessory USA Wall AC Power Adapter Charger. This image displays the main adapter unit with its power prongs and the output cable terminating in an RCA connector, ready for use with compatible portable DVD players.

The Accessory USA Wall AC Power Adapter Charger is a replacement power supply unit. It converts standard wall outlet AC power to the DC power required by your portable DVD player. It is designed for compatibility with specific RCA portable DVD player models.

SETUP INSTRUCTIONS

- 1. Verify Compatibility:** Before connecting, ensure your portable DVD player is an RCA DRC99392 or DRC99392E model. Using the adapter with incompatible devices may cause damage.
- 2. Connect to Device:** Locate the DC input port on your RCA portable DVD player. Carefully insert the RCA connector from the adapter's cable into this port. Ensure a snug fit.
- 3. Connect to Power Outlet:** Plug the adapter's two-prong plug into a standard North American (Type A) wall AC power outlet. Ensure the outlet is functioning correctly and provides the specified voltage (up to 240 Volts AC).
- 4. Power On:** Once connected, your portable DVD player should receive power. If it has an internal battery, the adapter will also begin charging it.

OPERATING INSTRUCTIONS

The adapter operates automatically once connected to a power source and your compatible DVD player. It provides continuous power for operation and simultaneously charges the device's internal battery if present.

- Powering the Device:** The adapter supplies the necessary power for your RCA DRC99392 or DRC99392E to function without relying on its internal battery.
- Battery Charging:** When the DVD player is connected to the adapter and the adapter is plugged into a live outlet, the internal battery of the DVD player will charge. Refer to your DVD player's manual for specific battery charging indicators.
- Disconnection:** To disconnect, first unplug the adapter from the wall outlet, then gently remove the connector from your DVD player.

MAINTENANCE

- Cleaning:** Use a dry, soft cloth to clean the adapter. Do not use liquid cleaners or solvents.
- Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- Handling:** Avoid bending or crimping the cable excessively. Do not expose the adapter to moisture or liquids.
- Inspection:** Periodically inspect the adapter and cable for any signs of damage, such as frayed wires or cracked casing. Discontinue use if damage is observed.

TROUBLESHOOTING

If you encounter issues with your adapter, please refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device not powering on/charging.	• Adapter not properly connected. • Wall outlet is not active. • Incompatible device model. • Damaged adapter or cable.	• Ensure the adapter is securely plugged into both the DVD player and the wall outlet. • Test the wall outlet with another device. • Confirm your DVD player is an RCA DRC99392 or DRC99392E. • Inspect the adapter for visible damage. If damaged, discontinue use and replace.
Adapter feels unusually hot.	• Overload or faulty connection. • Poor ventilation.	• Disconnect immediately. Ensure proper connections. • Ensure the adapter is in a well-ventilated area and not covered. If overheating persists, discontinue use.

If troubleshooting steps do not resolve the issue, please refer to the Warranty and Support section.

SPECIFICATIONS

- Brand:** Accessory USA
- Compatible Devices:** RCA DRC99392, RCA DRC99392E Portable DVD Players
- Input Voltage:** 240 Volts AC
- Output Voltage:** 12 Volts DC
- Output Current:** 2 Amps
- Wattage:** 15 Watts
- Connector Type:** RCA
- Power Plug:** Type A - 2 pin (North American)
- Safety Certifications:** CE, FCC, RoHS
- Power Source:** Corded Electric

WARRANTY AND SUPPORT

This Accessory USA product comes with the following warranty:

- **Money Back Guarantee:** 30 Days
- **Free Exchange:** 60 Days (with paid return label)
- **Worry-Free Warranty:** 365 Days

For warranty claims, technical support, or any inquiries regarding your Accessory USA Wall AC Power Adapter Charger, please contact the seller or manufacturer directly through your purchase platform or their official website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00VW8FG7Q>

More documents and user manuals: <https://manuals.plus/>