

[Manuals.plus](#) /

› [Rastar](#) /

› Rastar 70710 Porsche 918 Spyder Performance RC Car User Manual

Rastar 70710

Rastar 70710 Porsche 918 Spyder Performance RC Car User Manual

Model: 70710 | Brand: Rastar

INTRODUCTION

Thank you for choosing the Rastar 70710 Porsche 918 Spyder Performance RC Car. This 1:14 scale remote-controlled vehicle is designed for realistic driving experiences. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure safe and enjoyable use of your RC car.

SAFETY INFORMATION

WARNING: Not suitable for children under 3 years due to small parts which could present a choking hazard.

- Always operate the RC car in a safe environment, away from people, pets, and obstacles.
- Do not operate near water or in wet conditions to prevent damage to electronic components.
- Ensure proper battery installation and polarity.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries from the car and remote control when not in use for extended periods.
- Adult supervision is recommended for younger users.

PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and in good condition:

- 1 x Rastar Porsche 918 Spyder Performance RC Car (1:14 Scale)
- 1 x Remote Control
- *Note: Batteries are not included.*



Image: The Rastar Porsche 918 Spyder RC car in white with red racing stripes, shown alongside its black steering wheel-shaped remote control.

SETUP

1. Battery Installation (RC Car)

1. Locate the battery compartment on the underside of the RC car.
2. Use a screwdriver to open the battery compartment cover.
3. Insert **5 x AA batteries** (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

2. Battery Installation (Remote Control)

1. Locate the battery compartment on the back of the remote control.
2. Use a screwdriver to open the battery compartment cover.
3. Insert **1 x 9V battery** (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

3. Pairing (Initial Use)

The RC car and remote control are typically pre-paired. If they do not connect automatically:

- Ensure both the car and remote have fresh batteries installed.
- Turn on the RC car first, then the remote control.
- Place the remote control close to the car during the initial connection.

OPERATING INSTRUCTIONS

Driving the RC Car

The remote control features a steering wheel design for intuitive control:

- **Forward/Backward:** Use the trigger or lever on the remote control to move the car forward or backward.
- **Left/Right Steering:** Turn the steering wheel on the remote control to steer the car left or right.

The operational range of the remote control is approximately 18-25 meters. For optimal performance, operate the car within this range and in an open area free from interference.



Image: A white Rastar Porsche 918 Spyder RC car with red racing stripes, viewed from the front-left, positioned next to its black steering wheel-shaped remote control.

MAINTENANCE

- **Cleaning:** Wipe the car and remote control with a soft, dry cloth. Do not use water or chemical cleaners.
- **Storage:** Store the RC car and remote control in a cool, dry place away from direct sunlight and moisture.
- **Battery Care:** Remove batteries from both the car and remote control if they will not be used for an extended period to prevent leakage and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Car does not respond to remote.	Low or dead batteries in car or remote. Incorrect battery polarity. Car or remote not turned on. Out of range. Interference.	Replace batteries in both car and remote. Check battery polarity. Ensure both devices are switched ON. Move closer to the car. Operate in an area with less electronic interference.
Car moves slowly or erratically.	Low batteries. Obstruction in wheels/axles.	Replace batteries. Check and clear any debris from wheels and axles.
Short operating range.	Low batteries. Environmental interference.	Replace batteries. Move to an open area away from large metal objects or other radio-controlled devices.

SPECIFICATIONS

Brand: Rastar

Model: 70710

Manufacturer Reference: 6930751307841

Scale: 1:14

Material: Plastic

Car Battery: 5 x AA batteries (not included)

Remote Control Battery: 1 x 9V battery (not included)

Operating Range: 18-25 meters

Dimensions (L x W x H): Approximately 29.5 x 10 x 15 cm (11.6 x 3.9 x 5.9 inches)

Item Weight: 1.1 Kilograms (2.4 lbs)

Recommended Age: 3 years and up

Color: Random (White or Black)

Radio Control Type: Funkfernsteuerung (Radio Remote Control)

Number of Channels: 4

Number of Bands: 1

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or the official Rastar website. Keep your purchase receipt as proof of purchase.

© 2024 Rastar. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00VXWHM8W>

More documents and user manuals: <https://manuals.plus/>