

[Manuals.plus](#) /

› [Norwex](#) /

› Norwex Mighty Mesh Pot Scrubber Instruction Manual

Norwex Mighty Mesh Pot Scrubber

Norwex Mighty Mesh Pot Scrubber Instruction Manual

Model: Mighty Mesh Pot Scrubber

INTRODUCTION

The Norwex Mighty Mesh Pot Scrubber is designed for effective cleaning of various surfaces. Its easy-grip design and durable stainless steel construction make it suitable for removing tough stains without rusting.

PRODUCT OVERVIEW



Image 1: The Norwex Mighty Mesh Pot Scrubber, a durable stainless steel mesh ball designed for heavy-duty cleaning. Its woven structure provides effective scrubbing power.

SETUP

The Norwex Mighty Mesh Pot Scrubber requires no assembly. Simply remove it from its packaging and prepare for use.

OPERATING INSTRUCTIONS

- Wet the Scrubber:** Before use, thoroughly wet the Mighty Mesh Pot Scrubber with water.
- Apply Cleaning Agent (Optional):** For enhanced cleaning power, especially on stubborn stains or discoloration, apply a small amount of a suitable cleaning paste or detergent directly to the wet scrubber.
- Scrub the Surface:** Gently but firmly scrub the soiled surface. The stainless steel mesh is designed to remove tough grime and stains from pots, pans, ovens, grills, and other compatible surfaces.
- Rinse Thoroughly:** After scrubbing, rinse the cleaned item and the scrubber thoroughly with water to remove all residue.
- Dry:** Allow the scrubber to air dry completely after each use to maintain its condition.

Note: Always test on an inconspicuous area first to ensure compatibility with the surface being cleaned. Avoid using on delicate or non-stick surfaces unless specifically recommended by the manufacturer of the surface.

MAINTENANCE

- Regular Rinsing:** After each use, rinse the scrubber under running water to remove food particles and cleaning agents.
 - Deep Cleaning:** For a more thorough cleaning, the Norwex Mighty Mesh Pot Scrubber can be washed in a dishwasher. Place it on the top rack or in a utensil basket.
 - Storage:** Store the scrubber in a dry place to prevent moisture buildup and maintain its longevity.
-

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scrubber not cleaning effectively.	Insufficient cleaning agent or pressure; extremely stubborn stain.	Apply more cleaning paste or detergent. Increase scrubbing pressure. For very tough stains, allow the cleaning agent to sit on the stain for a few minutes before scrubbing.

Problem	Possible Cause	Solution
Scrubber appears dirty after rinsing.	Food particles or grease trapped in the mesh.	Perform a deep clean by washing in the dishwasher or by hand with hot soapy water and a brush.

SPECIFICATIONS

- **Brand:** Norwex
 - **Material:** Stainless Steel
 - **Package Dimensions:** 4.5 x 3.5 x 2 inches
 - **Weight:** Approximately 0.01 ounces
 - **Specific Uses:** Kitchen, Sink (for cleaning pots, pans, ovens, grills, ceramic tiles, glass, and for removing glue, paint, and stains from smooth surfaces)
-

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or customer support, please refer to the official Norwex website or contact their customer service directly. Proper care and maintenance, as outlined in this manual, will help ensure the longevity and performance of your Mighty Mesh Pot Scrubber.
