

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Respekta](#) /

› [Respekta SKWMI Mini Kitchen Pantry 100 cm Instruction Manual](#)

Respekta SKWMI

Respekta SKWMI Mini Kitchen Pantry 100 cm Instruction Manual

Model: SKWMI

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Respekta SKWMI Mini Kitchen Pantry. This compact kitchen unit integrates a refrigerator, a two-burner cooktop, a microwave, and a sink, designed for convenience in smaller spaces. Please read these instructions thoroughly before installation and operation, and retain them for future reference.

2. SAFETY INSTRUCTIONS

General Safety:

- Ensure the appliance is installed on a stable, level surface.
- Do not operate the appliance if it is damaged or malfunctioning.
- Keep children away from the appliance during operation.
- Do not store flammable materials near the appliance.
- Ensure adequate ventilation around the unit, especially for the refrigerator and microwave.
- Disconnect the power supply before cleaning or maintenance.

Electrical Safety:

- Connect the appliance to a properly grounded electrical outlet.
- Do not use extension cords or adapters with multiple outlets.
- Do not touch the power cord or plug with wet hands.

Refrigerator Safety:

- Do not store explosive substances or aerosols with flammable propellants in the refrigerator.
- Ensure proper air circulation inside the refrigerator for efficient cooling.

Cooktop Safety:

- Use cookware appropriate for electric cooktops.
- Do not leave cooking unattended.
- Be aware of residual heat after turning off the burners.

Microwave Safety:

- Do not operate the microwave when empty.
- Do not heat sealed containers or whole eggs.
- Use microwave-safe dishes only.
- Regularly clean the microwave interior to prevent food residue buildup.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all components are present and undamaged. The package should contain:

- Integrated Refrigerator (73L fridge, 8L 2-star freezer)
- Integrated Cooktop (1 rapid plate, 1 normal plate)
- Integrated Microwave (700W, 17L capacity)
- Stainless Steel Sink with drainage and overflow system
- Cabinet body parts (sides, bottom, door)
- Shelves and drawers
- Metal handle (stainless steel look)
- Assembly hardware for the base
- Glass turntable for microwave

4. SETUP AND INSTALLATION

Important: All wooden parts require self-assembly. It is recommended to have two people for assembly and installation.

4.1 Assembly of Cabinet

1. Unpack all components and verify against the package contents list.
2. Follow the included assembly instructions for the cabinet structure. Ensure all screws and fasteners are securely tightened.
3. Attach the metal handle to the cabinet door.

4.2 Placement

- Choose a location with a stable, level floor.
- Ensure there is sufficient space for ventilation around the back and sides of the unit, especially for the refrigerator and microwave. Avoid direct sunlight or heat sources.
- The overall dimensions of the unit are approximately 193 cm (H) x 104 cm (W) x 67 cm (D).

4.3 Refrigerator Door Reversal (Optional)

The refrigerator door hinge is reversible. If you wish to change the door opening direction, refer to the specific instructions provided with the refrigerator component for detailed steps.

4.4 Sink Installation

- Install the sink into the designated cutout in the countertop.
- Connect the drainage and overflow system according to standard plumbing practices. Ensure all connections are watertight.

4.5 Electrical Connection

The cooktop is designed to be ready for direct connection to a suitable power outlet. Ensure the electrical supply matches the requirements specified on the appliance rating label. It is recommended to have a qualified electrician perform the final electrical connections.



Image 4.1: The integrated stainless steel cooktop and sink unit. This component is installed into the cabinet countertop.

5. OPERATING INSTRUCTIONS

5.1 Refrigerator Operation



Image 5.1: Interior view of the integrated refrigerator, showing shelves, door compartments, and vegetable crisper.

- **Temperature Control:** The refrigerator features an adjustable thermostat. Turn the dial to set the desired cooling level. Higher numbers typically indicate colder temperatures.

- **Food Storage:** Store fresh foods in the main compartment (73L capacity). The vegetable crisper is ideal for fruits and vegetables. The 2-star freezer compartment (8L capacity) is suitable for short-term storage of frozen items.
- **Automatic Defrost:** The refrigerator compartment features automatic defrosting. Water from defrosting collects in a tray above the compressor and evaporates.
- **Energy Efficiency:** This refrigerator has an A+ energy efficiency rating. To maintain efficiency, avoid opening the door frequently and ensure the door seal is intact.

5.2 Cooktop Operation

- **Burner Selection:** The cooktop includes one rapid heating plate and one normal heating plate.
- **Heat Settings:** Use the control knobs to select the desired heat level for each burner. Start with lower settings and increase as needed.
- **Cookware:** Use flat-bottomed pots and pans that match the size of the heating plates for optimal efficiency.
- **Indicator Lights:** The cooktop may have indicator lights to show when a burner is active or still hot.

5.3 Microwave Operation



Image 5.2: The integrated microwave oven with control dials for power and time.

- **Power Levels:** The microwave offers 5 power levels, with a maximum output of 700W. Select the appropriate power level using the control dial.
- **Timer:** Use the analog timer dial to set cooking times up to 30 minutes. The microwave will automatically turn off when the timer reaches zero.
- **Defrost Function:** A dedicated defrost function is available on the timer dial. Select this setting for thawing frozen foods.
- **Turtable:** Always ensure the glass turntable is correctly placed inside the microwave before operation.

6. MAINTENANCE AND CLEANING

Always disconnect the appliance from the power supply before cleaning.

- **Exterior:** Clean the exterior surfaces of the cabinet and appliances with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or solvents.
- **Refrigerator:** Periodically clean the interior of the refrigerator with a solution of mild soap and water. Remove shelves and drawers for thorough cleaning. Do not use sharp objects to remove ice from the freezer compartment.
- **Cooktop:** Allow the cooktop plates to cool completely before cleaning. Wipe with a damp cloth. For stubborn stains, use a non-abrasive cooktop cleaner.
- **Sink:** Clean the stainless steel sink with a non-abrasive cleaner suitable for stainless steel. Rinse thoroughly and dry to prevent water spots.
- **Microwave:** Wipe the interior of the microwave with a damp cloth after each use to prevent food buildup. The glass turntable can be removed and washed with warm, soapy water.

7. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

| Problem | Possible Cause | Solution |
|---------------------------------|--|--|
| Refrigerator not cooling | Power outage; thermostat set too high; door not closed properly; poor ventilation. | Check power supply; adjust thermostat; ensure door is sealed; clear ventilation areas. |
| Cooktop not heating | No power; control knob not set correctly; faulty element. | Check power supply; ensure knob is turned to a heat setting; contact service if element is faulty. |
| Microwave not operating | Door not closed securely; power outage; timer not set; faulty fuse. | Ensure door is latched; check power; set timer; contact service if fuse is blown. |
| Unusual noise from refrigerator | Appliance not level; objects touching the back; normal compressor operation. | Adjust leveling feet; ensure clearance; some noises are normal. |

8. SPECIFICATIONS

Detailed specifications for the Respekta SKWMI Mini Kitchen Pantry:

- Brand:** Respekta
- Model Number:** SKWMI
- Overall Dimensions (H x W x D):** 193 cm x 104 cm x 67 cm
- Material:** Stainless steel (sink, handles), Lacquered steel (microwave facade), Wood (cabinet parts)
- Color:** Silver Grey (body & facade), White (shelves & drawer)
- Refrigerator:**
 - Capacity: 73 L (refrigerator), 8 L (2-star freezer)
 - Energy Efficiency Class: A+
 - Annual Energy Consumption: 127 kWh/year
 - Noise Level: 41 dB/A
 - Climate Class: ST/N (16°C - 38°C)
 - Features: Interior lighting, Automatic defrost (refrigerator compartment), 1 vegetable crisper, Reversible door hinge
- Cooktop:**
 - Burners: 1 rapid plate, 1 normal plate
 - Connection: Ready to be plugged in
- Microwave:**
 - Max. Power: 700 W
 - Power Levels: 5
 - Timer: 30-minute analog timer with defrost function
 - Cooking Chamber Volume: 17 L
 - Accessories: Glass turntable
- Sink:**
 - Type: Stainless steel
 - Features: Drainage and overflow system

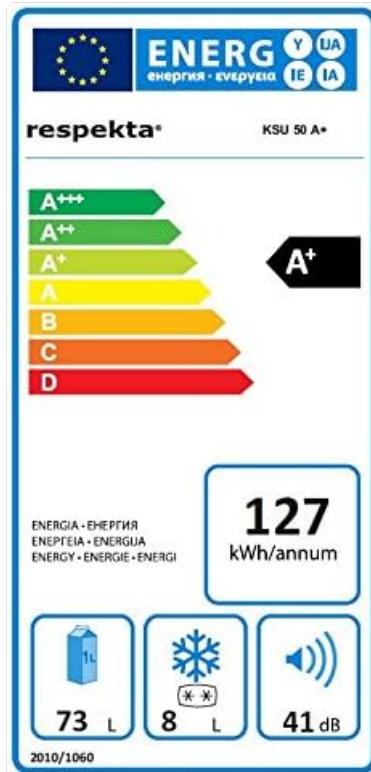


Image 8.1: Energy label for the integrated refrigerator, showing A+ efficiency, 127 kWh/annum consumption, 73L fridge, 8L freezer, and 41 dB noise level.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or spare parts, please contact Respekta customer service directly. Refer to your purchase documentation for specific warranty terms and contact details. Please have your model number (SKWMI) and purchase date available when contacting support.

You can often find support contact information on the official Respekta website or through your retailer.