

CIARKO ORP CZARNY

CIARKO ORP Black Range Hood User Manual

BRAND: CIARKO

Model: ORP CZARNY

1. Introduction

Thank you for choosing the CIARKO ORP Black Range Hood. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new appliance. Please read this manual thoroughly before use and keep it for future reference.

2. Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is intended for domestic use only.

- Ensure the power supply matches the voltage specified on the rating plate.
- Installation must be carried out by a qualified person in accordance with local regulations.
- Do not operate the range hood if the power cord is damaged.
- Regularly clean grease filters to prevent fire hazards.
- Do not flambé under the range hood.
- Keep children away from the appliance.

3. Package Contents

Carefully unpack the box and ensure all components are present and undamaged. If any items are missing or damaged, contact your retailer immediately.

- CIARKO ORP Black Range Hood (Main Unit)
- Mounting Hardware
- User Manual
- Camera Body (as per product specifications, likely a mislabeling for the main unit or a specific component)



Figure 3.1: Front view of the CIARKO ORP Black Range Hood. This image displays the sleek, cylindrical design of the range hood in black aluminum, suitable for wall mounting.

4. Setup and Installation

The CIARKO ORP Black Range Hood is designed for wall mounting. Professional installation is recommended to ensure proper functionality and safety.

1. **Preparation:** Ensure the installation area is clean, dry, and has adequate structural support for the appliance's weight (approximately 10.2 kg).
2. **Mounting:** Mark the drilling points on the wall according to the provided template (if applicable) and secure the mounting bracket. Carefully lift and attach the range hood to the bracket.
3. **Ducting:** Connect the exhaust ducting to the range hood's outlet and route it to the exterior of the building. Ensure the ducting is sealed properly to prevent air leaks.
4. **Electrical Connection:** Connect the range hood to a suitable power outlet. Ensure all electrical connections comply with local electrical codes.
5. **Final Checks:** Verify that the range hood is securely mounted, the ducting is clear, and all electrical connections are safe.

5. Operating Instructions

The CIARKO ORP Black Range Hood features intuitive controls for easy operation. The control panel is located on the front of the unit.

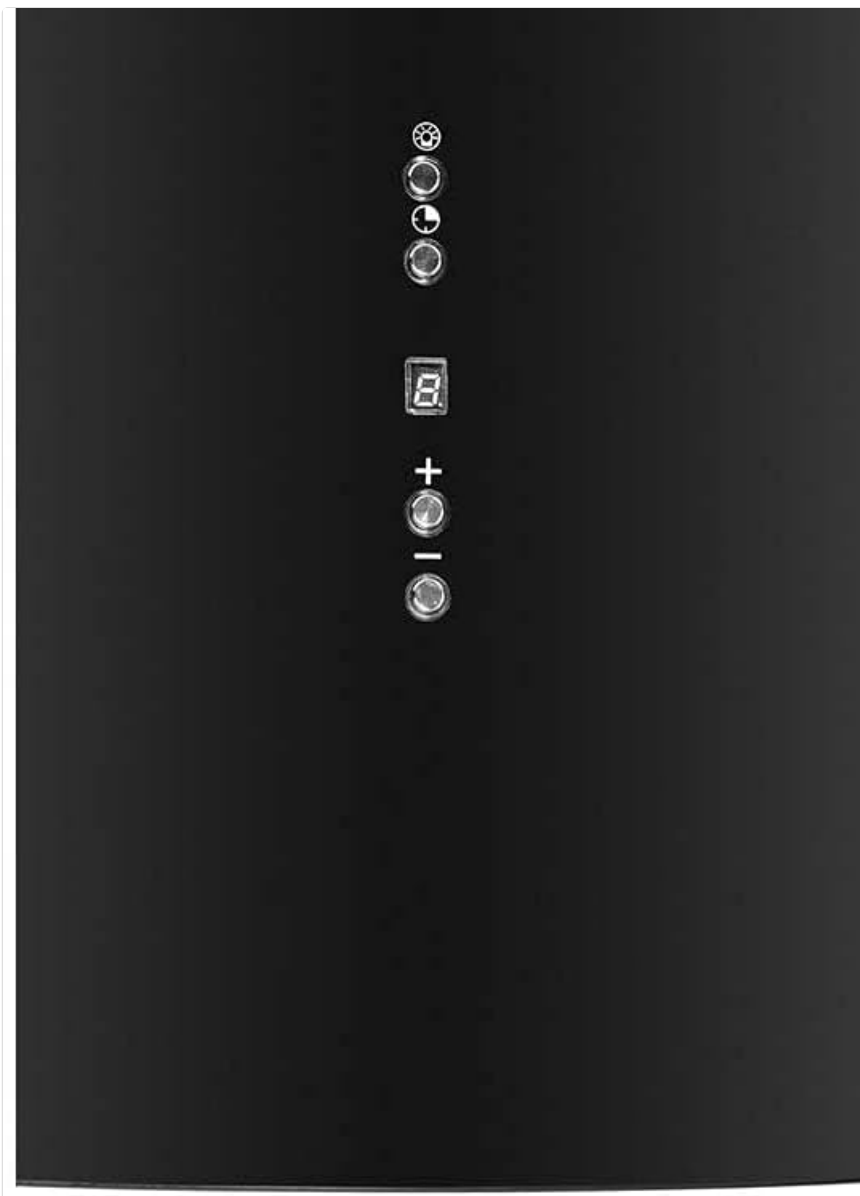


Figure 5.1: Close-up of the control panel. The panel features illuminated touch controls for power, fan speed adjustment (+/-), light, and a digital display for current settings.

- **Power On/Off:** Press the power button to turn the range hood on or off.
- **Fan Speed Adjustment:** Use the '+' and '-' buttons to increase or decrease the fan speed. The digital display will show the current speed setting.
- **Light Control:** Press the light button to turn the integrated lighting on or off.
- **Timer Function:** (If applicable, refer to specific icon on control panel) Some models may include a timer function for automatic shut-off.



Figure 5.2: View of the range hood with the bottom cover open, revealing access to the internal filters for maintenance.

6. Maintenance and Cleaning

Regular maintenance ensures optimal performance and extends the lifespan of your range hood.

- **Grease Filters:** The aluminum grease filters should be cleaned regularly (e.g., monthly, depending on usage) to prevent grease buildup. They can typically be washed by hand with warm soapy water or in a dishwasher.
- **Charcoal Filters (if installed):** If your model uses charcoal filters for recirculation, they are not washable and should be replaced every 3-6 months.
- **Exterior Cleaning:** Clean the exterior surface with a soft cloth and a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive pads that could damage the painted aluminum finish.
- **Lighting:** Replace LED lights as needed. Refer to the specific bulb type in the specifications.

7. Troubleshooting

If you encounter issues with your range hood, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Range hood does not turn on.	No power supply; tripped circuit breaker; loose connection.	Check power cord, circuit breaker, and wall outlet. Ensure proper connection.
Low suction power.	Clogged grease filters; obstructed ducting; incorrect installation height.	Clean or replace filters. Check ducting for blockages. Verify installation height.
Excessive noise.	Loose components; fan imbalance; foreign object in fan; improper ducting.	Check for loose screws. Inspect fan for obstructions. Ensure ducting is correctly installed and sized.
Lights not working.	Burnt-out bulb; loose connection.	Replace bulb. Check light connections.

8. Specifications

Detailed technical specifications for the CIARKO ORP Black Range Hood.

Brand: CIARKO

Model Number: ORP CZARNY

Mounting Type: Wall Mount

Material: Aluminium

Surface Type: Painted

Noise Level: 63 dB

Product Dimensions: 0.99 x 0.99 x 0.99 cm (Note: This dimension appears unusually small for a range hood and may be a placeholder or error in the source data.)

Item Weight: 10.2 Kilograms

Manufacturer: CIARKO

ASIN: B00W5Q6ZCE

First Available: 20. September 2019

Included Components: Camera Body (Note: This may be a mislabeling in the source data and likely refers to the main unit or a specific internal component of the range hood.)

9. Warranty and Support

For warranty information and technical support, please refer to the warranty card included with your product or contact CIARKO customer service. Keep your proof of purchase for warranty claims.

Customer Service: Please visit the official CIARKO website or contact your local retailer for support and service inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question