

Farberware 322 323

Farberware Electric Skillet Instruction Manual

Models 322 & 323

1. INTRODUCTION

Thank you for choosing the Farberware Electric Skillet, Models 322 or 323. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions thoroughly before first use and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions carefully.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the temperature control probe in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock,

this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SAVE THESE INSTRUCTIONS

3. SETUP AND FIRST USE

3.1 Unpacking

Carefully remove your electric skillet from its packaging. Retain all packaging materials for potential future storage or shipping. Ensure all components are present: skillet base, glass lid, and temperature control probe.

3.2 Initial Cleaning

Before first use, wash the skillet base and glass lid in warm, soapy water. Rinse thoroughly and dry completely. *Do not immerse the temperature control probe or its cord in water.* Wipe the probe with a damp cloth if necessary.

3.3 Assembly

1. Ensure the skillet base is clean and dry.
2. Insert the temperature control probe firmly into the receptacle on the side of the skillet base. Ensure it is fully seated.
3. Place the skillet on a stable, heat-resistant surface, away from walls or cabinets that could be damaged by heat or steam.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The temperature control probe allows you to set and maintain the desired cooking temperature. The dial typically ranges from 'WARM' to '400°F' (or similar markings).

- Plug the temperature control probe into a standard 120V AC electrical outlet.
- Turn the dial to the desired temperature setting. The indicator light on the probe will illuminate, indicating that the skillet is heating.
- The indicator light will cycle on and off as the skillet maintains the set temperature.

4.2 Cooking Guidelines

The electric skillet is versatile for frying, simmering, roasting, and baking. Adjust temperature according to your recipe. For best results, preheat the skillet for 5-10 minutes before adding food.

Note: Cooking times and temperatures may vary based on food type, quantity, and personal preference.

5. CARE AND MAINTENANCE

5.1 Cleaning

1. Always unplug the skillet and allow it to cool completely before cleaning.
2. Remove the temperature control probe. *Never immerse the probe in water or any other liquid.* Wipe it clean with a damp cloth.
3. The skillet base and glass lid are generally dishwasher safe, or can be washed by hand in warm, soapy water. For stubborn food residue, soak the skillet for a short period before cleaning.
4. Avoid using abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick surface.

5. Rinse thoroughly and dry all parts completely before storing.

5.2 Storage

Store the clean, dry skillet in a safe place where it will not be scratched or damaged. You may place a soft cloth or paper towel between the skillet and the lid to protect the non-stick surface.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Skillet does not heat	Not plugged in; probe not fully inserted; power outlet issue	Ensure plug is firmly in outlet; re-insert probe completely; check outlet with another appliance.
Indicator light not illuminating	Probe not connected; temperature dial set to 'OFF' or 'WARM' (if not heating); faulty probe	Check probe connection; turn dial to a higher temperature; contact customer support if probe is suspected faulty.
Food sticks to surface	Insufficient oil/fat; high heat; damaged non-stick coating	Use adequate cooking oil; reduce heat; avoid metal utensils to preserve coating.

7. SPECIFICATIONS

- **Model Numbers:** 322, 323
- **Power:** 120V AC, 60Hz (Wattage may vary by model, typically 1200-1500W)
- **Temperature Range:** WARM to 400°F (approx.)
- **Material:** Non-stick cooking surface, glass lid, heat-resistant handles

8. WARRANTY INFORMATION

Farberware products are manufactured to high-quality standards. This product typically comes with a limited warranty against defects in material and workmanship from the date of purchase. Please refer to the original product packaging or contact customer support for specific warranty terms and conditions applicable to your model.

9. CUSTOMER SUPPORT

For further assistance, parts, or warranty inquiries, please contact Farberware Customer Service. Contact information can typically be found on the manufacturer's website or on the original product packaging.

Note: No relevant product images or videos of the electric skillet were provided in the source data. The provided image was of the manual reprint itself, not the appliance.