

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [GEORGE KOVACS](#) /
- › [George Kovacs P305-3-654-L George's Reading Room LED Floor Lamp Instruction Manual](#)

GEORGE KOVACS P305-3-654-L

George Kovacs P305-3-654-L George's Reading Room LED Floor Lamp Instruction Manual

Model: P305-3-654-L

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your George Kovacs P305-3-654-L George's Reading Room LED Floor Lamp. Please read this manual thoroughly before installation and retain it for future reference.



Image: George Kovacs P305-3-654-L George's Reading Room LED Floor Lamp, showcasing its sleek, modern design with a chiseled nickel finish and a circular LED light head.

SAFETY INFORMATION

Always follow basic safety precautions when installing and operating electrical products to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power is OFF at the main circuit breaker before installation or maintenance.
- This product is intended for indoor use only.
- Do not operate the lamp with a damaged cord or plug.

- Avoid placing the lamp in areas where it can be easily tipped over.
- Do not attempt to modify or repair the LED components; contact qualified personnel for service.
- Keep flammable materials away from the lamp.

PACKAGE CONTENTS

Carefully unpack all components and inspect for any damage. Keep all packaging materials until you are sure all parts are present and in good condition. If any parts are missing or damaged, do not attempt to assemble or operate the lamp. Contact customer service for assistance.

- Lamp Head with LED Module (P305-3-044-L)
- Upper Pole Section
- Middle Pole Section(s) (if applicable)
- Lower Pole Section
- Lamp Base
- Power Cord with Plug
- Assembly Hardware (screws, washers, etc.)

ASSEMBLY AND SETUP

Follow these steps to assemble your floor lamp:

1. **Attach the Base:** Carefully thread the lower pole section into the lamp base. Turn clockwise until securely tightened. Ensure the power cord passes freely through the base.
2. **Assemble Pole Sections:** Connect the middle pole section(s) (if included) to the lower pole section by threading them together. Then, attach the upper pole section to the assembled pole. Ensure all connections are tight.
3. **Attach Lamp Head:** Carefully attach the lamp head with the LED module to the top of the upper pole section. Ensure the electrical connection is secure and the head is firmly seated.
4. **Position the Lamp:** Place the assembled lamp on a flat, stable surface. Ensure the power cord is not pinched or obstructed.
5. **Connect to Power:** Plug the power cord into a standard 120V AC wall outlet.



Image: Close-up view of the lamp head's adjustable hinge mechanism, showing the chiseled nickel finish and the connection point to

the lamp arm.

OPERATING INSTRUCTIONS

This LED floor lamp features a dimmable function for adjustable light output.

- **Power On/Off:** Locate the power switch, typically on the lamp pole or cord. Press once to turn the lamp ON, and again to turn it OFF.
- **Dimming Function:** If your lamp includes a dimmer, it may be integrated into the power switch or a separate control. Follow the specific instructions provided with your lamp for dimming operation. Typically, holding the button or rotating a knob will adjust brightness.
- **Adjusting Lamp Head:** The lamp head is adjustable. Gently pivot the head to direct light as desired. Do not force the movement beyond its intended range.

MAINTENANCE

Proper care ensures the longevity and performance of your lamp.

- **Cleaning:** Disconnect the lamp from power before cleaning. Use a soft, dry cloth to wipe the lamp's surfaces. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **LED Care:** The integrated LED module is designed for long life and does not require bulb replacement. Do not attempt to disassemble the LED light source.
- **Cord Inspection:** Periodically inspect the power cord for any signs of damage, fraying, or cuts. If damage is found, discontinue use and contact a qualified electrician or the manufacturer.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not light up.	No power to the outlet; loose connection; faulty switch.	Check if the outlet is live; ensure the plug is fully inserted; check the lamp's power switch.
Light is flickering or dim.	Loose connection; incompatible dimmer (if external); LED module issue.	Ensure all connections are secure; if using an external dimmer, verify compatibility; contact customer service if the issue persists.
Lamp is unstable.	Base not securely attached; uneven surface.	Tighten the base connection; place the lamp on a flat, level surface.

If you experience issues not listed here or if the problem persists after attempting the solutions, please contact George Kovacs customer support.

SPECIFICATIONS

- **Model:** P305-3-654-L
- **Brand:** GEORGE KOVACS
- **Type:** LED Floor Lamp
- **Finish Type:** Brushed (Chiseled Nickel)

- **Product Dimensions:** 10"D x 16"W x 71"H (approximate)
- **Item Weight:** 7 Pounds
- **Shade Material:** Aluminum, Iron
- **Style:** Contemporary
- **Special Feature:** Dimmable
- **Light Source Type:** LED
- **Material:** Aluminum, Iron, Nickel
- **Number of Light Sources:** 2
- **Wattage:** 26 watts
- **Voltage:** 120 Volts
- **Certification:** ETL
- **UPC:** 844349017363

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product at the time of purchase or visit the official George Kovacs website. For technical support or replacement parts, please contact George Kovacs customer service directly.

Manufacturer: George Kovacs

