

[Manuals.plus](#) /

> [Citizen](#) /

> Citizen Mens Analogue Classic Solar Powered Watch with Stainless Steel Strap AU1065-58G

Citizen AU1065-58G

Citizen Eco-Drive Watch User Manual

Model: AU1065-58G

INTRODUCTION

Thank you for purchasing the Citizen Eco-Drive Watch, Model AU1065-58G. This timepiece is powered by Citizen's innovative Eco-Drive technology, which converts any light source into energy, eliminating the need for battery replacement. This manual provides essential information for the proper use, care, and maintenance of your watch. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

PRODUCT FEATURES

- **Eco-Drive Technology:** Powered by light, never needs a battery.
- **Elegant Design:** Features 11 genuine diamonds on a black dial.
- **Durable Construction:** Black ion-plated stainless steel case and bracelet.
- **Mineral Glass:** Edge-to-edge mineral crystal for enhanced durability and clarity.
- **Water Resistance:** Splash resistant for daily use.
- **Date Display:** Convenient date window at the 3 o'clock position.





Image 1: Front view of the Citizen Eco-Drive AU1065-58G watch, showcasing its black dial with diamond markers and black ion-plated stainless steel bracelet.



SETUP

1. Initial Charging

Your Eco-Drive watch is powered by light. Before initial use, or if the watch has stopped, ensure it is fully charged. Place the watch in direct sunlight or under a bright artificial light source. The charging time varies depending on the light intensity:

- **Direct Sunlight (outdoors):** Approximately 5-6 hours for a full charge.
- **Cloudy Day (outdoors):** Approximately 15-20 hours for a full charge.
- **Fluorescent Lamp (30W, 20cm distance):** Approximately 40-50 hours for a full charge.

Note: Avoid placing the watch too close to incandescent lamps or halogen lamps, as this can cause excessive heat and damage the watch.

2. Setting the Time

1. Pull the crown out to the **second click** position. The second hand will stop.
2. Turn the crown to set the hour and minute hands. When setting the minute hand, advance it a few minutes past the desired time, then turn it back to the exact time.
3. Push the crown back into the normal position. The second hand will resume movement.

3. Setting the Date

1. Pull the crown out to the **first click** position.
2. Turn the crown clockwise or counter-clockwise to set the date.
3. Push the crown back into the normal position.

Important: Do not set the date between 9:00 PM and 1:00 AM, as this may cause the date change mechanism to malfunction. If you need to set the date during this period, first change the time to outside this window, set the date, then reset the time.

OPERATING YOUR WATCH

Daily Use and Charging

For continuous operation, expose your watch to light regularly. Even short periods of exposure to light will help maintain its charge. When not wearing the watch, store it in a location where it can receive light, such as near a window, rather than in a dark drawer.

The watch features a low charge warning function: if the watch's power reserve becomes very low, the second hand will move in two-second intervals instead of one-second intervals. This indicates that the watch needs immediate exposure to light for charging.

MAINTENANCE

- **Cleaning:** Wipe the watch case and bracelet with a soft, dry cloth regularly to remove dust and fingerprints. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth.
- **Water Resistance:** This watch is splash resistant. Avoid direct contact with water, such as swimming or showering, as this can damage the watch.
- **Temperature:** Avoid exposing the watch to extreme temperatures (below 14°F / -10°C or above 140°F / 60°C) or

sudden temperature changes.

- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and cosmetics, as these can damage the case, bracelet, or gaskets.
- **Storage:** When storing the watch for extended periods, ensure it is exposed to light periodically to prevent it from fully discharging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or second hand moves in 2-second intervals.	Insufficient charge.	Expose the watch to bright light for an extended period (refer to "Initial Charging" section).
Time is incorrect.	Time not set correctly or watch has stopped due to low charge.	Recharge the watch if necessary, then reset the time (refer to "Setting the Time" section).
Date is incorrect.	Date not set correctly or needs manual adjustment for months with fewer than 31 days.	Reset the date (refer to "Setting the Date" section). Adjust manually at the end of months with less than 31 days.

If problems persist after attempting these solutions, please contact Citizen customer support or an authorized service center.

SPECIFICATIONS

Feature	Detail
Model Number	AU1065-58G
Movement	Eco-Drive (Solar Powered)
Case Material	Black Ion-Plated Stainless Steel
Bracelet Material	Black Ion-Plated Stainless Steel
Crystal	Mineral Glass
Dial Features	Black dial with 11 diamond markers, date display
Water Resistance	Splash Resistant
Product Dimensions	5 x 5 x 4 inches; 4.69 ounces

WARRANTY AND SUPPORT

Citizen watches purchased from authorized retailers are typically covered by a manufacturer's warranty. For the Citizen AU1065-58G, a 5-year UK guarantee certificate is provided, with an extended 1-year guarantee upon registration.

CITIZEN

AUTHORISED
STOCKIST

Only Citizen watches purchased from UK authorised retailers are covered by the **Citizen 5 year UK guarantee certificate**, plus extended 1 year guarantee if you register your watch.

Please be aware, by purchasing from other sources that may not be an authorised UK online stockist, the 5 year UK guarantee may not apply.



Image 3: Information regarding Citizen's 5-year UK guarantee, with an additional 1-year extended guarantee upon watch registration.

Please retain your proof of purchase and warranty certificate. For warranty claims, service, or further assistance, please visit the official Citizen website or contact their customer support directly. Purchasing from unauthorized sources may void the warranty.

You can find more information and contact details on the official Citizen website: www.citizenwatch.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00WDH2RWW>

More documents and user manuals: **<https://manuals.plus/>**