

Timco DS-9610

Timco DS-9610 Rechargeable Shaver and Epilator User Manual

Model: DS-9610 | Brand: Timco

1. INTRODUCTION

Thank you for choosing the Timco DS-9610 Rechargeable Shaver and Epilator. This device is designed for efficient and convenient hair removal, offering both shaving and epilation functions with interchangeable heads. It features a built-in sport light for enhanced visibility and two-speed settings for personalized use. Please read this manual thoroughly before first use to ensure safe and optimal operation.

2. PRODUCT FEATURES

- **Interchangeable Heads:** Includes both an epilator head and a shaver head for versatile use on different body parts.
- **Two Speed Settings:** Select Position 1 for delicate epilation or Position 2 for faster hair removal.
- **Rotating Tweezers:** Designed to quickly remove hair from the root for long-lasting smoothness.
- **Integrated Sport-Light:** Enhances visibility during use, making it easier to spot and remove fine hairs.
- **Rechargeable Battery:** Provides approximately 45 minutes of cordless operation.

3. PACKAGE CONTENTS

The Timco DS-9610 package includes the following items:

- Timco DS-9610 Main Unit (with Epilator Head attached)
- Interchangeable Shaver Head
- Battery Charger
- Travel Case
- Cleaning Brush



Image 1: Complete Timco DS-9610 kit including the epilator, shaver head, cleaning brush, and travel bag.

4. SAFETY INFORMATION

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

- Do not use this appliance near water (e.g., in a bathtub, shower, or near a sink).
- Do not use the device while it is charging.
- Keep out of reach of children.
- Only use the charger provided with the device.
- Ensure the device is completely dry before charging.

5. SETUP AND CHARGING

5.1 Initial Charge

1. Before first use, ensure the device is fully charged.

2. Connect the charger to the device and plug it into a suitable power outlet.
3. The charging indicator light will illuminate. Allow the device to charge for the recommended time (refer to the charger's instructions or product specifications for exact duration).
4. Once fully charged, disconnect the charger.

5.2 Attaching/Detaching Heads

1. To change heads, ensure the device is turned off.
2. Gently pull the currently attached head upwards to remove it from the main unit.
3. Align the desired head (epilator or shaver) with the main unit and press down until it clicks securely into place.



Image 2: Close-up view of the epilator head on the Timco DS-9610.

6. OPERATION

6.1 Using the Epilator Head

1. Ensure your skin is clean and dry. For best results, exfoliate your skin a day before epilation to prevent ingrown hairs.
2. Turn on the device by sliding the power switch to Position 1 (delicate) or Position 2 (fast).
3. Hold the epilator at a 90-degree angle to your skin, moving it slowly against the direction of hair growth.
4. Do not press too hard; let the rotating tweezers do the work. The integrated sport light will help illuminate fine hairs.
5. After epilation, apply a soothing lotion to your skin.

6.2 Using the Shaver Head

1. Attach the shaver head to the main unit.
2. Turn on the device.
3. Hold the shaver flat against your skin and move it gently in the direction of hair growth for a smooth shave.
4. For sensitive areas, use a shaving cream or gel.



Image 3: Side view of the Timco DS-9610, showing the ergonomic design.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your Timco DS-9610.

1. **After Each Use:** Turn off the device and remove the head. Use the provided cleaning brush to remove any trapped hairs from the head and the main unit.
2. **Rinsing (if applicable):** If the heads are washable, rinse them under running water. Ensure the main unit is never submerged in water. Dry all parts thoroughly before reassembling or storing.
3. **Storage:** Store the device and its accessories in the travel case in a dry, cool place, away from direct

sunlight and moisture.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully.
Poor hair removal performance.	Heads are dirty or clogged with hair.	Clean the heads thoroughly with the cleaning brush.
Device stops during use.	Battery is low.	Recharge the device.
Skin irritation after use.	Incorrect technique or sensitive skin.	Ensure proper technique (90-degree angle for epilator, flat for shaver). Apply soothing lotion. Consider using the delicate speed setting.

9. SPECIFICATIONS

Feature	Detail
Product Dimensions	17 x 3 x 12 cm; 200 g
Manufacturer	Timco
Model Number	DS-9610
Power Source	Rechargeable Battery
Battery Life	Approximately 45 minutes
Color	Blue/White
Blade Material	Stainless Steel
Head Type	Rotary (Epilator)



Image 4: Detail showing the model number DS-9610 on the device.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Timco website. Keep your purchase receipt as proof of purchase for any warranty claims.
