

[Manuals.plus](#) /

› [Timco](#) /

› Timco HC 202 Home Hair Cutting Kit User Manual

Timco HC 202

Timco HC 202 Home Hair Cutting Kit User Manual

Model: HC 202

1. INTRODUCTION

Thank you for choosing the Timco HC 202 Home Hair Cutting Kit. This manual provides essential information for the safe and effective use, maintenance, and care of your new hair clipper kit. Please read all instructions carefully before first use and retain this manual for future reference.



Image 1: Timco HC 202 Hair Clipper Kit. This image shows the main hair clipper unit with its power cord.

2. PRODUCT COMPONENTS

Your Timco HC 202 Home Hair Cutting Kit includes the following items:

- 1 x Hair Clipper Unit
- 4 x Interchangeable Cutting Combs (various lengths)
- 1 x Pair of Scissors
- 1 x Barber Comb
- 1 x Cleaning Brush
- 1 x Blade Guard
- 1 x Lubricating Oil

3. IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- **General Use:** Use with caution near the face and eyes.
- **Small Parts:** Avoid ingestion or inhalation of small parts. Keep out of reach of small children.
- **Children:** Supervise children when the kit is in use or accessible. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Cleaning:** Always keep the kit clean. Unplug the appliance before cleaning.
- **Water:** Do not immerse the clipper in water or other liquids. Do not use while bathing or in the shower.
- **Power Cord:** Do not operate the appliance with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- **Storage:** Store the appliance in a dry place.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check the hair clipper and accessories for any signs of damage.
3. **Blade Adjustment (if necessary):** The clipper blades are factory-set for optimal cutting. If adjustment is needed, refer to the maintenance section.
4. **Attach Comb:** Select the desired cutting comb length. Align the comb with the clipper blade and push firmly until it clicks into place. Ensure it is securely attached.



Image 2: Close-up view of the Timco HC 202 clipper blades, showing the sharp cutting edge.

5. OPERATING INSTRUCTIONS

1. **Preparation:** Ensure hair is clean, dry, and free of tangles. Use the barber comb to detangle hair before cutting.
2. **Power On:** Plug the clipper into a suitable electrical outlet. Locate the power switch on the side of the clipper and slide it to the "ON" position.



Image 3: Close-up view of the Timco HC 202 power switch, indicating the on/off positions.

3. Cutting Technique:

- Always start with a longer comb length than you think you need. You can always cut more hair off, but you cannot put it back on.
- Hold the clipper with the teeth of the comb flat against the head.
- Move the clipper slowly through the hair, against the direction of hair growth.
- Overlap strokes to ensure an even cut.
- Use the scissors for detailing or for areas where the clipper cannot reach.

4. **Power Off:** Once finished, slide the power switch to the "OFF" position and unplug the clipper from the outlet.

Your browser does not support the video tag.

Video 1: Hair Clipper Usage Demonstration. This video demonstrates the general use of a hair clipper for men's haircuts, showing various cutting techniques and styles.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your hair cutting kit.

- 1. **Clean Blades:** After each use, remove the cutting comb. Use the cleaning brush to brush away any loose hairs from the blades and the clipper body.
- 2. **Oil Blades:** Apply a few drops of the provided lubricating oil to the blades. Turn the clipper on for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and prevents rust.
- 3. **Store:** Place the blade guard over the blades when not in use. Store the clipper and all accessories in a dry, safe place.

Your browser does not support the video tag.

Video 2: Unboxing and Initial Setup. This video shows the unboxing process and initial setup of a similar hair clipper, including attaching combs and basic maintenance.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Not plugged in correctly, power outlet issue, damaged cord.	Ensure the clipper is securely plugged into a working outlet. Check the power cord for damage. If damaged, do not use and contact customer support.
Clipper pulls hair or cuts poorly.	Blades are dull, blades are dirty, insufficient lubrication.	Clean the blades thoroughly with the brush. Apply lubricating oil to the blades. If the problem persists, blades may need sharpening or replacement.
Excessive noise or vibration.	Blades are misaligned, foreign object in blades.	Clean blades and ensure no foreign objects are present. Check blade alignment. If necessary, adjust the taper lever.

8. SPECIFICATIONS

Model Number: HC 202
Brand: Timco
Power Source: Corded Electric
Dimensions: 5.5 x 5.5 x 19 cm (2.17 x 2.17 x 7.48 inches)
Weight: 480 g (1.06 lbs)
Components Included: Hair clipper, 4 interchangeable cutting combs, scissors, barber comb, cleaning brush, blade guard, lubricating oil.
Country of Origin: United States

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Timco customer service directly. Keep your purchase receipt as proof of purchase.

Safety Note: This item is a hazardous material product. Hazardous handling items such as flammable, pressure-packed, corrosive substances, etc., cannot be returned to Amazon Mexico. If you have received a damaged product or have any problem with your product, please contact our Customer Service team. [This policy does not apply to fragile items]

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question