

Metronic RADIO PORTABLE FM BLEUE USB SD METRONIC

Metronic mooov Portable FM Radio User Manual

Model: RADIO PORTABLE FM BLEUE USB SD METRONIC

INTRODUCTION

Thank you for choosing the Metronic mooov Portable FM Radio. This compact and versatile radio allows you to enjoy your favorite FM stations, as well as music from USB drives and microSD cards. With its integrated rechargeable battery, digital display, and ergonomic design, it's perfect for use at home or on the go. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

SAFETY INFORMATION

Please read these safety instructions carefully before using the device and keep them for future reference. Incorrect use may result in electric shock, fire, or other hazards.

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid placing the device near heat sources such as radiators, stoves, or other heat-producing appliances.
- Do not disassemble or modify the device. Refer all servicing to qualified service personnel.
- Use only the provided USB cable for charging.
- Keep the device away from strong magnetic fields.
- Ensure proper ventilation around the device during operation and charging.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

- Metronic mooov Portable FM Radio
- Mini-USB to USB-A charging cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your portable radio.



Figure 1: Front View. This image shows the front of the radio, highlighting the speaker with its blue ring, the digital display, and the control buttons for numbers (1-9, 0), playback (play/pause, skip), and mode selection (FM, MP3).



Figure 2: Top and Side Ports. This image displays the top and side of the radio, showing the USB port, microSD card slot, ON/OFF switch, volume knob, and mini-USB charging port.

Controls and Ports:

- **Digital Display:** Shows FM frequency, time (if applicable), and track information.
- **Speaker:** Integrated audio output.
- **Number Buttons (1-9, 0):** Used for direct frequency input or track selection.
- **◀◀ (Previous/Rewind):** Skips to the previous track or rewinds.

- **▶▶ (Next/Fast Forward):** Skips to the next track or fast forwards.
- **▶■ (Play/Pause):** Starts or pauses playback.
- **FM Button:** Switches to FM radio mode.
- **MP3 Button:** Switches to MP3 playback mode (USB/microSD).
- **USB Port:** For connecting USB flash drives for music playback.
- **MicroSD Card Slot:** For inserting microSD cards for music playback.
- **ON/OFF Switch:** Powers the device on or off.
- **Volume Knob:** Adjusts the audio volume.
- **Mini-USB Charging Port:** For connecting the charging cable.
- **3.5mm Headphone Jack:** For connecting headphones (32 Ω typ.).
- **Telescopic Antenna:** Extends for improved FM reception.

SETUP

1. Initial Charging

Before first use, fully charge the radio's integrated Li-ion 3.7 V battery. A full charge provides up to 10 hours of autonomy.

1. Connect the supplied mini-USB to USB-A cable to the mini-USB charging port on the radio.
2. Connect the USB-A end of the cable to a standard USB power adapter (5V, not supplied) or a computer's USB port.
3. The charging indicator (if present, usually on the display or a small LED) will show charging status. Once fully charged, disconnect the cable.

2. Inserting USB Drive or MicroSD Card (Optional)

To play music from external storage, insert a USB flash drive or a microSD card into the respective slots.

- **USB Drive:** Carefully insert your USB flash drive into the USB port until it is securely seated.
- **MicroSD Card:** Insert your microSD card into the microSD card slot with the contacts facing down until it clicks into place. To remove, push it in again until it springs out.

OPERATING INSTRUCTIONS

1. Power On/Off

Slide the ON/OFF switch to the "ON" position to power on the radio. Slide it to "OFF" to power off.

2. Adjusting Volume

Rotate the volume knob (usually on the side) clockwise to increase volume and counter-clockwise to decrease volume.

3. FM Radio Mode

The radio operates on FM frequencies from 87.5 to 108 MHz.

1. Extend the telescopic antenna for optimal reception.
2. Press the **FM** button to switch to FM radio mode.
3. **Automatic Scan:** Press and hold the **▶■ (Play/Pause)** button to initiate an automatic scan for available FM stations. The radio will scan and save up to 50 memorizable stations.
4. **Manual Tuning:** Use the **◀◀** and **▶▶** buttons to manually tune to the next/previous frequency or saved station.
5. **Direct Frequency Input:** Use the number buttons (1-9, 0) to directly enter a desired FM frequency (e.g., for 98.5 MHz, press 9, 8, 5).

4. MP3 Playback Mode (USB/MicroSD)

Ensure a USB drive or microSD card with MP3 audio files is inserted.

1. Press the **MP3** button to switch to MP3 playback mode. The radio will automatically detect and start playing music from the inserted storage.
2. Use the ►|| (Play/Pause) button to pause or resume playback.
3. Use the ◀◀ and ▶▶ buttons to skip to the previous or next track.
4. **Direct Track Selection:** Use the number buttons to directly select a track number (e.g., for track 15, press 1, then 5).

5. Headphone Use

Connect any standard 3.5mm stereo headphones to the headphone jack for private listening. The internal speaker will automatically mute when headphones are connected.

MAINTENANCE

Proper care will ensure the longevity of your Metronic mooov Portable FM Radio.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the radio. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the radio in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Recharge it regularly, even if not in constant use.
- **Antenna:** Handle the telescopic antenna gently to prevent bending or breaking. Retract it when not in use.

TROUBLESHOOTING

If you encounter any issues, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Radio does not power on.	Battery is depleted.	Charge the radio using the provided USB cable.
Poor FM reception.	Antenna not extended or weak signal.	Fully extend the telescopic antenna. Try repositioning the radio.
No sound from speaker.	Volume too low or headphones connected.	Increase the volume. Disconnect headphones if not needed.
USB/MicroSD playback not working.	Incorrect mode, unsupported file format, or faulty storage.	Ensure you are in MP3 mode. Check if files are in MP3 format. Try a different USB drive/microSD card.
Buttons are unresponsive.	Temporary software glitch.	Power off the radio, wait a few seconds, then power it back on.

SPECIFICATIONS

Brand	Metronic
Model Number	RADIO PORTABLE FM BLEUE USB SD METRONIC (477203)
Color	Black and Blue

Tuner Type	FM
FM Frequencies	87.5 - 108 MHz (50 memorizable stations)
Display	2-inch LCD
Audio Output Power	1 Watt
Connectivity	USB, MicroSD
Headphone Output	3.5mm Jack (32 Ω typical)
Battery	Integrated Li-ion 3.7 V
Battery Autonomy	Up to 10 hours
Charging Port	Mini-USB (5V)
Dimensions (L x W x H)	110 mm x 33 mm x 79 mm
Weight	200 grams
Included Components	USB cable

WARRANTY AND SUPPORT

This Metronic product comes with a manufacturer's warranty of 2 years from the date of purchase. For warranty claims, technical support, or further assistance, please contact your retailer or visit the official Metronic website. Keep your proof of purchase for warranty validation. You can visit the Metronic brand store for more information: [Metronic Store on Amazon.fr](#)

© 2023 Metronic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question