

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Indesit](#) /
- › [Indesit Washing Machine Detergent Drawer RB5905670 Instruction Manual](#)

### Indesit RB5905670

# Indesit Washing Machine Detergent Drawer RB5905670 Instruction Manual

Model: RB5905670

## PRODUCT OVERVIEW

---

This document provides instructions for the installation, operation, and maintenance of the Indesit Washing Machine Detergent Drawer, model RB5905670. This is an original manufacturer's replacement part designed for specific Indesit washing machine models.



*Image: Indesit Washing Machine Detergent Drawer, model RB5905670. This image displays the complete drawer unit, typically consisting of compartments for pre-wash, main wash, and fabric softener.*

## COMPATIBLE MODELS

---

This detergent drawer is compatible with a wide range of Indesit washing machine models. Please verify your washing machine's model number against the list below to ensure compatibility. The part number for this drawer is RB5905670.

**Note:** The following list is extensive. If your model is not listed, please consult your appliance's original documentation or contact Indesit customer support.

- C00065463
- LISA100FR, LISA11FR, LISA111FR
- AVL120FR
- ARISTON WIXL145DE
- IWC5125FR, IWC5125EU
- IWE6145FR

- WIL11FR, WIL12FR, WIXL106FR, WIXL12FRTE, WIXE14FR1
- ABS536TX, ABS436TX, ABS636TX, ALS748TX, ALS948TX, ALS637TX, BAS608TXGR, BAS605TXCO, BAS607TXEU, ABS430TX, WGS638T, WGS638TR, WGS438TR, WGS68TGIT, WGS639TE, ABS636TXEO, ALS948TXEO, LAS608TXGRIT, WGS638TXU, WGS838TXU, WGS1038TXU, ALS748TXR, ALS948TXR, WGS69TS, W63TIT, AL64XIT, AB64XIT, AB63XIT, AB53XIT, AL44XIT, AB43XIT, ALS109XIT, ALS89XSIT, ALS89XIT, ALS68XIT, ALS64XIT, ABS63XIT, ABS53XIT, ABS43XIT, AB54XPT, ALS104XFR, AB63XEX, ABS63XEU, ALS88XEU, ALS109XEU, ALS129XEU, W93UK, W103UK, WS4XIT, WS431TXEX, WS88XIT, WS642TXEX, WS84TXEX, WS105TXEX, W63XIT, W123UK, W69W31TXEX, W646XPT, W43XSP, W63XSP, W88XIT, W84TXEX, W105TXEX, W84TK, W11L23SUK, W123XNL, W124XNL, AB53XEU, AB65XEU, AL53XEU, AL4XSP, AL64XSP, W43XEUIT, W133UK, W44XIT, W68XIT, W68XSIT, W125XFR, WS43XIT, WS63XIT, W133SUK, W1868XIT, W642TXEX, W443XGIT, W432XSIT, W683XGIT, W682XSIT, W842XSIT, W843XGIT, WS6833XGIT, WS682XSIT, W105XDE, W124XDE, W125XDE, W125XSDE, LES69XIT, LES869XIT, WH66TXE, WH96TXE, ABS63XEO, ALS88XEO, ALS109XEO, W646XSPT, W857XSPT, WA6XIT, WA8XIT, WES9XR
- wil106, wil106fr, wil106sp, wil11, wil113, wil113uk, wil113ukte, wil12, wil12/1, wil1200ot, wil123, wil124, wil125, wil126, wil133, wil133ukte, wil133uktev, wil133uktev/, wil14, wil140b, wil143, wil143ukte, wil144, WIL145, wil146, wil146sp, WIL62, wil63, wil6, wil66, wil68, wil81, WIL82, WIL85, wil86, wil95, wilb12, wilm64, wixe107, wixe12.1, wixe127, wixe127.r, wixe127uktev, wixe147, wixe101.wir, wir104, wixl105, wixl106, wixl106.n, wixl115, wixl12, wixl123, wixl123.1, wixl123uk, wixl123uk.1, wixl123uk.t, wixl123uktev, wixl126, wixl128.r, wixl133, wixl133uk, wixl135, wixl14, wixl143, wixl143uk, wixl143uktev, wixl145, wixl65, wixl85, wixl86, wixl86.r, wixxe127, wixxl108.r, wixxl128, wixxl148.r, wixxl166.r, wixxl168.r
- iwc7125s, iwc7128, iwc71281ecoeu, iwc71282eco, iwc71351C, iwc7145, iwc71450, iwc71450uk, iwc71450uke, iwc71451C, iwc71451eco, iwc71451ecou, iwc71451ecouk, iwc7148, iwc7168, iwd5085, iwd5105, iwd5123, iwd51231eco, iwd51231ehals, iwd5123uk, iwd5123uke, iwd5125, iwd5145, iwd6085, iwd6103, iwd6105, iwd61051eco, iwd6105b, iwd61082ceco, iwd61082cecoit.t, iwd6125, iwd61250K, iwd61250, iwd61250kuke, iwd61251, iwd6125s, iwd6125uk, iwd61282ceco, iwd6143dd0, iwd6145, iwd61450, iwd61450uk, iwd61450uke, iwd61451, iwd61451beco, iwd61451cecoeu, iwd61451de.t, iwd61451ecobuk.t, iwd61481, iwd6165, iwd7085b, iwd71051ceco, iwd7105b, iwd7108b, iwd7108eco, iwd7109bseco, iwd71250, iwd71250.t, iwd71250s, iwd71250suk, iwd71250suke, iwd71250uk, iwd71250uk.t, iwd71250uke, iwd71251, iwd71251C, iwd71251eco, iwd71251ecouk.t, iwd71251sc, iwd71251seco, iwd71251secouk, iwd71251uk.t, iwd71252cecoeu.t, iwd7125b, iwd7125eco, iwd7125s, iwd7128, iwd71282bscecoit, iwd7128b, iwd7128beco, iwd7128s, iwd7145, iwd71451beco, iwd71451cfr.t, iwd71451eccouk.t, iwd71451keco, iwd71451kecouk, iwd71451seco, iwd71451secouk, iwd7145b, iwd7145K, iwd7145kuke, iwd7145suk, iwd7145suke, iwd7145uk, iwd7145uke, iwd7148, iwd71482b, iwd71482bde.t, iwd7148b, iwd7148sl, iwd7168, iwd71682b, iwd7168s, iwd7168suk, iwd7168uk, iwe5105, iwe5125, iwe6085, iwe6105, iwe61051ceco, iwe6108eco, iwe6125, iwe61251eco, iwe6125b, iwe6126bseco, iwe61282ceco, iwe6145, iwe61481, iwe7105b, iwe71082eco, iwe71082sceco, iwe7108eco, iwe7108s, iwe71251beco, iwe7125b, iwe71281eco, iwe71282eco, iwe7128b, iwe7128beco, iwe7128eco, iwe7129bseco, iwe71451bc, iwe71451beco, iwe71451becouk.t, iwe7145b, iwe7145K, iwe7145buk, iwe7145suk, iwe7145suke, iwe71482b, iwe71482beco, iwe7148b, iwe71682beco, iwe7168b, iwe7168buk, iwe7168suk, iwe7168s, wil1000000ot, wil101, WIL102, wil103, wil103uk, WIL105

## SETUP AND INSTALLATION

---

This section outlines the general procedure for installing a replacement detergent drawer. Specific steps may vary slightly depending on your washing machine model. Always ensure the appliance is disconnected from the power supply before attempting any installation or maintenance.

1. **Disconnect Power:** Unplug the washing machine from the electrical outlet to prevent electric shock.
2. **Remove Old Drawer:** Fully pull out the existing detergent drawer. Most drawers have a release tab or button, often located in the center or on the side of the drawer, which needs to be pressed to fully remove it.
3. **Inspect Housing:** Clean any detergent residue or mold from the drawer housing inside the washing machine. This ensures proper function and prevents blockages.

4. **Insert New Drawer:** Align the new Indesit detergent drawer with the tracks in the washing machine's housing. Gently push the drawer in until it clicks securely into place. Do not force it.
5. **Test Functionality:** Once installed, open and close the drawer a few times to ensure it slides smoothly and locks correctly.
6. **Reconnect Power:** Plug the washing machine back into the electrical outlet.

For visual guidance, refer to your washing machine's specific user manual or manufacturer's website for model-specific installation videos, if available.

## OPERATING INSTRUCTIONS

---

The detergent drawer is designed to dispense washing agents at the appropriate stages of the wash cycle. It typically features multiple compartments:

- **Compartment 1 (Pre-wash):** For pre-wash detergent or stain removers.
- **Compartment 2 (Main Wash):** For main wash detergent (powder or liquid).
- **Compartment 3 (Fabric Softener):** For fabric softener or conditioner. Fill only to the 'MAX' line.

### Usage Steps:

1. Pull out the detergent drawer.
2. Add the appropriate amount of detergent to the main wash compartment (and pre-wash if needed).
3. Pour fabric softener into its designated compartment, ensuring not to exceed the maximum fill line.
4. Gently push the drawer back into the washing machine until it is fully closed.
5. Select your desired wash program and start the machine.

Always follow the detergent manufacturer's instructions for dosage and your washing machine's manual for specific program requirements.

## MAINTENANCE

---

Regular cleaning of the detergent drawer is essential to prevent blockages, mold growth, and ensure optimal dispensing of washing agents.

1. **Remove the Drawer:** Pull out the drawer completely as described in the "Setup and Installation" section.
2. **Disassemble (if applicable):** Some drawers have removable inserts or caps. Carefully detach these for thorough cleaning.
3. **Clean the Drawer:** Wash the drawer and its components under warm running water. Use a soft brush or cloth to remove any detergent residue, mold, or limescale. A mild detergent or vinegar solution can be used for stubborn buildup.
4. **Clean the Housing:** Use a damp cloth to wipe the inside of the drawer housing in the washing machine, paying attention to the top spray nozzles and corners.
5. **Rinse and Dry:** Rinse all drawer components thoroughly and allow them to air dry completely before reassembling and reinserting into the machine.

Perform this maintenance monthly or as needed, especially if you notice detergent not dispensing correctly or a build-up of residue.

## TROUBLESHOOTING

---

Here are some common issues related to the detergent drawer and their potential solutions:

Problem	Possible Cause	Solution
Detergent not dispensing	Blocked nozzles, excessive detergent, drawer not fully closed, water pressure issue.	Clean the drawer and housing thoroughly. Ensure the drawer is pushed in completely. Check water supply and pressure.
Water remaining in softener compartment	Siphon cap blocked or dirty, overfilling softener.	Remove and clean the siphon cap (if present). Do not fill softener above the 'MAX' line.
Mold or unpleasant odor	Infrequent cleaning, damp environment.	Clean the drawer and housing regularly. Leave the drawer slightly ajar after use to allow it to dry.
Drawer difficult to open/close	Residue buildup on tracks, misaligned.	Clean the tracks and ensure the drawer is correctly aligned during insertion.

If these solutions do not resolve the issue, please contact a qualified service technician or Indesit customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Indesit
Model Information / Part Number	RB5905670
Product Dimensions (L x W x H)	183 mm x 53 mm x 38 mm
Package Dimensions	22 x 15.8 x 4.6 cm; 200 g
ASIN	B00WIC3JGA
Batteries Required	No
Manufacturer	Indesit
First Available Date	31 August 2017

## WARRANTY AND SUPPORT

Specific warranty information for this replacement part is not provided in the product details. Please refer to your original purchase documentation or contact Indesit customer support for details regarding warranty coverage for spare parts. For further assistance, technical support, or to inquire about service, please visit the official Indesit website or contact their customer service department in your region.

