

[Manuals.plus](#) /

› [Kawasaki](#) /

› Kawasaki Teryx 750 4X4 Complete Maintenance Kit User Manual

Kawasaki KawMaint-1

Kawasaki Teryx 750 4X4 Complete Maintenance Kit User Manual

INTRODUCTION

This manual provides essential instructions for the proper use and maintenance of your Kawasaki Teryx 750 4X4 Complete Maintenance Kit (Model: KawMaint-1). Regular maintenance is crucial for ensuring the longevity and optimal performance of your vehicle. Please read all instructions carefully before proceeding with any maintenance tasks.



Image: Overview of the Kawasaki Teryx 750 4X4 Complete Maintenance Kit, showing various fluid bottles and filters.

Safety Precautions

- Always wear appropriate personal protective equipment (PPE) such as gloves and eye protection.
- Ensure the vehicle is on a stable, level surface and the engine is off and cool before beginning any maintenance.
- Refer to your vehicle's official service manual for specific torque specifications and additional safety guidelines.
- Dispose of used fluids and parts responsibly according to local regulations.

Kit Contents

Your Kawasaki Teryx 750 4X4 Complete Maintenance Kit typically includes the following components. Please verify all items are present before starting maintenance.

- Engine Oil (e.g., 3 Quarts of Kawasaki 10W-40 or equivalent)
- Oil Filter
- Air Filter

- Spark Plugs (quantity may vary based on engine configuration; verify for your specific model)
- Other fluids or filters as specified for a complete maintenance cycle.

MAINTENANCE PROCEDURES

Follow these steps for routine maintenance. Always consult your vehicle's service manual for detailed instructions specific to your Kawasaki Teryx 750 4X4.

1. Engine Oil Change

1. Warm up the engine for a few minutes, then turn it off.
2. Place a drain pan under the engine oil drain plug.
3. Remove the drain plug and allow all old oil to drain completely.
4. Replace the drain plug with a new washer (if applicable) and tighten to the manufacturer's specified torque.
5. Remove the old oil filter.
6. Apply a thin coat of new oil to the gasket of the new oil filter.
7. Install the new oil filter and tighten according to manufacturer specifications (usually hand-tight plus a quarter turn).
8. Fill the engine with the specified amount and type of new engine oil (e.g., 3 Quarts).
9. Check the oil level using the dipstick, ensuring it is between the minimum and maximum marks.
10. Start the engine and let it run for a few minutes, then check for leaks. Turn off the engine and recheck the oil level after a few minutes.

2. Air Filter Inspection and Replacement

1. Locate the air filter housing, typically under the seat or in the engine compartment.
2. Open the housing and carefully remove the old air filter.
3. Inspect the old filter for excessive dirt, debris, or damage.
4. Install the new air filter, ensuring it is seated correctly and the housing is sealed properly.

3. Spark Plug Replacement

1. Allow the engine to cool completely.
2. Remove the spark plug caps.
3. Using a spark plug wrench, carefully remove the old spark plugs.
4. Inspect the old spark plugs for wear or fouling.
5. Gap the new spark plugs to the specification found in your vehicle's service manual.
6. Install the new spark plugs by hand to avoid cross-threading, then tighten to the specified torque.
7. Reattach the spark plug caps securely. Ensure the correct quantity of spark plugs is used for your engine (e.g., two for a two-cylinder engine).

4. Differential and Gear Oil Check/Change

While specific fluids for differentials and gears may not be included in every kit, a complete maintenance cycle often involves checking and changing these fluids. Refer to your vehicle's service manual for locations, fluid types, and capacities.

- Locate the front and rear differential fill and drain plugs.
- Check fluid levels and condition. If fluid is dark or contaminated, proceed with a change.

- Drain old fluid, replace drain plug, and refill with new, specified gear oil to the correct level.

TROUBLESHOOTING COMMON ISSUES

This section addresses common questions or issues that may arise during or after using the maintenance kit.

- **Oil Leak After Change:** Double-check the oil drain plug and oil filter for proper tightening. Ensure gaskets are seated correctly and not damaged.
- **Engine Not Starting After Spark Plug Change:** Verify spark plug wires are correctly attached to the corresponding plugs and coils. Ensure spark plugs are gapped correctly.
- **Incorrect Spark Plug Quantity:** The kit is designed for general maintenance. Always verify the exact number of spark plugs required for your specific Kawasaki Teryx 750 4X4 engine configuration using your vehicle's service manual.

SPECIFICATIONS

Component	Description / Quantity
Brand	Kawasaki
Model Number	KawMaint-1
Engine Oil Volume	3 Quarts (specific type may vary, typically 10W-40)
Vehicle Service Type	ATV, UTV (Kawasaki Teryx 750 4X4)
Package Information	Bottle (for fluids)

WARRANTY AND SUPPORT

For specific warranty information regarding the components within this kit, please refer to the individual product packaging or contact Kawasaki customer support directly. For technical assistance or further inquiries, consult your authorized Kawasaki dealer or the official Kawasaki website.

Note: Use of non-genuine parts or improper maintenance procedures may void your vehicle's warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question