

[manuals.plus](#) /› [Coby](#) /› [Coby Portable Compact CD Player \(Model CD-190-RED\) Instruction Manual](#)

Coby CD-190-RED

Coby Portable Compact CD Player (Model CD-190-RED) Instruction Manual

1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation of your Coby Portable Compact CD Player, Model CD-190-RED. Please read this manual thoroughly before using the device and retain it for future reference. This personal music player offers a simple and functional solution for enjoying your favorite audio CDs on the go.

2. IMPORTANT SAFETY INFORMATION

- **Power Source:** Use only the specified power source (2 AA batteries or a compatible AC/DC power adapter, not included).
- **Water and Moisture:** Do not expose the device to water, rain, or moisture. Avoid using it near bathtubs, sinks, or other wet environments.
- **Heat:** Keep the device away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Clean only with a dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Battery Disposal:** Dispose of used batteries according to local regulations. Do not incinerate.

3. PACKAGE CONTENTS

Upon opening the package, ensure all items are present and in good condition:

- Coby Portable Compact CD Player (Model CD-190-RED)
- Stereo Earbuds
- User Manual (this document)



Image: Coby Portable Compact CD Player in its retail packaging, showing the red player inside a clear plastic blister pack with Coby branding.

4. PRODUCT OVERVIEW

The Coby Portable Compact CD Player features a slim and compact design, making it ideal for portability. It includes essential controls and a digital LCD display for easy navigation.

Key Features:

- Slim Compact Design
- Digital LCD Display
- Skip, Search, Pause/Play functions
- Digital Volume Control
- 3.5mm Headphone Jack
- Low Battery Indicator



Image: Top view of the Coby Portable Compact CD Player in red, displaying the Coby logo and control buttons.

Product Overview Video:

Your browser does not support the video tag.

Video: A brief overview of a portable CD player, highlighting its compact design, display, low battery indicator, and headphone jack. This video demonstrates general features common to portable CD players.

A Closer Look at the Player:

Your browser does not support the video tag.

Video: A detailed look at the physical aspects of a portable CD player, showcasing its buttons, ports, and overall build.

This video provides a closer view of the device's exterior.

5. SETUP

5.1 Powering the Device

Your Coby Portable Compact CD Player can be powered in two ways:

1. **Batteries:** Insert two (2) AA batteries into the battery compartment located on the underside of the player. Ensure correct polarity (+/-).
2. **AC/DC Adapter:** Connect a compatible AC/DC power adapter (not included) to the DC power input jack on the side of the player.

5.2 Connecting Headphones

Plug the included stereo earbuds or your preferred 3.5mm headphones into the 3.5mm AUX jack on the side of the CD player.

6. OPERATING INSTRUCTIONS

6.1 Inserting a CD

1. Gently slide the CD compartment latch to open the lid.
2. Place your audio CD onto the center spindle, ensuring it clicks into place.
3. Close the CD compartment lid firmly until it latches.

6.2 Basic Playback Controls

- **Power On/Off:** Use the power switch or button (refer to device markings) to turn the player on or off.
- **Play/Pause:** Press the **PLAY/PAUSE** button to start or pause playback.
- **Stop:** Press the **STOP** button to end playback.
- **Skip Tracks:** Use the **SKIP FORWARD** or **SKIP BACKWARD** buttons to navigate between tracks.
- **Search:** Press and hold the **SKIP FORWARD** or **SKIP BACKWARD** buttons to fast-forward or rewind within a track.
- **Volume Control:** Adjust the digital volume control to your desired listening level.

6.3 Digital LCD Display

The digital LCD display shows track number, playback time, and battery status. A low battery indicator will alert you when batteries need replacement or recharging.

7. MAINTENANCE AND CARE

- **Cleaning the Unit:** Wipe the exterior of the CD player with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Lens:** If playback issues occur, use a specialized CD lens cleaner disc to clean the optical lens. Do not touch the lens directly.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches. Store CDs in their cases when not in use.
- **Storage:** When not in use for extended periods, remove batteries and store the device in a cool, dry place away from direct sunlight.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	No power or low batteries.	Ensure batteries are correctly inserted and charged, or connect to a power adapter.
CD does not play.	CD is dirty, scratched, or inserted incorrectly.	Clean the CD, check for scratches, and re-insert correctly. Ensure the lid is fully closed.
Sound is distorted or skipping.	CD is damaged, dirty, or player is being moved excessively.	Try a different CD. Clean the current CD. Avoid excessive movement during playback.
No sound from headphones.	Headphones not properly connected or volume is too low.	Ensure headphones are fully plugged in. Increase the volume. Test with different headphones.

9. SPECIFICATIONS

- **Model:** CD-190-RED
- **Product Dimensions:** 5.5 x 1 x 5 inches
- **Item Weight:** 9.6 ounces
- **Power Source:** 2 AA batteries (not included) or DC 5V power input (AC/DC adapter not included)
- **Connectivity:** 3.5mm Auxiliary Jack
- **Supported Disc Types:** CD (Number of Discs: 1)
- **Manufacturer:** Summit Electronics, US

 
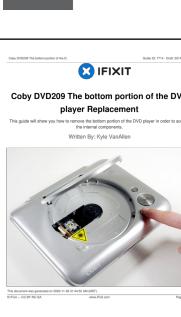
10. WARRANTY AND SUPPORT

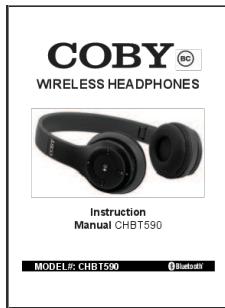
For warranty information or technical support, please refer to the documentation included with your purchase or contact Coby customer service. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: Summit Electronics, US

© 2023 Coby. All rights reserved.

Related Documents - CD-190-RED

 <p>Coby CD201 Wireless Anti-Skip CD Player Reproductor de CD inalámbrico anti-saltos Manual de usuario User Manual</p> <p>   </p>	<p><u>Coby CD201 Wireless Anti-Skip CD Player User Manual</u></p> <p>User manual for the Coby CD201 Wireless Anti-Skip CD Player, covering features, operation, charging, Bluetooth audio-out, FM radio, specifications, safety precautions, and warranty information.</p>
 <p>Coby MP201 USB MP3 Player Reproductor de MP3 USB MP3 Player Reproductor de MP3 USB</p> <p>EN Coby® USB MP3 Player ES Reproductor de MP3 USB Coby® FR Coby® Lecteur MP3 USB</p>	<p><u>Coby MP201 USB MP3 Player Instruction Manual</u></p> <p>Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.</p>
 <p>Coby DVD209 The bottom portion of the DVD player Replacement This guide will show you how to safely remove the bottom portion of the DVD player in order to access the internal components. Written By: Kyle VanDen</p>	<p><u>Coby DVD209 DVD Player Bottom Portion Replacement Guide</u></p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>
 <p>Coby MP-610 MP3 & Video Player with FM Radio QUICK SETUP GUIDE</p>	<p><u>Coby MP-610 MP3 & Video Player Quick Setup Guide</u></p> <p>Quick setup guide for the Coby MP-610 MP3 & Video Player with FM Radio, covering music, video, and photo file transfer using Windows Media Player and conversion software.</p>
 <p>Coby Digital Photo Frame Alarm Clock Teardown I am going to take apart my existing digital photo frame alarm clock just to see what's inside of it and how repairable it is. I am not going to repair it, just to see what's inside. I am not going to do any damage to it. Written By: constantLucky</p>	<p><u>Coby Digital Photo Frame Alarm Clock Teardown Guide</u></p> <p>A detailed teardown guide of the Coby Digital Photo Frame Alarm Clock (Model DP356) by iFixit, exploring its internal components and reparability.</p>



[Coby CHBT590 Wireless Headphones Instruction Manual](#)

Instruction manual for the Coby CHBT590 Wireless Headphones, covering setup, operation, music controls, and warranty information.