



Manuals.plus /

› KRUPS /

› KRUPS Arabica Automatic Espresso Machine User Manual

KRUPS EA817810

KRUPS Arabica Automatic Espresso Machine User Manual

Model: EA817810 | Brand: KRUPS

1. INTRODUCTION

Welcome to the user manual for your new KRUPS Arabica Automatic Espresso Machine. This guide provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your appliance to ensure you enjoy perfect coffee and espresso every time. Designed for convenience and quality, this compact machine brings the authentic taste of coffee directly to your cup.



Figure 1.1: KRUPS Arabica Automatic Espresso Machine with two cups of coffee.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- **Electrical Safety:** Always plug the appliance into a grounded electrical outlet. Do not immerse the power cord,

plug, or appliance in water or other liquids.

- **Hot Surfaces:** The machine produces hot water and steam. Avoid contact with hot surfaces and steam to prevent burns. Use handles and knobs.
- **Children:** This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children.
- **Maintenance:** Unplug the appliance before cleaning and when not in use. Do not operate the appliance with a damaged cord or plug.
- **Intended Use:** Use the appliance only for its intended purpose of preparing coffee and espresso.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your KRUPS Arabica machine:

- **Bean Hopper:** Located at the top, for whole coffee beans.
- **Water Tank:** Removable tank for fresh water, typically located on the side or back.
- **Control Panel:** Features an intuitive LCD screen and buttons for operation.
- **Coffee Spout:** Where brewed coffee dispenses.
- **Steam Nozzle:** For frothing milk for cappuccinos and lattes.
- **Drip Tray:** Collects excess water and coffee drips.
- **Grounds Container:** Collects used coffee grounds.

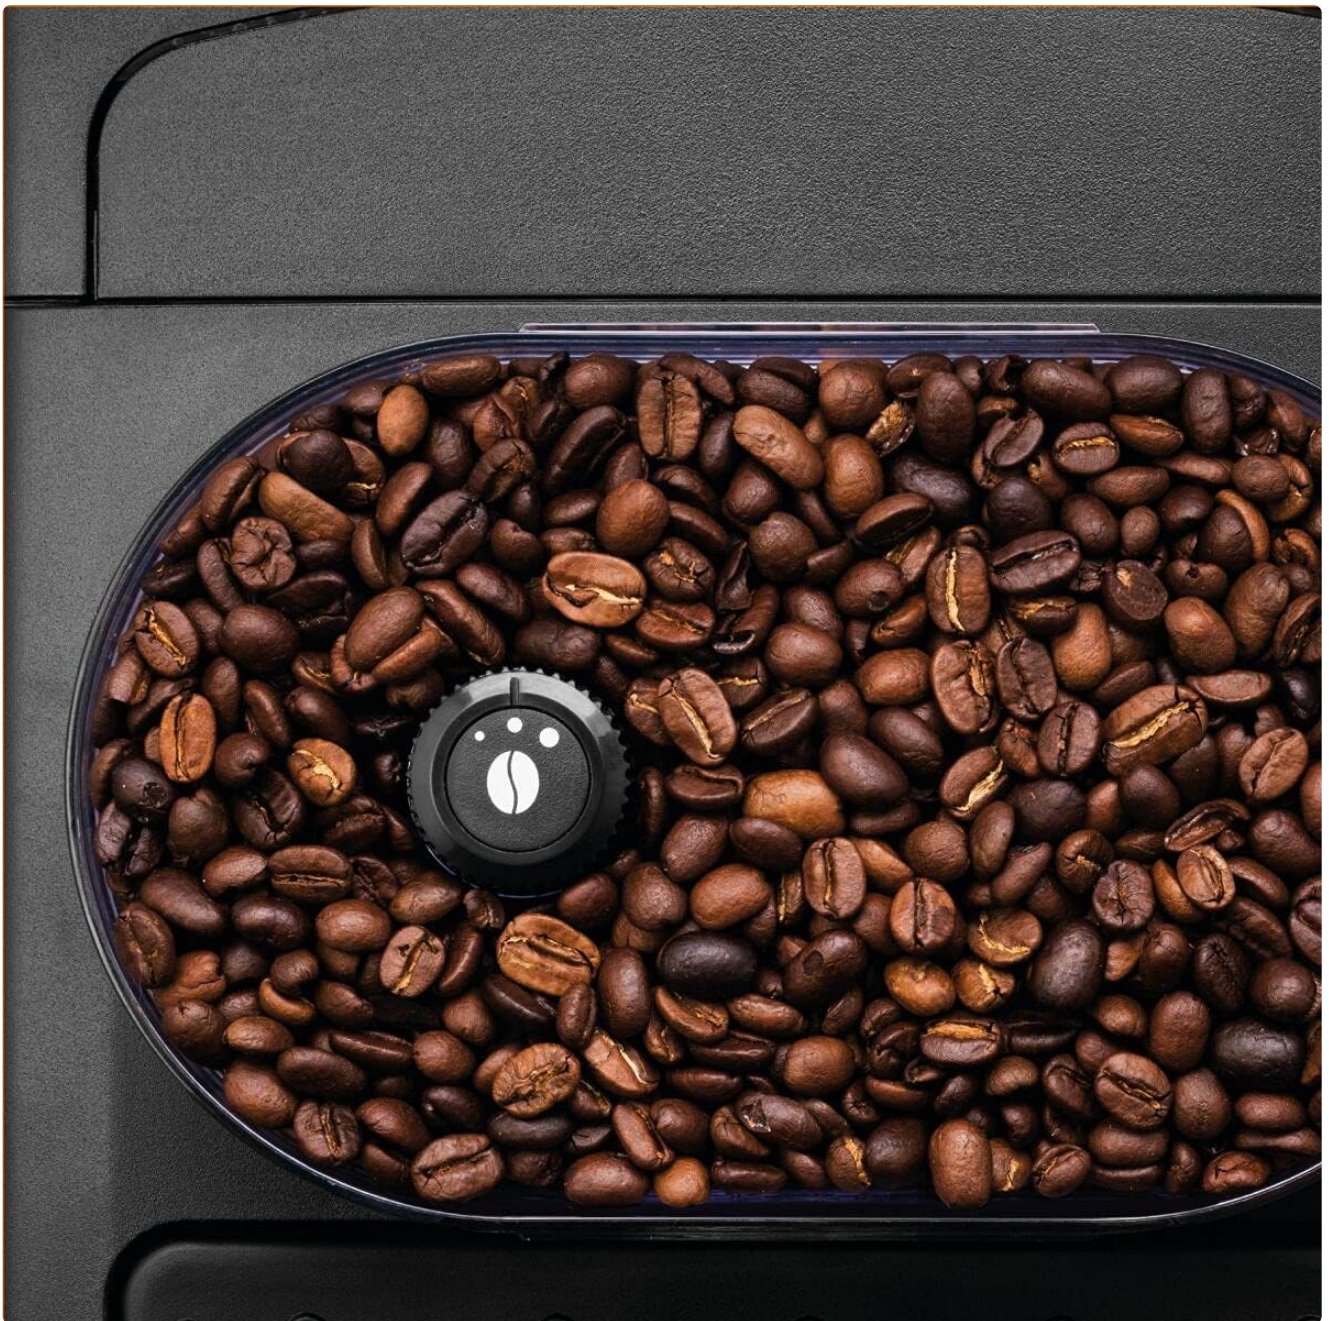


Figure 3.1: Top view of the bean hopper with the grind adjustment dial.



Figure 3.2: A hand pressing a button on the intuitive LCD control panel.

4. INITIAL SETUP

Before first use, follow these steps:

1. **Unpacking:** Remove all packaging materials and ensure all components are present.
2. **Placement:** Place the machine on a stable, flat surface away from heat sources and water. Ensure adequate ventilation.
3. **Clean Components:** Wash the water tank, drip tray, and grounds container with warm water and mild detergent. Rinse thoroughly.
4. **Fill Water Tank:** Fill the water tank with fresh, cold water up to the MAX level.

5. **Fill Bean Hopper:** Add whole coffee beans to the bean hopper. Do not use ground coffee in the bean hopper.
6. **Power On:** Plug the machine into a suitable electrical outlet. The machine will perform an initial rinse cycle.



Figure 4.1: The KRUPS Arabica machine positioned on a kitchen countertop, ready for use.

5. OPERATING INSTRUCTIONS

5.1 Making Espresso and Coffee

1. **Select Drink:** Use the control panel to select your desired coffee type (espresso, long coffee).
2. **Adjust Settings:** You can adjust coffee strength and volume using the controls. The machine offers grinding and temperature control for optimal flavor.
3. **Start Brewing:** Place one or two cups under the coffee spout and press the start button. The machine can brew two cups simultaneously.



Figure 5.1: The KRUPS Arabica machine dispensing coffee into a single glass cup.

5.2 Making Milk-Based Drinks (Cappuccinos, Lattes)

Your machine features an integrated steam nozzle for frothing milk.

1. **Prepare Milk:** Fill a pitcher with cold milk.
2. **Activate Steam:** Select the steam function on the control panel. Wait for the machine to reach the correct temperature.
3. **Froth Milk:** Immerse the steam nozzle into the milk and open the steam valve. Move the pitcher to create desired foam.
4. **Combine:** Pour the frothed milk into your freshly brewed espresso.



Figure 5.2: A hand demonstrating the use of the integrated steam wand.



Figure 5.3: The coffee machine shown alongside a milk frother and a prepared latte.

5.3 Customizing and Saving Drinks

Use the memo mode to save your preferred coffee settings for quick access.

- **Adjust and Hold:** While brewing, adjust the volume or strength to your liking. Hold the selection button to save the setting.
- **Recall:** Next time, simply select your saved preference.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your machine.

- **Self-Cleaning System:** The machine features a complete self-cleaning system that limits limescale formation and reduces maintenance needs. Follow the prompts on the LCD screen.
- **Drip Tray and Grounds Container:** Empty and clean the drip tray and grounds container daily or when prompted by the machine.
- **Water Tank:** Clean the water tank regularly with warm water.
- **Descaling:** The machine will indicate when descaling is required. Use a KRUPS-approved descaling solution and follow the instructions provided by the machine.
- **Steam Nozzle:** After each use, wipe the steam nozzle with a damp cloth to remove any milk residue.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No coffee dispenses	Water tank empty, machine not primed, coffee spout blocked.	Fill water tank, run a rinse cycle, clean coffee spout.
Coffee is too weak/strong	Incorrect grind setting, insufficient coffee dose.	Adjust grind setting (finer for stronger), increase coffee strength setting.
Machine leaks water	Drip tray full, water tank not properly seated, internal issue.	Empty drip tray, re-seat water tank, contact customer support if problem persists.
Error message on LCD	Specific issue indicated by code.	Refer to the machine's display for specific instructions or consult the full manual for error code definitions.

For issues not listed here, please contact KRUPS customer support.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	KRUPS
Model Number	EA817810
Color	Black / Silver
Product Dimensions (L x W x H)	38 x 36.5 x 24.2 cm
Weight	7.2 Kilograms
Water Tank Capacity	1.7 Liters
Bean Hopper Capacity	260g
Power	1450 Watts
Voltage	230 Volts
Material	Plastic
Auto-off Function	Yes
Special Features	Integrated coffee grinder, cup warmer, intuitive LCD screen, memo function, temperature and grinding control.

9. WARRANTY AND SUPPORT

Your KRUPS Arabica Automatic Espresso Machine comes with a **2-year warranty**. Additionally, KRUPS is committed to product reparability for **15 years** at a fair price, ensuring long-term support for your appliance.



Figure 9.1: KRUPS 15-year repairability commitment logo.

For warranty claims, technical support, or to inquire about spare parts, please visit the official KRUPS website or contact their customer service department. Please have your model number (EA817810) and proof of purchase ready.