

[Manuals.plus](#) /

> [SKMEI](#) /

> SKMEI Analogue-Digital Watch Model 1035 User Manual

SKMEI 1035

SKMEI Analogue-Digital Watch Model 1035 User Manual

Model: 1035

PRODUCT OVERVIEW

This manual provides instructions for the SKMEI Analogue-Digital Watch Model 1035. This timepiece combines traditional analog display with modern digital functions, including a chronograph, alarm, and dual time capabilities. It is designed for durability with a silicone band and 50-meter water resistance.



This image displays the SKMEI Analogue-Digital Watch Model 1035. The watch features a black dial with both analog hands and digital displays. Visible elements include the current time, day of the week, and indicators for dual time, alarm, and chronograph functions. The watch has a black silicone band and multiple control buttons on the side for function adjustments.

SETUP AND INITIAL CONFIGURATION

Before using your watch, it is recommended to set the correct time and date.

Setting Analog Time

1. Pull out the crown (the knob on the right side of the watch) to the first position.
2. Rotate the crown to adjust the analog hands to the desired time.
3. Push the crown back in to its original position to start the analog movement.

Setting Digital Time and Date

The watch typically has four buttons: A (top-left), B (bottom-left), C (top-right), D (bottom-right).

1. In normal time display mode, press button **B** repeatedly to cycle through modes: Time, Alarm, Chronograph, Dual Time.
2. To set the digital time, navigate to the Time mode. Press and hold button **A** until the seconds start flashing.
3. Press button **B** to select the item to adjust (seconds, hour, minute, month, date, day of week).
4. Press button **D** to increase the value or button **C** to decrease (if applicable).
5. Once all settings are adjusted, press button **A** to exit the setting mode.

OPERATING MODES

Chronograph (Stopwatch)

1. From normal time mode, press button **B** until "CHRON" or "STW" appears on the digital display.
2. Press button **D** to start the stopwatch.
3. Press button **D** again to pause the stopwatch.
4. Press button **C** to reset the stopwatch to zero while paused.
5. To record split times, press button **C** while the stopwatch is running. Press **C** again to release the split and resume normal timing.

Alarm Function

1. From normal time mode, press button **B** until "ALARM" or "AL" appears.
2. Press and hold button **A** until the alarm hour flashes.
3. Press button **B** to select hour or minute.
4. Press button **D** to adjust the hour or minute.
5. Press button **A** to confirm and exit alarm setting.
6. To turn the alarm ON/OFF, press button **D** while in alarm mode (not setting mode). An alarm icon will appear/disappear.

Dual Time Function

1. From normal time mode, press button **B** until "DUAL TIME" or "DT" appears.
2. Press and hold button **A** until the hour flashes.
3. Press button **B** to select hour or minute.
4. Press button **D** to adjust the hour or minute for the second time zone.
5. Press button **A** to confirm and exit dual time setting.

Backlight

Press button **C** (usually top-right) to activate the backlight for a few seconds, illuminating the digital display for visibility in low light conditions.

MAINTENANCE

- **Cleaning:** Wipe the watch case and band regularly with a soft, dry cloth. For silicone bands, a damp cloth with mild soap can be used, then rinse and dry thoroughly.
- **Water Resistance (WR 50M):** This watch is water resistant up to 50 meters. It is suitable for short periods of recreational swimming, but not for diving or snorkeling. Do not operate buttons underwater.
- **Battery:** The watch uses a button cell battery. When the display becomes dim or functions are erratic, it may be time for a battery replacement. It is recommended to have this done by a professional watch repair service to ensure proper sealing and water resistance.
- **Storage:** Store your watch in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery.
Analog hands are not moving.	Crown is pulled out; low battery.	Push the crown in; replace the battery.
Buttons are unresponsive.	Watch is in a locked mode; internal malfunction.	Try pressing all buttons to exit any special mode. If issue persists, consult a professional.
Incorrect time/date displayed.	Time/date not set correctly.	Refer to "Setup and Initial Configuration" section to reset time and date.

SPECIFICATIONS

Brand: SKMEI

Model: 1035

Movement Type: Quartz

Band Material Type: Silicone

Band Color: Black

Dial Color: Black

Water Resistance: 50 Meters (WR 50M)

Item Weight: 70 Grams

WARRANTY AND SUPPORT

This SKMEI watch comes with a manufacturer's warranty. For specific details regarding the warranty period and coverage, please refer to the warranty card included with your purchase or contact SKMEI customer support directly. For technical assistance or further inquiries, please visit the official SKMEI website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.
